the **t.akustik**

Vocal Booth portable vocal and singing booth





assembly instructions

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

24.01.2019, ID: 444592 (V1)

Table of contents

1	Safety instructions	4
2	Scope of delivery	. 5
3	Installation	6
4	Technical specifications	10
5	Protecting the environment	11



Vocal Booth

1 Safety instructions

A DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.



Risk of injury to the hands

When assembling and screwing the individual parts, pay attention to sharp edges on tools, screws and components.



2 Scope of delivery

ĵ

Before you assemble your portable vocal and singing booth, make sure the contents of package is complete according to the following list.

Carton 1

- 4 × vertical frame bar S1...S4
- 1 × angle bar T1
- 5 × horizontal frame bar P2
- 3 × horizontal frame bar P1
- 40 × thumbscrew SC1

Carton 2

- 4 × vertical frame bar S5...S8
- 1 × angle bar T2
- 4 × horizontal frame bar P2
- 3 × horizontal frame bar P1
- 1 × horizontal frame bar P3

Carton 3

- 8 × foam sheet A
- 1 × foam cover sheet 1
- 1 × foam cover sheet 2
- 1 × plexiglass window
- 1 × foam sheet B
- 1 × curtain
- 1 × LED light
- 10 × sticker (already attached to the bars)




Vocal Booth

3 Installation

Frame mounting


ĵ

Place all components on a suitable mounting surface for mounting. Use a soft padding to prevent damages to the surfaces. When aligning the poles, pay attention to the positions of the attached stickers.

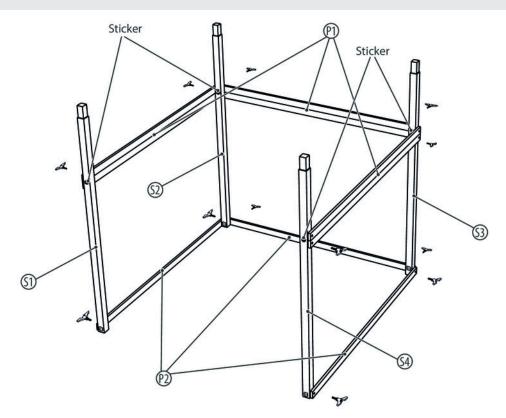


- **1.** Connect S2 and S3 at the top to a P1 and lightly tighten the two thumbscrews.
- **2.** Connect S3 and S4 at the top to a P1 and lightly tighten the two thumbscrews.
- **3.** Connect S1, S2, S3 and S4 at the bottom to the P2s and lightly tighten each two thumbscrews.



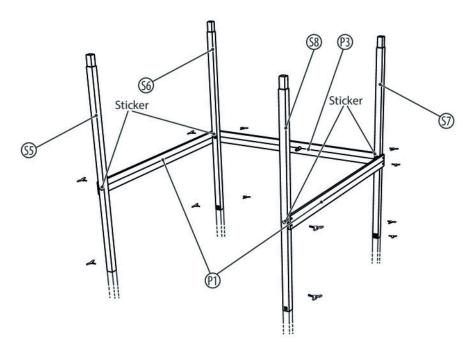

- **4.** Connect S5 and S6 at the top to a P1 and lightly tighten the two thumbscrews.
- 5. Connect S6 and S7 at the top to the P3 and lightly tighten the two thumbscrews.
- **6.** Connect S7 and S8 at the top to a P1 and lightly tighten the two thumbscrews.
- 7. Now plug this part onto the first by plugging S5 on S1, S6 on S2, etc. and fixing these connections by lightly tightening the thumbscrews.

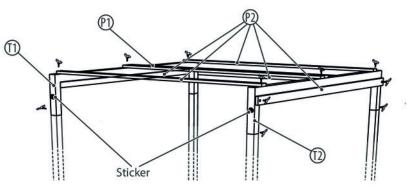


- 8. Attach T1 and T2 onto the previously mounted frame as shown.
- 9. Connect T1 and T2 to P2 on the sides, rear and top front and back.
- **10.** Connect T1 and T2 at the top centre to a P1.
- **11.** Lightly tighten the thumbscrew.
- **12.** Now align the structure straight and stable, then tighten the thumbscrews.



Vocal Booth

Attaching foam sheets and plexiglass window

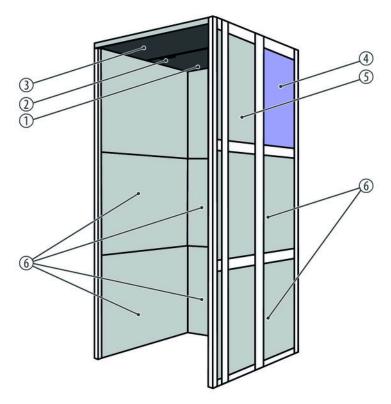

1	Foam cover sheet 2
2	LED light
3	Foam cover sheet 1
4	Plexiglass window
5	Foam sheet B
6	Foam sheets A


1. Push the foam sheets into the frame structure.

2. Also push the plexiglass window into the frame structure.

3. Attach the LED light to the intended position, e.g. with magnets (not included).



Mounting the curtain

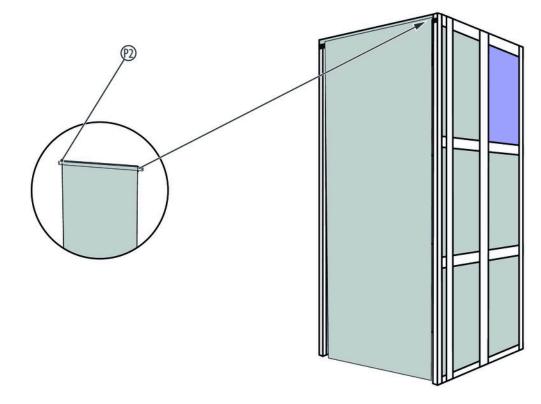

- **1.** Slide the curtain onto a P2.
- **2.** Attach the P2 to the curtain using two thumbscrews on the frame structure.



4 Technical specifications

Colour	Black-anthracite
Curtain colour	black
Material	Stainless steel
Dimensions (W \times H \times D)	Outside: 1000 mm × 2100 mm × 1000 mm
	Inside: 930 mm \times 2070 mm \times 930 mm
Weight	In total: approx. 55 kg
	Carton 1 and 2: each 20 kg
	Carton 3: 15 kg
Frame bar dimensions (L \times W \times H)	Frame bars \$1\$8: 1000 mm × 30 mm × 30 mm
	Frame bars P1 and P3: 1000 mm \times 60 mm \times 30 mm
	Frame bars P2: 990 mm \times 30 mm \times 10 mm
Angle bars dimensions (L \times W)	Angle bars T1 and T2: 990 mm \times 160 mm, profile: 30 mm \times 30 mm
Foam sheet dimensions (L \times W)	Foam sheets A: 930 mm \times 690 mm
	Foam sheet B: 930 mm $ imes$ 515 mm
	Foam cover sheet 1: 930 mm × 495 mm
	Foam cover sheet 2: 930 mm $ imes$ 495 mm (with recess for LED light)
Plexiglass window dimension (L \times W)	690 mm × 415 mm
LED light dimension (L \times W)	200 mm × 30 mm
Curtain dimension (L \times W)	2050 mm × 1000 mm



5 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



Notes



Vocal Booth



thomann MUSIC IS OUR PASSION Notes



 $Musikhaus \ Thomann \cdot Hans - Thomann - Straße \ 1 \cdot 96138 \ Burgebrach \cdot Germany \cdot www.thomann.de$