

# ***DRAWMER***

## ***DS201***

### **DUAL NOISE GATE**

### **OPERATOR'S MANUAL**

#### **CONTENTS**

SAFETY CONSIDERATION	page 3
INSTALLATION	page 3
INTRODUCTION	page 4
CONTROL DESCRIPTIONS	page 6
OPERATION	page 8
IF A FAULT DEVELOPS	page 12
CONTACTING DRAWMER	page 12
TECHNICAL SPECIFICATION	page 13
BLOCK DIAGRAM	page 14

## **COPYRIGHT**

This manual is copyrighted © 2008 by Drawmer Electronics, Ltd. With all rights reserved. Under copyright laws, this manual may not be duplicated in whole or in part without the written consent of Drawmer.

## **ONE YEAR LIMITED WARRANTY**

Drawmer Electronics Ltd., warrants this product to conform substantially to the specifications of this manual for a period of one year from the original date of purchase when used in accordance with the specifications detailed in this manual. In the case of a valid warranty claim, your sole and exclusive remedy and Drawmer's entire liability under any theory of liability will be to, at Drawmer's discretion, repair or replace the product without charge, or, if not possible, to refund the purchase price to you. This warranty is not transferable. It applies only to the original purchaser of the product.

For warranty service please call your local Drawmer dealer. Alternatively call Drawmer Electronics Ltd. at +44 (0)1709 527574. Then ship the defective product, with transportation and insurance charges pre-paid, to Drawmer Electronics Ltd., Coleman Street, Parkgate, Rotherham, S62 6EL UK. Write the RA number in large letters in a prominent position on the shipping box. Enclose your name, address, telephone number, copy of the original sales invoice and a detailed description of the problem. Drawmer will not accept responsibility for loss or damage during transit.

This warranty is void if the product has been damaged by misuse, modification or unauthorised repair.

THIS WARRANTY IS IN LIEU OF ALL WARRANTIES, WHETHER ORAL OR WRITTEN, EXPRESSED, IMPLIED OR STATUTORY. DRAWMER MAKES NO OTHER WARRANTY EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE REPAIR OR REPLACEMENT AS SPECIFIED HEREIN.

IN NO EVENT WILL DRAWMER ELECTRONICS LTD. BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY DEFECT IN THE PRODUCT, INCLUDING LOST PROFITS, DAMAGE TO PROPERTY, AND, TO THE EXTENT PERMITTED BY LAW, DAMAGE FOR PERSONAL INJURY, EVEN IF DRAWMER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states and specific countries do not allow the exclusion of implied warranties or limitations on how long an implied warranty may last, so the above limitations may not apply to you. This warranty gives you specific legal rights. You may have additional rights that vary from state to state, and country to country.

In the interests of product development, Drawmer reserve the right to modify or improve specifications of this product at any time, without prior notice.

# SAFETY CONSIDERATIONS



## CAUTION - MAINS FUSE

TO REDUCE THE RISK OF FIRE REPLACE THE MAINS FUSE ONLY WITH THE SAME TYPE, WHICH MUST BE A CLASS 3, 230 VOLT, TIME DELAY TYPE, RATED AT 32mA WHERE THE MAINS INPUT VOLTAGE SWITCH IS SET TO 230 VOLTS AC. AND 63mA WHERE THE MAINS INPUT VOLTAGE IS 115 VOLTS AC.

**ALL FUSES MUST COMPLY WITH IEC 127-2.**

THE FUSE BODY SIZE IS 20mm x 5mm.

## CAUTION - MAINS CABLE

**DO NOT** ATTEMPT TO CHANGE OR TAMPER WITH THE SUPPLIED MAINS CABLE.

## CAUTION - SERVICING

**DO NOT** PERFORM ANY SERVICING. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL.

## WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.



---

## INSTALLATION

This product is designed for standard 19" rack mounting and occupies 1U of rack space. Use four M6 pan head screws to secure the unit into the rack. Fibre or plastic washers may be used to prevent the front panel becoming marked by the mounting bolts.

- Care should be taken in the choice of positioning. The unit should not be mounted where other equipment obstructs the normal air flow. The unit should not be situated near any heat source, such as a radiator, stove or a high power amplifier that would generate heat.
- The DS201 should not be operated near any water or in a location where moisture might be present.

# INTRODUCTION

The Drawmer DS201 is a sophisticated dual channel noise gate, which may be used as two independent channels or linked for true stereo operation. It incorporates a number of impressive features, many pioneered by Drawmer, which are invaluable to the sound engineer and not found on conventional noise gates:

- Variable high-pass and low-pass filters for 'frequency conscious' gating;
- Comprehensive envelope control, attack, hold, decay and range;
- Extremely low-noise and low-distortion circuitry;
- Ultra-fast response time;
- Comprehensive side-chain filtering;
- 'Key listen' facility;
- 'Traffic light' display giving clear indication of gate status;
- Balanced inputs and outputs.

These features and the DS201's user-friendliness have helped it to become the worldwide 'industry standard' noise gate.

---

## AUDIO CONNECTIONS

All input and output connectors are balanced XLRs, with the wiring convention being: pin 2 hot, pin 3 cold and pin 1 ground. For unbalanced operation, it is important to short pin 3 of the XLR connector to ground (pin 1) at both input and output.

Key inputs are made via ¼" mono jack connectors. If the Key jack sockets are permanently wired to a patch bay, it is important that the patch bay sockets are fully normalised to prevent random unwanted triggering.

If earth loop problems are encountered, **never** disconnect the mains earth but instead, try disconnecting the output signal screen at one end of the cables connecting the DS201 to the patchbay, we suggest inside the XLR connector itself. If such measures are necessary, balanced operation is recommended.



## POWER CONNECTION

The unit will have been supplied with a power cable suitable for domestic power outlets in your country. For your own safety it is important that you use this cable. The unit should **always** be connected to the mains supply earth using this cable, and no other.









If for some reason the unit is to be used at a mains input operating voltage which is different to that as supplied, the following procedure must be carried out.

- 1: Disconnect the unit from the mains.
- 2: Remove the two self-tapping screws that hold the voltage selection switch cover-plate onto the rear panel.
- 3: Remove the cover plate and slide the switch fully to its opposite end.
- 4: Rotate the cover plate one half turn, (180°) and refit the two screws.
- 5: Replace with a correctly rated fuse for the selected operation voltage.
- 6: Re-connect to mains power source.

**Never disconnect the earth from the mains supply**



## CONTROL DESCRIPTION

- L.F.**  25Hz - 4kHz  
The Low Frequency filter works by severely attenuating frequencies below the cut-off frequency selected.
- H.F.**  250Hz - 35kHz,  
The High Frequency filter attenuates frequencies above the selected cut-off value.  
In other words, when both filters are set, it is the range between the two settings that is allowed to pass.
- Threshold**  -50dBfs - infinite  
Sets the level at which the gate opens.
- Attack** 10µs - 1 Second  
This control determines how quickly the gate opens. The fastest Attack time ensures that the gate does not clip the leading edge of extremely fast transients.  
  
*Note: See section on using Attack under 'OPERATION'*
- Hold**  2ms - 2 Second  
Determines the amount of time the gate is held open after the signal falls below the Threshold.
- Decay**  2ms - 4 Second  
Determines the rate at which the gate closes, once the signal has fallen below the Threshold and the Hold time has expired.
- Range**  0dB - 90dB  
Sets the amount of attenuation applied to the signal when the gate is closed. This enables the gate to remove unwanted signals entirely, or simply to attenuate signals which are too loud.  
  
*Note: This control is active on both channels, even in stereo linked operation*
- Ext/Int**  In the **Int** position, this switch causes the gate to respond to the dynamics of the signal being processed.  
In the **Ext** position, an external audio signal fed to the key input is used to control the gate, making it possible to gate one sound using another, independent signal.
- Gate/Duck**  Switches from normal Gating to Ducking, for applications such as voice-over or the removal of 'clicks' and 'pops'.  
  
*Note: See later sections on Ducking under 'OPERATION' and 'APPLICATIONS.'*

**Key Listen/  
Gate/Bypass**

 


When this switch is set to **Key Listen**, the effect of the key filters on the programme material is heard at the output. In normal operation, the **Gate** position is selected; the filters only affect the way the DS201 responds to the incoming programme material - they do not have any direct effect on the output signal. The **Bypass** position routes the input signal to the output with no processing.

*Note: It is possible to leave the switch in the Key Listen position in order to use the DS201 simply as a filter rather than a gate.*

**Display**

The famous Drawmer “traffic light” display shows gate status.



Gate Closed

Hold Time

Gate Open

**Stereo Link**





This switch links both channels for two tracking channel operation, with channel one being master. The trigger source selected for channel one will actuate both channels' envelopes when this mode is selected.

*Note: See section on Linking under 'APPLICATIONS'.*



# OPERATION

Use the following diagrams as a guide when operating the DS201.  
**Gating a Kick Drum**

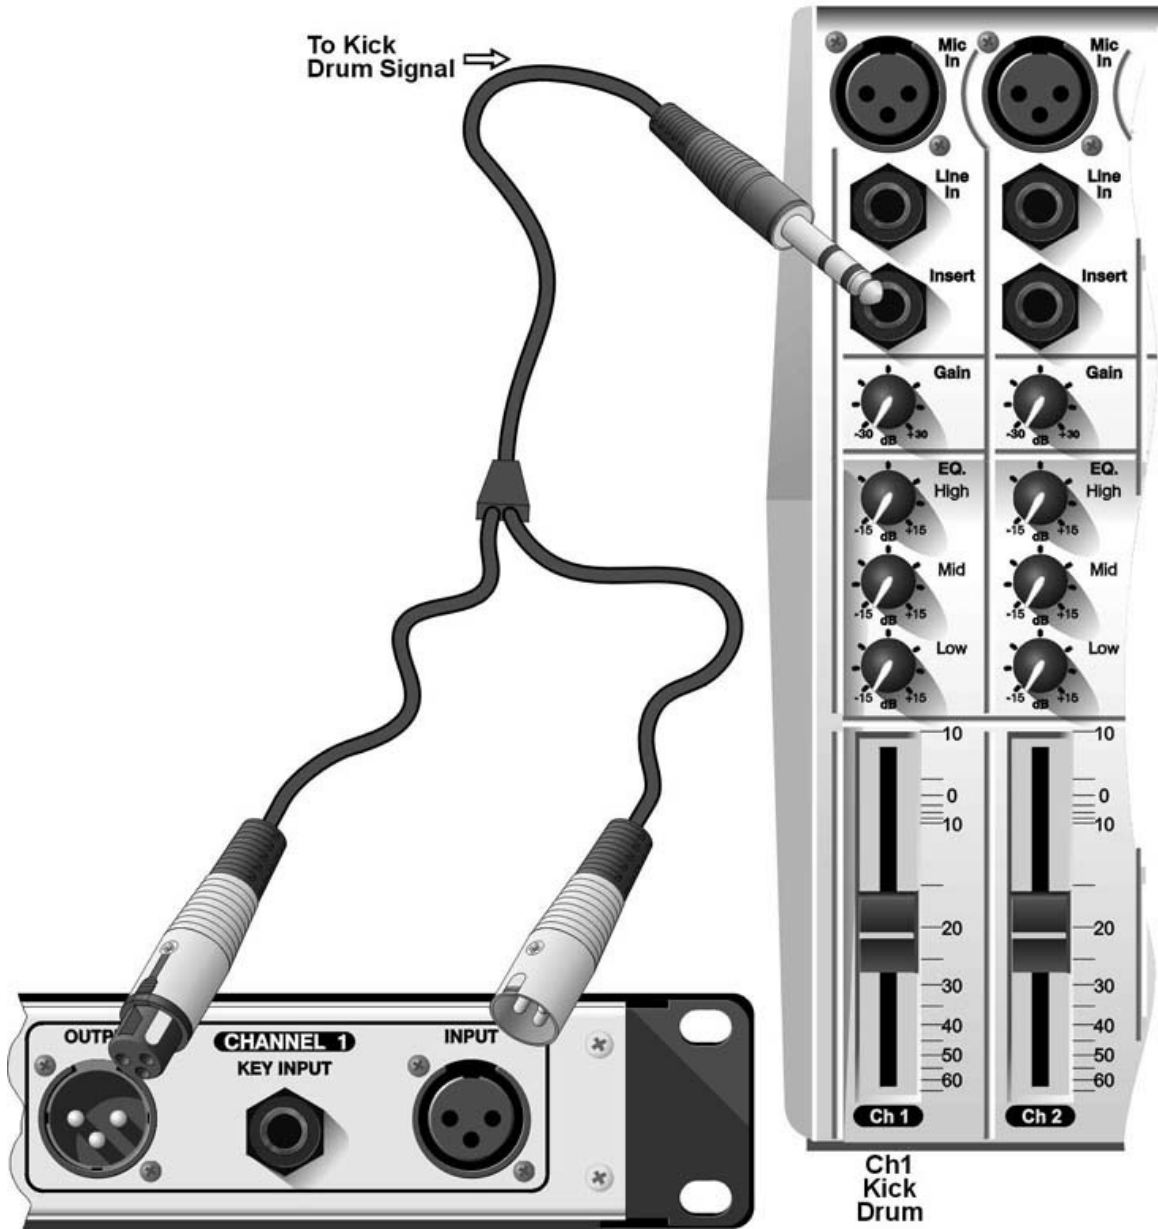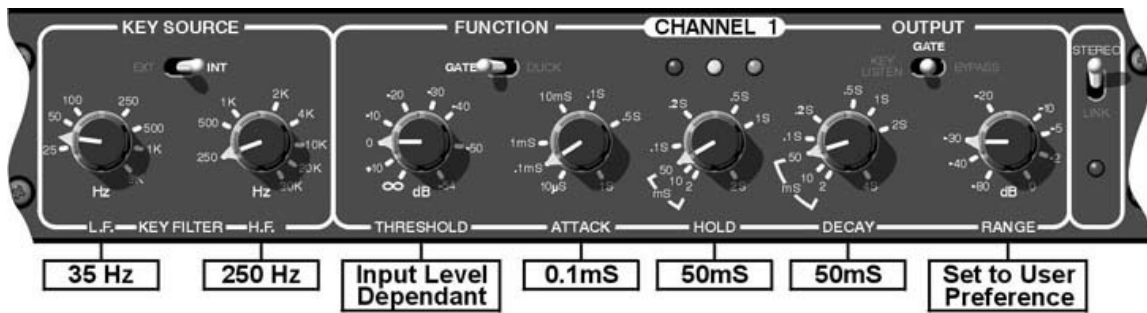




## Gating a Snare Drum

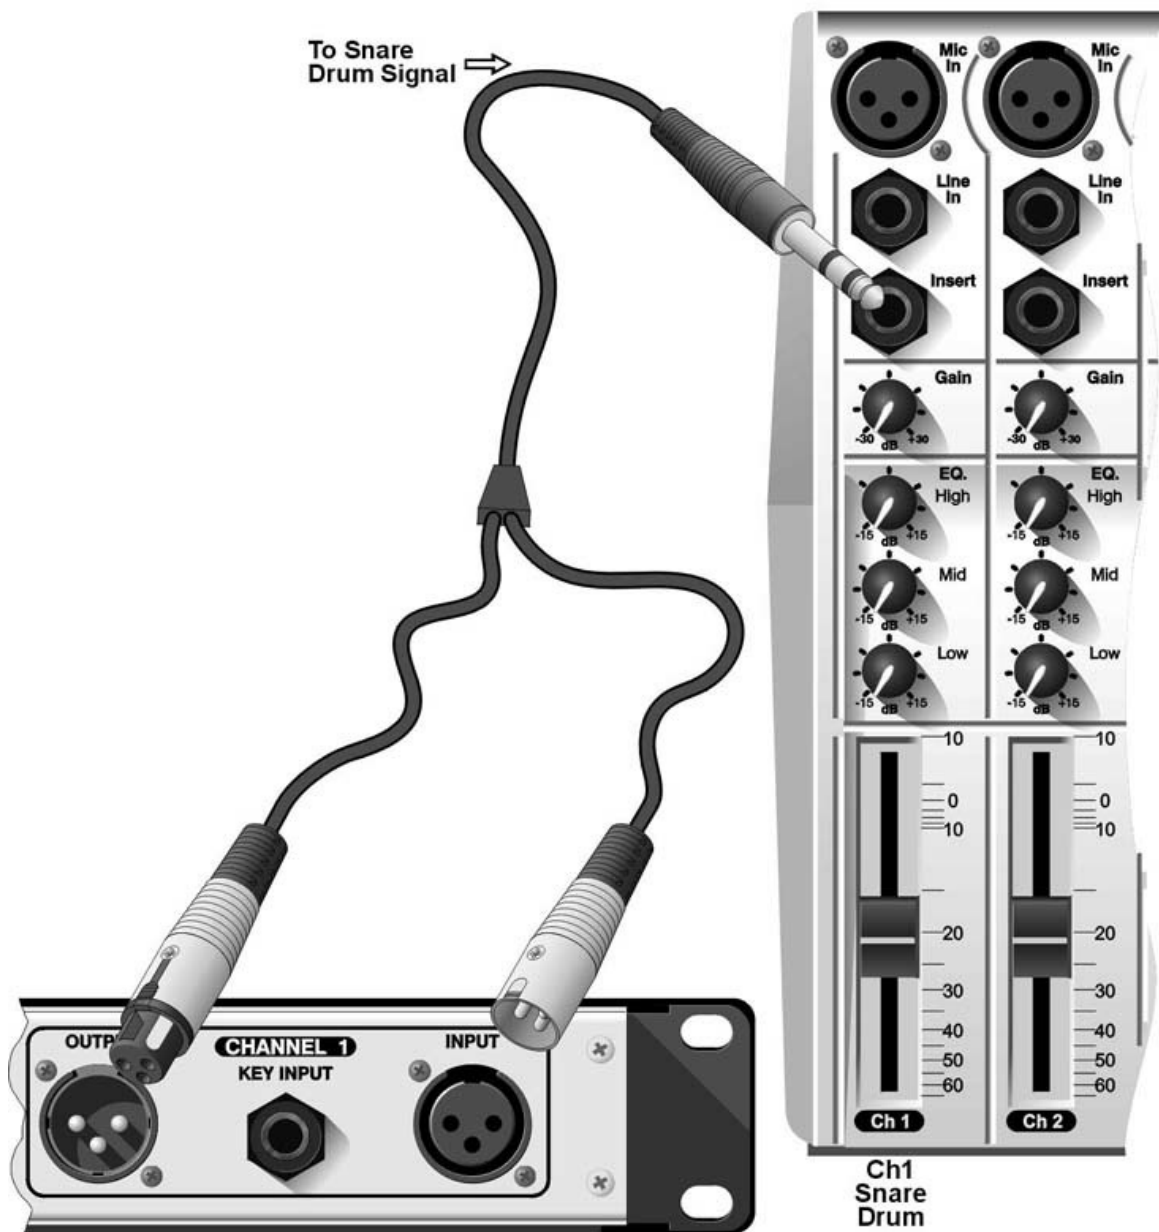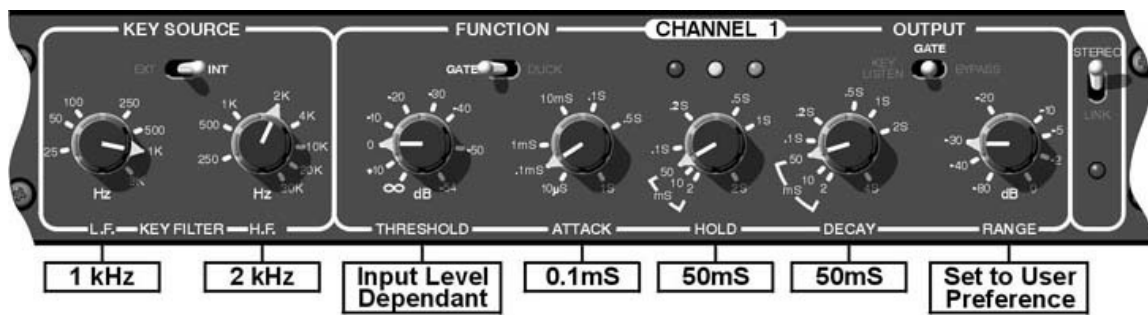

# Triggering a Bass Guitar from a Kick Drum

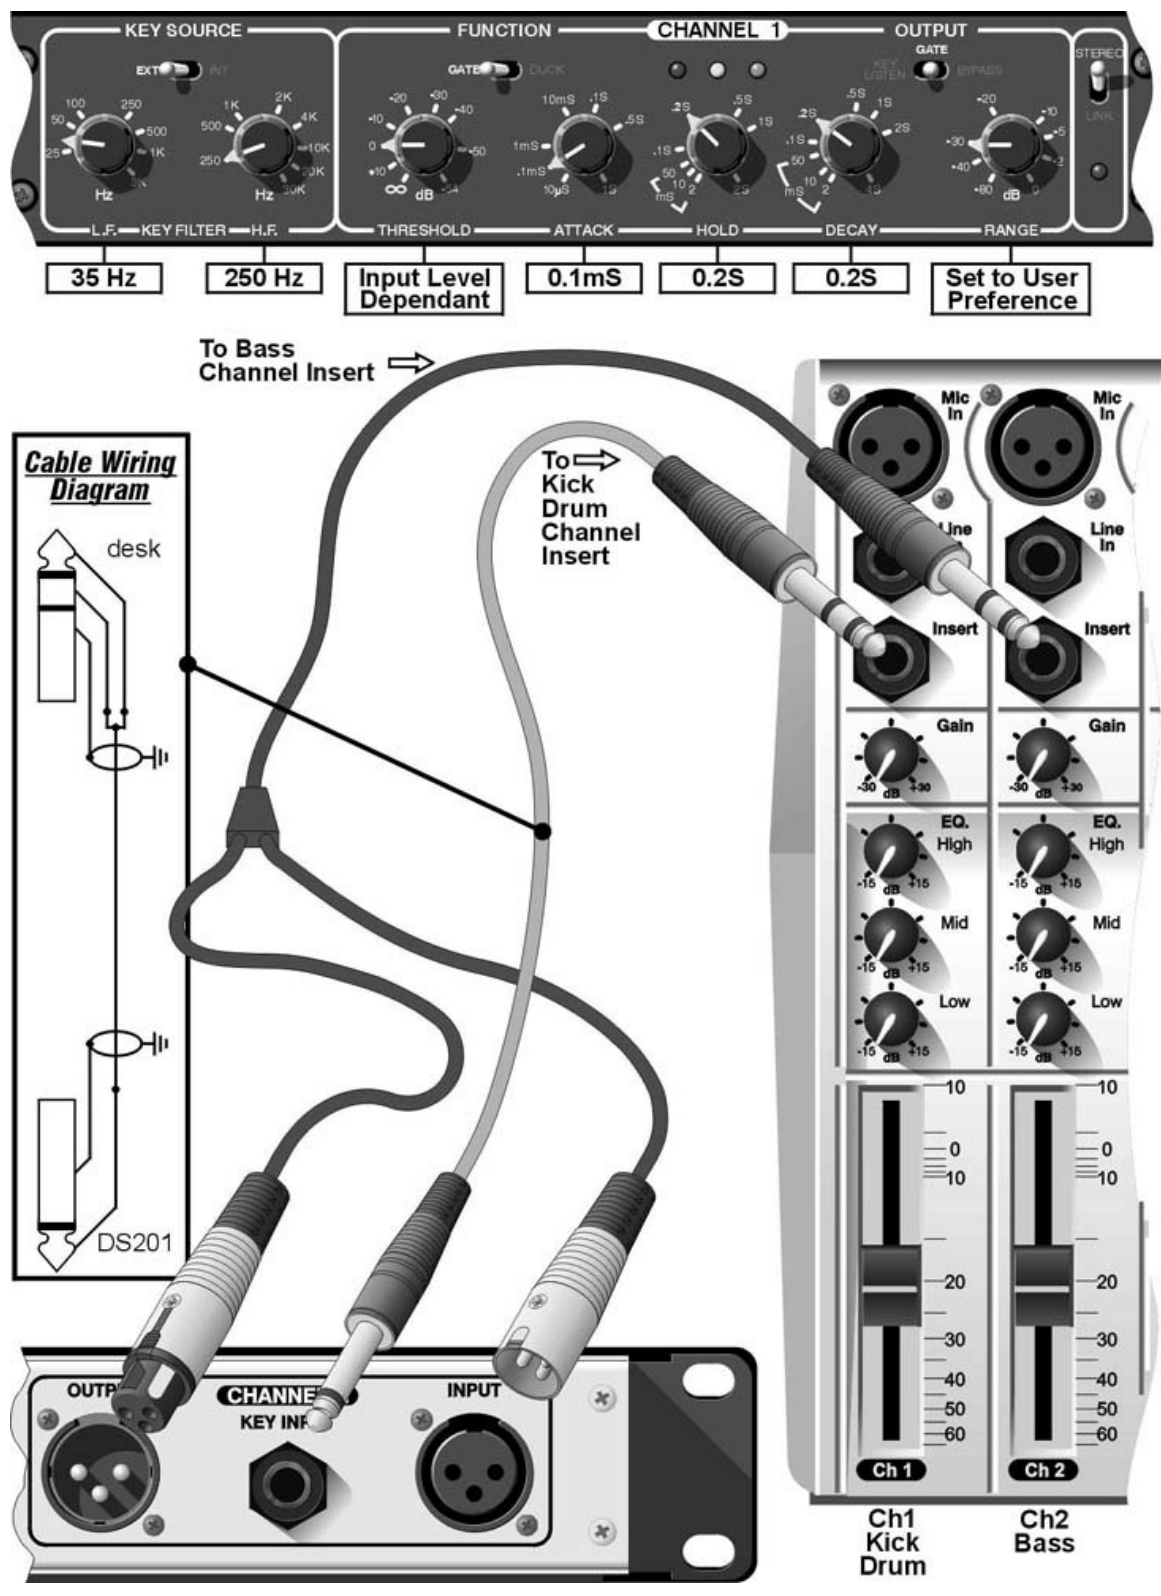



## **IF A FAULT DEVELOPS**

For warranty service please call Drawmer Electronics Ltd. Or their nearest authorised service facility, giving full details of the difficulty. On receipt of this information, service or shipping instructions will be forwarded to you. No equipment should be returned under the warranty without prior consent from Drawmer or their authorised representative.

For service claims under the warranty agreement a service Returns Authorisation (RA) number will be given. Write this RA number in large letters in a prominent position on the shipping box. Enclose your name, address, telephone number, copy of the original sales invoice and a detailed description of the problem.

Authorised returns should be prepaid and must be insured. All Drawmer products are packaged in specially designed containers for protection. If the unit is to be returned, the original container must be used. If this container is not available, then the equipment should be packaged in substantial shock-proof material, capable of withstanding the handling for the transit.

---

## **CONTACTING DRAWMER**

Drawmer Electronics Ltd., will be pleased to answer all application questions to enhance your usage of this equipment. Please address correspondence to:

Drawmer (Technical Help line) : Coleman St.: Parkgate : Rotherham : S62 6EL : UK

or, E-mail us on : [tech@drawmer.com](mailto:tech@drawmer.com)

Drawmer dealers, Authorised service departments and other contact information can be obtained from our web pages on <http://www.drawmer.com>

---

## TECHNICAL SPECIFICATIONS

<b>INPUT IMPEDANCE</b>	20K $\Omega$
<b>MAXIMUM INPUT LEVEL</b>	+17dB
<b>OUTPUT IMPEDANCE</b>	50 $\Omega$ (bal) 100 $\Omega$ (unbal)
<b>MAXIMUM OUTPUT LEVEL</b>	+17dB
<b>BANDWIDTH</b>	23Hz to 31KHz -1dB

### NOISE AT UNITY GAIN ref 0dB, GATE open

	Wideband	22Hz - 22KHz	CCIR ARM	IEC A	Q-Pk CCIR
AV	-90dB	-95dB	-95dB	-97dB	-84dB
RMS	-88dB	-93dB	-93dB	-95dB	

### DISTORTION

	100Hz	1KHz	10KHz
0dB input	< 0.025%	< 0.025%	<0.025%

<b>POWER REQUIREMENTS</b>	93-125Volt or 185-250Volt at 50-60Hz, 9 Watts
<b>FUSE RATING</b>	32mA for 230Volt, 63mA for 115Volt
<b>FUSE TYPE</b>	20mm x 5mm, Class 3 Time delay, 250 Volt working. CONFORMING TO IEC127-2
<b>CASE SIZE</b>	482mm (w) x 44mm (h) x 200mm (d)
<b>WEIGHT (incl packaging)</b>	3.4 Kgs

---

# 202 Block Diagram

## BLOCK DIAGRAM

