

# ***Millenium***

BLS-2700

speaker / light stand

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

30.10.2019, ID: 168997

## Table of contents

<b>1</b>	<b>General information.....</b>	<b>4</b>
<b>2</b>	<b>Safety notes.....</b>	<b>6</b>
<b>3</b>	<b>Features.....</b>	<b>9</b>
<b>4</b>	<b>Operating.....</b>	<b>10</b>
<b>5</b>	<b>Technical specifications.....</b>	<b>15</b>
<b>6</b>	<b>Protecting the environment.....</b>	<b>17</b>


# 1 General information

This manual contains important instructions for the safe operation of the product. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the product. If you sell the product to another user, be sure that they also receive this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change. Please refer to the latest version of the user manual which is ready for download under [www.thomann.de](http://www.thomann.de).

## **Symbols and signal words**

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

## 2 Safety notes

### **Intended use**

This speaker / light stand is used for stable fixing and height-adjustable installation of loud-speaker cabinets and lights. Use the product only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This product may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this product only if they are supervised or instructed by a person who is responsible for their safety.

**Safety****DANGER!****Danger for children**

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.

**CAUTION!****Danger of tipping when transported under load**

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



**CAUTION!**

**Danger of tipping on unsuitable surfaces**

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



**CAUTION!**

**Danger of tipping due to overload**

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.



### 3 Features

Features of the speaker / light stand:

- Can be extended up to a height of 3.10 m (122 in.)
- Centric load up to 50 kg (110 lbs)
- Extension tube made of hardened steel
- Legs and cross braces made of aluminium
- M10 female thread at the top end
- TÜV/GS approved
- Transport length in folded condition: 1.76 m (69.3 in.)

## 4 Operating

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



### **CAUTION!**

#### **Danger of tipping when transported under load**

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



**CAUTION!**

**Danger of tipping on unsuitable surfaces**

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



**CAUTION!**

**Danger of tipping due to overload**

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.



### **NOTICE!**

#### **Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.


In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.



#### ***Comply with regulations***

*When installing and operating, make sure to follow the standards and regulations that apply in your country.*

## Setting up

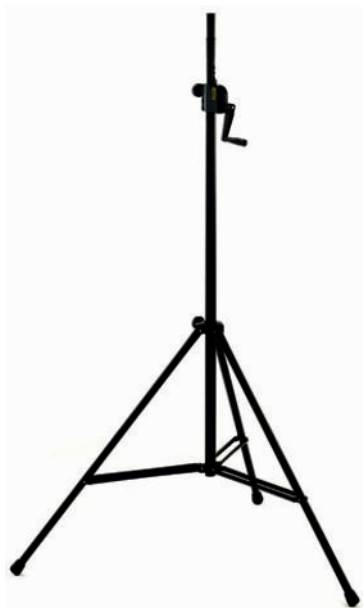

1. ▶ Unfold the feet of the stand until the cross braces are in a horizontal position.
2. ▶ Fix this position with the safety screw on the slider to which the three feet are attached.
3. ▶ Lift the speaker box / spotlight onto the extension tube. The weight of the speaker box / lights to be installed must not exceed the maximum centric load of 50 kg.
4. ▶ Fold out the hand crank.
5. ▶ To adjust the height, untighten the locking screw at the crank case.
6. ▶ Press and hold the yellow security button at the crank case while adjusting the desired height with the hand crank.
7. ▶ Release the yellow security button at the crank case, fix the position of the extension tube with the locking screw at the crank case and fold the hand crank back in.

### Dismounting

1. ➤ Fold out the hand crank.
2. ➤ Untighten the locking screw at the crank case.
3. ➤ Press and hold the yellow security button at the crank case while fully lowering the extension tube.
4. ➤ Release the yellow security button at the crank case, fix the position of the extension tube with the locking screw at the crank case and fold the hand crank back in.
5. ➤ Lift off the speaker box / spotlight from the extension tube.
6. ➤ Loosen the safety screw on the slider to which the three feet are attached. .
7. ➤ Fold up the feet of the stand.

## 5 Technical specifications

Height, max.	3.10 m
Total width	1.40 m
Adjustable stand height	1.94 m ... 3.10 m
Stand footprint	0.85 m <sup>2</sup>
Truss length	470 mm
Stand tube diameter	Ø 36 mm
Truss tube diameter	Ø 2 mm
Mounting options	M10 female thread at the top end / 35 mm flange
Max. load capacity (for centric load)	50 kg
Transport dimensions (W × H × D)	140 mm × 1760 mm × 190 mm

BLS-2700

Weight	11.6 kg
Colour	Black

### Further information

Stand type	Crank stand
Flange type	35 mm at the top end / M10 female thread
Incl. truss beam	No
Crank	Yes



## 6 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.





Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · [www.thomann.de](http://www.thomann.de)