


STAIRVILLE

WLS-DMX Outdoor
Receiver IP65
receiver

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

06.04.2018, ID: 426813 (V2)

Table of contents

1	General notes	4
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	7
2	Safety instructions	9
3	Features	13
4	Installation	15
5	Starting up	16
6	Connections and controls	20
7	Operating	22
8	Technical specifications	23
9	Plug and connection assignments	24
10	Troubleshooting	25
11	Protecting the environment	28

1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

Instructions



The individual steps of an instruction are numbered consecutively. The result of a step is indented and highlighted by an arrow.

Example:

1. ▶ Switch on the device.
2. ▶ Press *[Auto]*.
 - ⇒ Automatic operation is started.
3. ▶ Switch off the device.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended for the wireless transmission of DMX signals in lighting systems. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

3 Features

Special features of the device:

- Professional W-DMX receiver
- Wireless signal transmission in frequency range 2,4 GHz (ISM band) without interference
- Toll-free operation in the EU and NAFTA countries, no permit required
- Operation via button on the unit
- LED for monitoring the operating status
- Lockable input socket (Power Twist IP65) for mains power supply
- Suitable power cable included
- Robust aluminium die-cast housing with various mounting options
- Outdoor operation is possible due to protection class IP65
- Pressure equalisation element (prevents the development of condensation inside the device)

As a suitable transmission unit we recommend **item no. 366876**.

Information about protection class IP65

Equipment with protection class IP65 are dust-tight and completely protected against contact (first code number). They are also protected against splash water from any angle (second code digit). That is why this equipment can also be used outdoors. Event technology equipment is generally only designed for temporary use however (event lighting) and not for permanent use outdoors.

The specified protection class does not make a statement about the weather resistance of the equipment (resistance to changing ambient conditions as well as against the effects of sunlight and UV rays).

The seals and screw connections of the equipment must be checked regularly to ensure a fault-free operation. In cases of doubt, consult a specialist workshop in due time.

4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.


Never connect the DMX input or output to audio devices such as mixers or amplifiers.

5 Starting up

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.


Point-to-point connection

Connect a compatible transmitter to the DMX output of your DMX controller and a receiver to the DMX input of the first DMX device in the DMX chain that is to be controlled. In this point-to-point configuration the DMX signal from one transmitter is sent to one receiver.

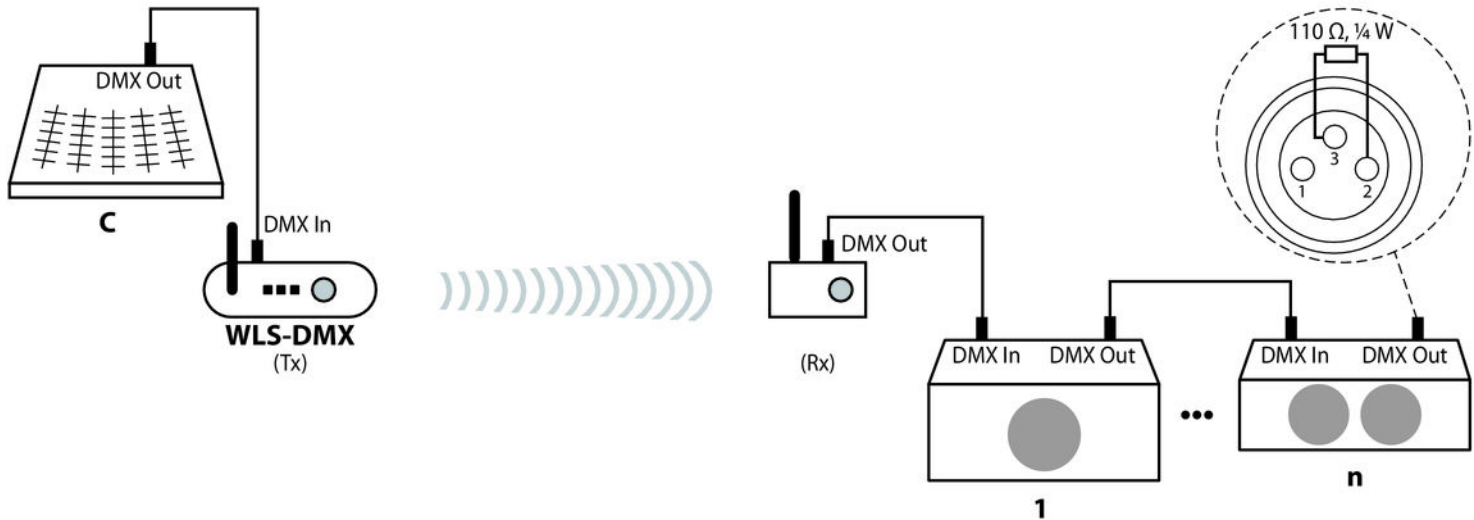

Point-to-multipoint connection

Connect a compatible transmitter to the DMX output of your DMX controller and a receiver to the DMX input of each first DMX device in the DMX chains that are to be controlled. In this point-to-multipoint configuration the DMX signal from one transmitter is sent to several receivers. Transmitter and all receivers must be set to the same frequency range.

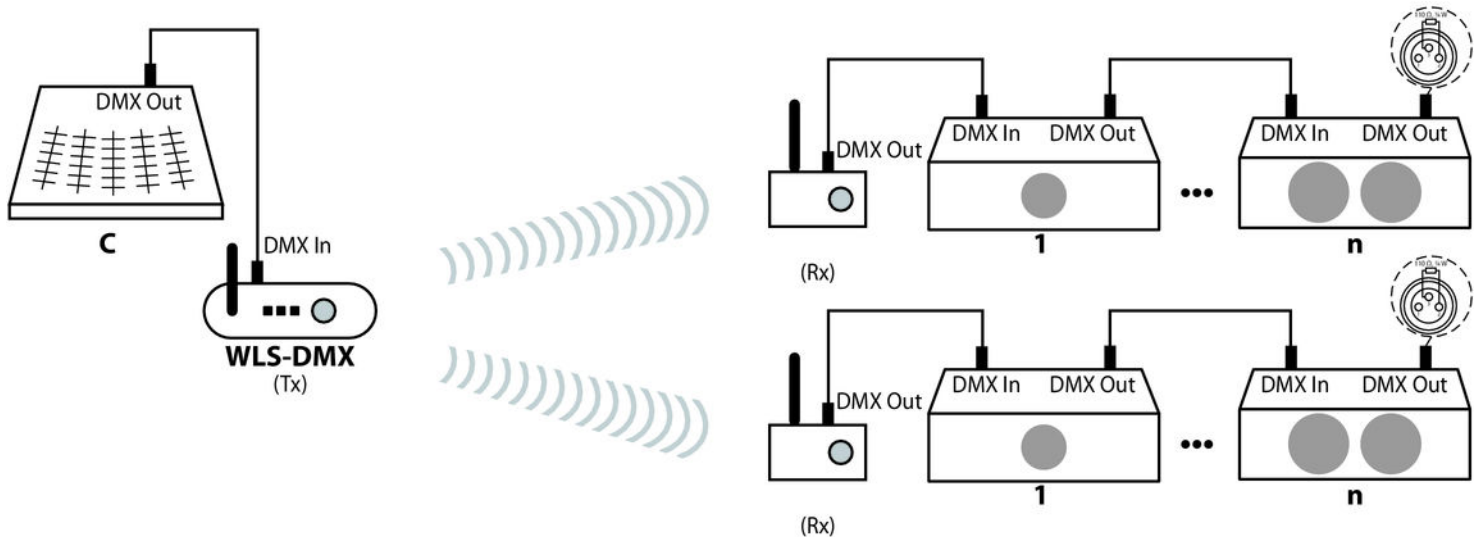


DMX chain

Connect the output of the first DMX device to the input of the second one and so on, to form a series connection. Make sure that the output of the last DMX device in the chain is terminated by a resistor (110 Ω , ¼ W).

6 Connections and controls

Front panel

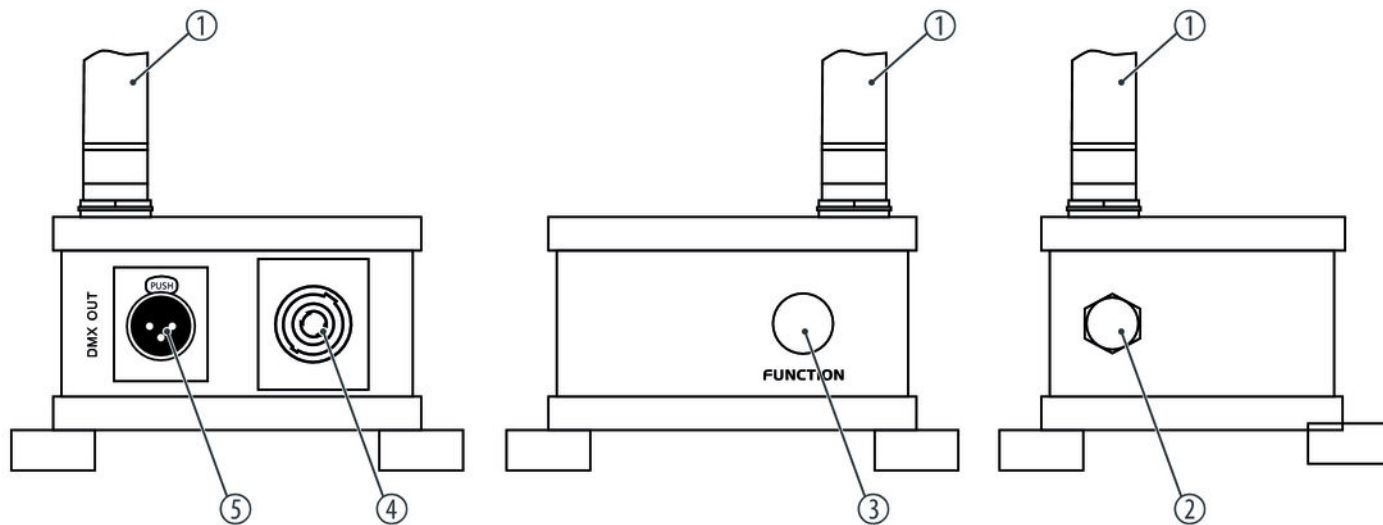

1	Antenna
2	Pressure compensation element
3	<p><i>[FUNCTION]</i></p> <p>Illuminated button for switching the operating mode. The LED shows the current operating status.</p> <ul style="list-style-type: none">■ Off: The receiver is not connected to a transmitter■ On: The receiver is connected to a transmitter, the transmission of the DMX data is running■ Flashing: The receiver is connected to a transmitter, but no DMX signal is transmitted
4	Lockable input socket (Power Twist IP65) for mains power supply.
5	<p><i>[DMX OUT]</i></p> <p>DMX output</p>

7 Operating

Connecting to transmitter

1. ➤ Connect the receiver to the mains and make sure that also the transmitter is switched on.
2. ➤ If the annular *[FUNCTION]* LED on the receiver is not lit, press *[FUNCTION]* on the transmitter. The LEDs on the transmitter and receiver flash quickly for a few seconds.
 - ⇒ If the LEDs are permanently lit, the connection is established.

Disconnecting from the transmitter

- Press *[FUNCTION]* on the receiver for about six seconds.
 - ⇒ The *[FUNCTION]* LED turns off, the connection is disconnected.

8 Technical specifications

Frequency band	2.4 GHz
Range (outdoors)	approx. 500 m
Operating supply voltage	AC 230 V ~ 50 Hz
Power consumption	6 W
Dimensions (W × H × D, without antenna)	135 mm × 90 mm × 80 mm
Weight	1.0 kg

9 Plug and connection assignments

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

DMX connections

The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.



Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

10 Troubleshooting



NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

Symptom	Remedy
No response to the DMX controller	1. Check the power supply of transmitter and receiver.
	2. Make sure that transmitter and receiver are operating in the same frequency range.
	3. Check the DMX connectors and cables for proper connection.
	4. Check the address settings and the DMX polarity.
	5. Try using another DMX controller.
	6. Check whether the DMX cables run near or parallel to high-voltage cables that may cause damage or interference to a DMX interface circuit.
Transmission is interrupted.	1. Try to improve the audio transmission by moving the transmitter closer to the receiver.
	2. Make sure that no metal objects near the transmitter or receiver obstruct the transmission.
	3. Modify the orientation of the antennas.

Symptom	Remedy
	4. If you use more than one wireless system at the same time, check the used frequencies and channels.
	5. Interference can also be caused by other radio or in-ear systems.

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at www.thomann.de.

11 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

WLS-DMX Outdoor Receiver IP65



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · www.thomann.de