INSTRUCTION MANUAL



th•mann

INSTRUCTION MANUAL

Step 6 Techniques! - Try different techniques **OTM Link (Otamatone Music Link)** A new feature that allows you to connect the Otamatone to a smartphone or tablet. All you need to do is Pwah wah wah plug in the included 4-pole 3.5mm stereo cable. As easy as that! Wah Wah Technique *The Android version of Otamatone Studio has not Available on the App Store been released yet, but will be released very soon. While pushing the Stem switch, open and close the mouth. Google Play *Not all Android devices can be used with the app. The sound changes from "woo" to "wah". Repeat this to make "wah wah wah". ••• Caution * Devices without a 4-pole 3.5mm stereo iack can only be connected via This will vary the sound . The opening and the OTM Link by using an adapter that supports microphone input. closing of the mouth entertains everyone! Apple and the Apple logo are trademarks of Apple Inc registered in the U.S. and other countries. App Store is a service mark of Apple Inc. * iPhone, iPad and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries 1 The iPhone trademark is used with permission of Aiphone Co., Ltd. 0 * Google Play and the Google Play logo are trademarks of Google Inc. ۲ * Android is a trademark and registered trademark of Google Inc. Vibrato: \bigcirc A tremulous or pulsating effect produced in an instrumental or vocal tone Vibrate the Stem while doing the Push technique. The sound changes according to the vibration. When using a 3.5mm adapter for the cable * Make sure your adapter supports microphone input. If the adapter can only be used for musical output OTM Link will not work

- * Please note that due to app or device specifications OTM Link might not work properly
- * Make sure the adapter is not damaged. If it doesn't fully transmit the signal OTM Link will not work properly
- * Using an adapter can result in lower volume. In this case, please adjust the volume through your device or the app.
- * Using an adapter can create noise. It is not possible to fully prevent this problem but adjusting the volume through your device or the app can help.

Mouth Technique does not work while using the headphones

Important Safety Instructions

Safety instructions for using AC power source:

Mishandling cf power source may cause fatal accidents er serious injuries.

- Check the voltage rating before you connect the adapter to an electrical outlet to ensure that the required voltage and frequency match the available power source.
- use only the specified AC adapter approved for use with this product. Wipe off dust from the AC adapter plug to avoid electric shock or short circuit.
- · Electric Shock Hazard: Da not handle the AC-adapter with wet hands.
- Unplug the AC adapter after use.
- · Be sure to grasp the adapter itself, not the cable, when disconnecting the AC adapter from the power source.
- Do not piggyback the electrical outlet. It may cause overheating.
- Do not forcefully bend, twist, or pull the cable, or modify the cable.
- Do not put the cable under furniture, electric appliances, figurines, or any other heavy objects. Damaged cables may cause fire or electric shock.
- · Do not use any AC adapter with damaged cable.
- In the event that the AC adapter becomes damaged or the unit malfunctions, turn the unit off and disconnect the AC adapter immediately.

For more information an Otamatone and fun videos showing hints and techniques are available at the following site:

http://www.maywadenki.com/otamatone

Step 7 OTM Studio

Ме

Step 5

Check the following options. Terms of Service, Privacy Policy, User Manual, Language, Contact and Support, Info



Mouth Technique does not work while using the he

The complete set of features can be unlocked through in app purchases.

An overview of the current status. The Otamatone parts each correspond to a certain mode. If you tap them and switch to a different mode the buttons below will change as well. The mouth on the main screen will move while vou are plaving

instrument buttons

Each mode has a set of buttons for its specific functions. Your current selection is highlighted in dark grey (buttons look different in different

Tap a button to change your Otamatone's sound.





Use this to adjust volume.

Each mode has a different looking fader.



th.mann