

## Features

### Controls:

- GAIN: Overdrive control
- TONE: Tone control
- LEVEL: Level control for output signal
- HIGH/LOW: Low - / highpeak switch
- BYPASS: Mechanical foot switch to activate the effect
- LED: Pilot light

Connections: Input, Output, DC input

Power supply: Alkaline 9 V battery or external power supply (DC 9 V $\ominus$ , inner contact = negative pole), both optionally available

Dimensions: 120 × 72 × 55 mm (L × W × H)

## Introduction

The Harley Benton 'Ultimate Drive' is an overdrive effect pedal for electric guitar. It offers you a variety of possible settings, a sturdy housing and a reliable foot switch.

You can power this device by an external DC 9 V adaptor or a 9 V alkaline battery. If you don't use this pedal for more than 1 month, take out the battery. Disconnect the input cable from the pedal when you don't use the device. This will disconnect the battery from the circuit and save its capacity.



This device is intended to be used for effects generating for instrument signals. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke! Never let children use electrical devices unattended.



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility. Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of batteries according to national or local regulations regarding hazardous waste. To protect the environment, dispose of empty batteries at your retail store or at appropriate collection sites.

A detailed operating manual can be downloaded from [www.thomann.de](http://www.thomann.de)

Thomann GmbH  
Hans-Thomann-Str. 1 • 96138 Burgebrach  
Germany • [www.thomann.de](http://www.thomann.de)

*Harley Benton*