



EUROLIGHT LC2412 Overview sheet (Front)


1 A Preset section

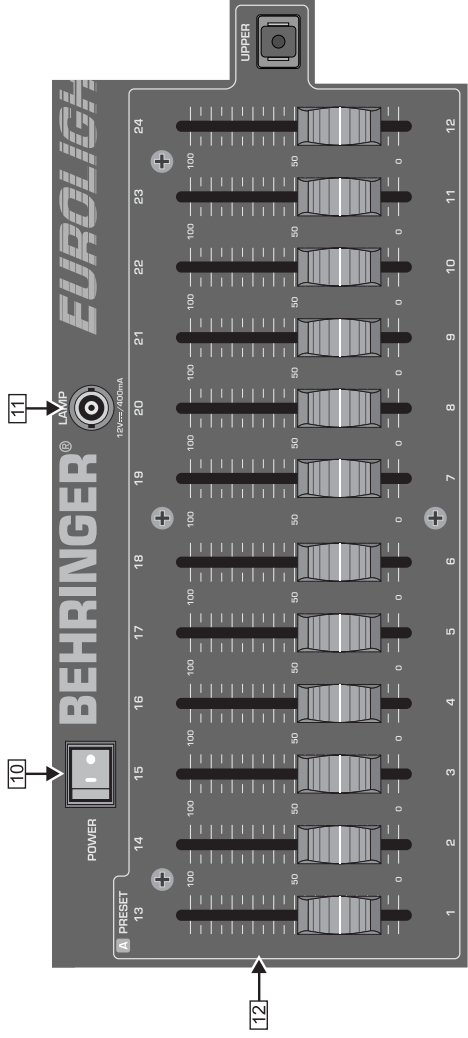

5 Programming section

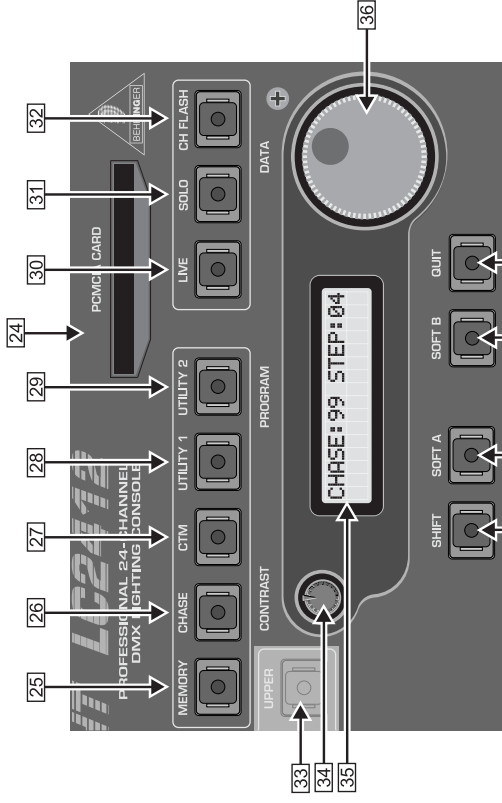

2 B Memory section

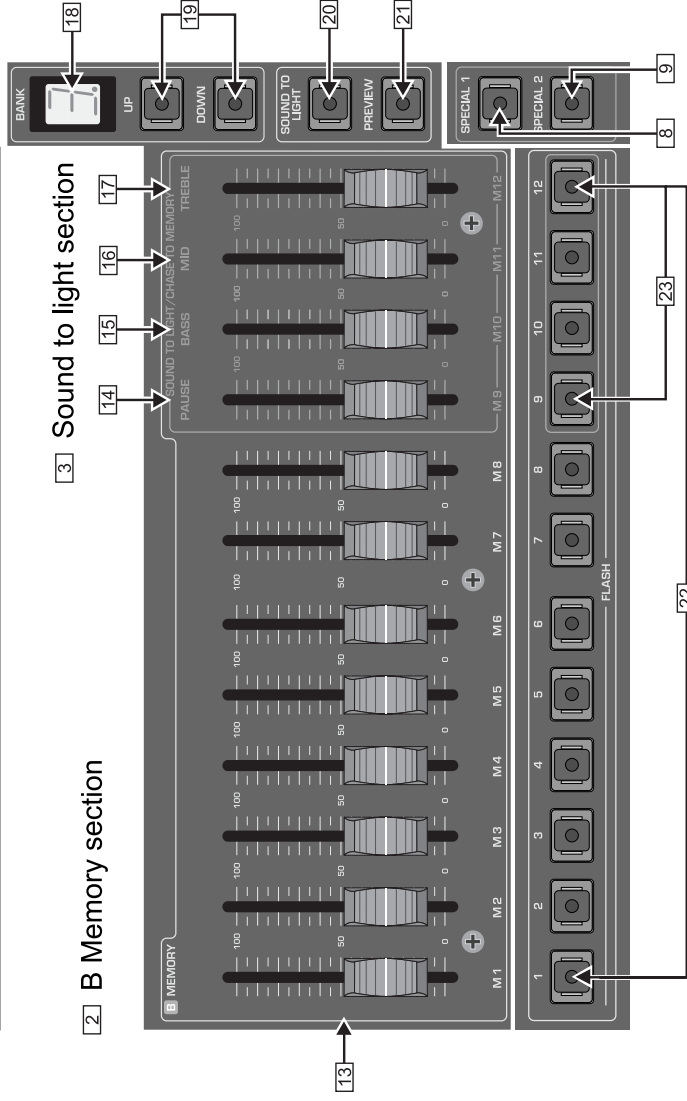


3 Sound to light section

4 Flash keys



6 Main section

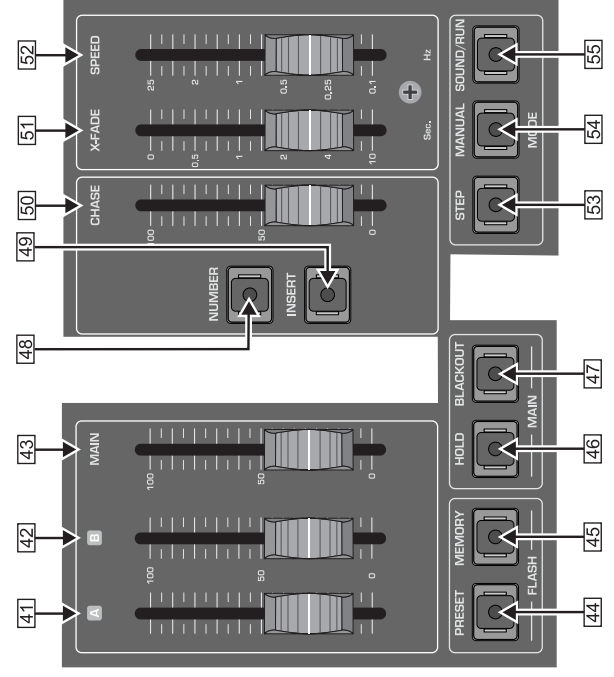

7 Chase section

8 Special 1

9 Special 2

12 Upper

13 Memory

14 Pause

15 Sound to light

16 Sound to light/Chase to memory

17 Treble

18 Bank

19 Up

20 Down

21 Preview

22 Flash

23 Flash keys

24 PC/MCI Card

25 Memory

26 Chaser

27 CTM

28 Utility 1

29 Utility 2

30 Live

31 Solo

32 Ch Flash

33 Upper

34 Contrast

35 Contrast

36 Rotary Knob

37 Shift

38 Soft A

39 Soft B

40 Quit

41 A

42 B

43 Main

44 Preset

45 Memory

46 Main

47 Hold

48 Number

49 Insert

50 Chase

51 X-Fade

52 Speed


53 Step

54 Mode


55 Manual Sound/Run

MENU STRUCTURE OVERVIEW


Setup functions/System check (start with Soft A + Soft B + Flash 1, turn data wheel to proceed)

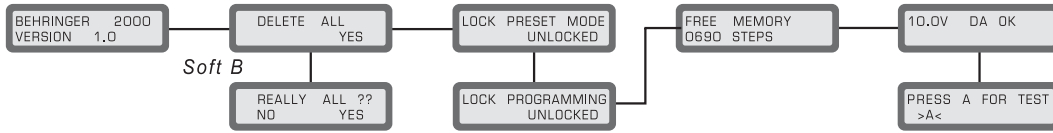


Programming Memories

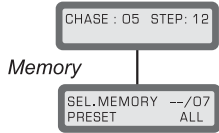


Programming Chases

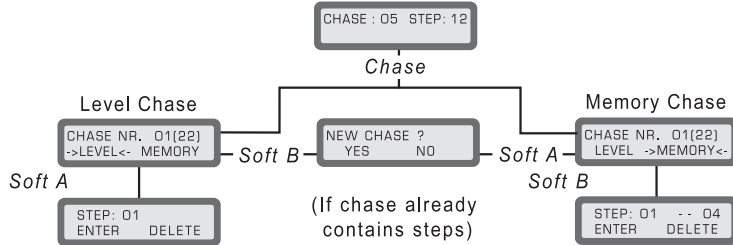


Modifying Memories

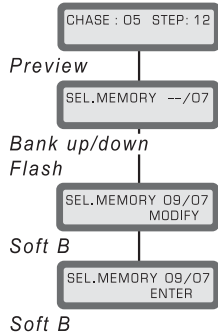


Chase to memory

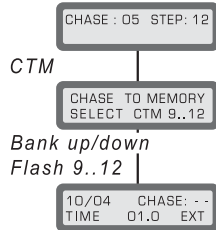


Modifying CTM

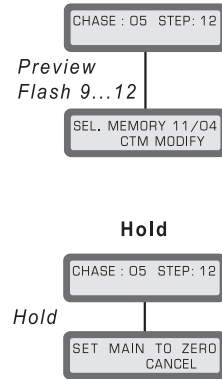

DMX512 Softpatch

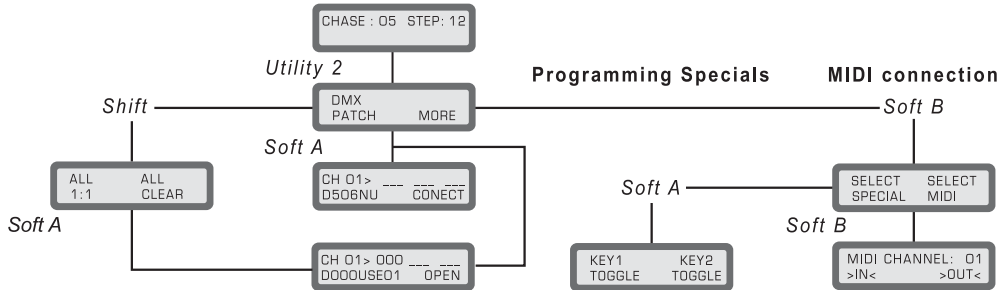

Disable Solo/Select Curve

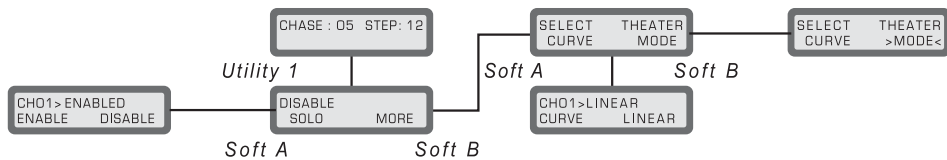

EUROLIGHT LC2412 Overview sheet (Rear)

