

### Quick Start Guide

This quick start guide contains important information on the safe operation of the product. Read and follow the safety advice and instructions given. Retain the quick start guide for future reference. If you pass the product on to others please include this quick start guide.

### Safety instructions

#### Intended use

This device is intended to be used for the wireless reception of audio signals in the wireless tour guide system TG 16. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

#### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke! Never let children unattended use electrical devices.

#### Where to use the product

Never use the product

- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet

#### General handling


- To prevent damage, never use force when handling the product.
- Never immerse the product in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

### Features

- 18 charging slots for transmitter TG 16 T (item no. 234705) and receiver TG 16 R (item no. 234704)
- Separate control LED for each charging slot

- Power supply via supplied power adapter
- Built into a handy and robust portable case

### Controls and connections

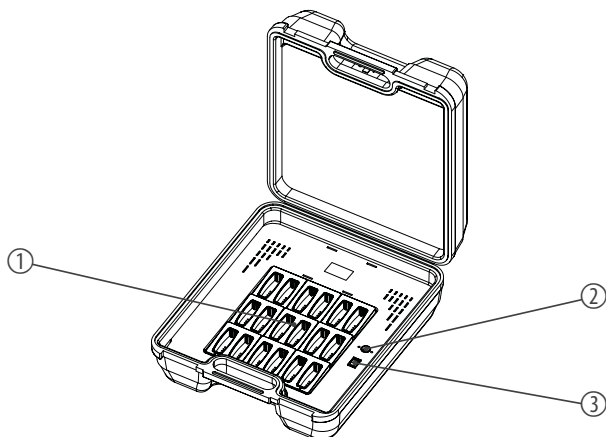

- ① 18 charging slots for transmitter or receiver with separate control LED. The LED flashes when the charging slot is free. The LED lights up when the charging starts. It turns off after about 10 to 15 seconds.
- ② [DC INPUT]  
Connection for the supplied power adapter. Connect the supplied power adapter with the power supply input of the unit. Then connect the power adapter to a power outlet.
- ③ [POWER]  
Main switch to turn the device on and off. The integrated control LED lights up red when the device is turned on.

#### Charging transmitter/receiver

Turn off the transmitter or receiver that needs charging. Position the charging contacts of the transmitter or receiver over the charging contacts of the charging slot. Insert the unit into the charging slot so that it clicks into place. The control LED of the charging slot turns off. It lights up again when the unit is fully charged

### Technical specifications

■ Loading slots	18
■ Power supply	External power adapter, 100 - 240 V ~ 50/60 Hz
■ Operating voltage	15 V $\overline{\sim}$ / 3.3 A, centre positive
■ Dimensions (W x H x D)	361 mm x 189 mm x 422 mm
■ Weight	3.4 kg
■ Ambient conditions	Temperature range: 0 °C...40 °C Relative humidity: 20 %...80 % (non-condensing)



A detailed user manual of the Tour Guide TG 16 is available for download on the product page of our homepage [www.thomann.de](http://www.thomann.de).



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.