

# Harley Benton

## Mini Looper

### Quick Start Guide

This quick start guide contains important information on the safe operation of the device. Read and follow the safety advices and instructions given. Retain the manual for future reference. If you pass on the device please include this manual.

### Safety instructions

#### Intended use

This device is intended to be used to integrate multiple effects devices into the signal path between instrument and amplifier. Different configurations can be stored. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

#### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke! Never let children unattended use electrical devices.

#### Where to use the product

Never use the product

- in direct sunlight
- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet
- near magnetic fields

#### Electromagnetic compatibility with other electrical equipment

Operating the device near radios or televisions may lead to radio interference. Then increase the distance between the devices.

#### General handling

- To prevent damage, never use force when operating the switches and controls.
- Never immerse the appliance in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.
- Disconnect the voltage supply of the device from the power grid when it is not in use.


#### Keep foreign substances from the unit!

Keep the device away from containers with liquids. Should any liquid get into the unit, this could lead to its destruction or fire. Be sure not to let any metal objects into the unit.

### Features

- 10 minutes maximum recording time
- Unlimited overdubs
- 1/4" phone in and output

### Controls and functions

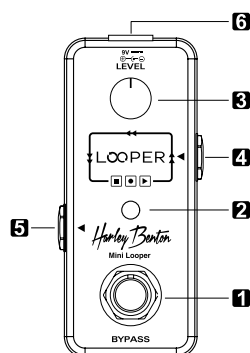

1	Function switch to control the unit
2	LED for indicating the various functions
3	LEVEL control for adjusting the volume
4	Input socket for connecting the instrument
5	Output socket for connecting an amplifier etc.
6	Voltage supply connector (9 V, $\oplus$ $\ominus$ )

### Using the Looper

#### Recording / Overdubbing

- When the LED is off, press the foot switch once to activate the recording mode – the LED will turn red.
- Press the foot switch once in recording mode to activate the playback mode – the LED will turn green.
- Press the foot switch once in playback mode to activate the overdub mode – the LED will turn red.
- Press the foot switch once in overdub mode to activate the playback mode – the LED will turn green.

#### Deleting recordings

- In playback / overdub mode, keep the foot switch pressed for at least 2 seconds until the LED blinks twice quickly. Then the last recording is deleted.

#### Restoring recordings

- To restore a deleted recording keep the foot switch again pressed for at least 2 seconds until the LED blinks twice quickly. Then the last deleted recording is restored.

#### Starting, stopping deleting the loop

- In playback / overdub mode, press the foot switch twice quickly, then the LED blinks green and playback / overdubbing are stopped.
- Press the foot switch while playback is stopped to let playback start again. The LED lights green.
- In playback / overdubbing mode, quickly press the footswitch twice. On the second press, hold the footswitch for 2 seconds to clear all recordings. The LED goes out.

### Technical specifications

Input:	1/4" phone socket (impedance: 470 kOhm)
Output:	1/4" phone socket (impedance: 100 kOhm)
Power supply:	9 V $\ominus$ , centre negative ( $\oplus$ $\ominus$ )
Current draw:	94 mA
Dimensions (W x H x D):	93 mm x 45 mm x 50 mm
Weight:	150 g



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.