

# VARYTEC

## BAT.CHARGER 4

### Quick Start Guide

This quick start guide contains important information on the safe operation of the product. Read and follow the safety advices and instructions given. Retain the quick start guide for future reference. If you pass the product on to others please include this quick start guide.

### Safety instructions

#### Intended use

This device is used for simultaneous charging of up to four rechargeable batteries of the Bat series or Makita BL 1013 (Thomann item no. 385488). Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

#### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke! Never let children unattended use electrical devices.

#### Possible damage by leaking batteries

Leaking batteries can cause permanent damage to the device. Take batteries out of the device if it is not going to be used for a longer period.

#### Where to use the product


Never use the product

- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet

#### General handling

- To prevent damage, never use force when handling the product.
- Never immerse the product in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

### Operating elements

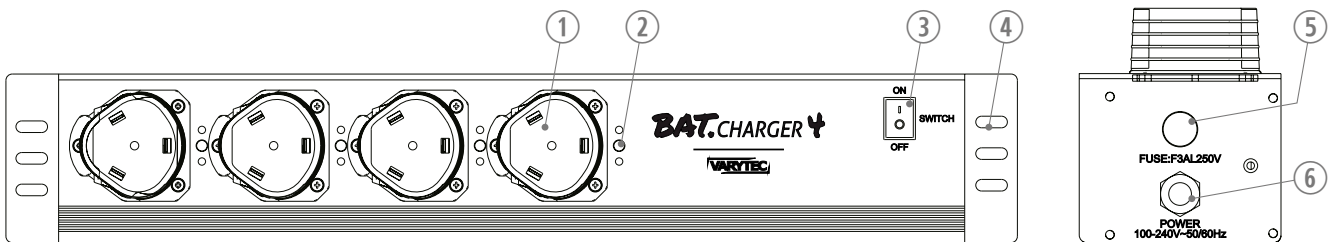


1. Charging slots 1 - 4 (batteries used for illustration only, not included)
2. Charging indicator
3. On / off switch

4. Rack mounting openings
5. Fuse
6. Mains power cable

### Using the device

1. If required, mount the device in a 19" rack.
2. Insert the plug of the mains power cable (6) into a properly wired power outlet.
3. Insert 1 to 4 Bat or Makita BL 1013 rechargeable batteries into the slots (1).
4. Set the on / off switch (3) to the ON position to turn on the unit.
5. During charging, the charging indicator of the respective charging slot lights red. When the battery is fully charged, the charging indicator lights green.
6. When all batteries are charged, turn the On / Off switch (3) to the OFF position to turn off the unit.
7. Press the two buttons on the battery and remove it from the charging slot.

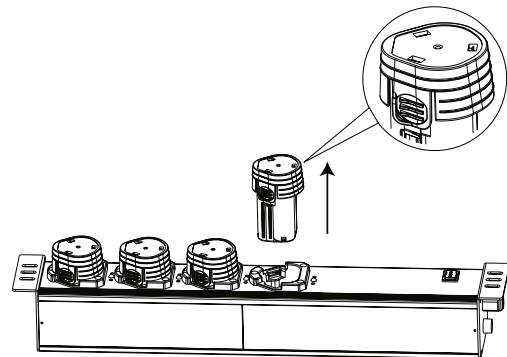

### Technical specifications

Supply voltage	230 V ~ 50 Hz
Charging voltage	9 V =
Float charging voltage	12.6 V =
Max. total charging current	2.5 A
Duration for full charge	4 - 5 hours
Housing material	Aluminium
Colour	black
Fuse	5 mm x 20 mm 3 A, 250 V, fast-acting
Dimensions (W x H x D)	480 mm x 80 mm x 67 mm
Weight	approx. 1.4 kg



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of batteries according to national or local regulations regarding hazardous waste. Dispose of empty batteries at appropriate collection sites.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.