

# Speech 100 B

# **Quick start guide**

This document contains important information on the safe use of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. If you pass the product on to others, please include this document. Contents are subject to change. Please refer to the latest version of the documentation, which is available for download at www.thomann.de.

# Safety instructions

#### Intended use

This device is used as a power supply extension for Speech 100 series conference systems. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damage resulting from improper use.

This device may be used only by persons with sufficient physical, sensory, and intellectual abilities and the necessary knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

#### Risk of injury and choking hazard for children!



Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such as knobs) that children could play

## Risk of death from electrical current!



The device contains parts where high voltage is present. Never remove any covers. There are no user-serviceable parts inside the device. Do not use the device if covers, safety equipment or optical components are missing or damaged.

#### Risk of death from electrical current!



A short circuit can cause fires and loss of life. Always use a properly insulated two-core mains cable. Do not modify the mains cable or the power plug. If the insulation is damaged, immediately switch off the power supply and have it repaired. If in doubt, contact a qualified electrician.

## Damage to the device if operated in unsuitable ambient conditions!



The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments subject to direct sunlight, heavy pollution and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.

## General handling

- To prevent damage, never exert force while operating the device.
- Never immerse the device in water. Wipe only with a clean and dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents

#### Keep foreign substances away from the device!

Keep the device away containers with liquid. If any liquid penetrates the device, this could destroy the device or cause a fire. Be aware that no metallic parts come inside the device.

#### **Features**

- Power supply extension (booster) for:
  - Microphone unit 100 C (item no. 438819) Microphone unit 100 D (item no. 438820)

  - Conference system Speech 100 M (item no. 438815)
- One 100 B supplies up to 32 additional microphone units (mode 1)  $(1 \times 100 \text{ M [control centre]} + 1 \times 100 \text{ B [booster]} = 2 \times 16 + 2 \times 16 = 64$ [microphone units])
- With a second 100 B, up to 72 microphone units are possible (mode 2)

 $(1 \times 100 \text{ M} + 1 \times 100 \text{ B} + 1 \times 100 \text{ B} = 2 \times 12 + 2 \times 12 + 2 \times 12 = 72)$ 




# Speech 100 B

## **Connections and controls**

- 1. OUTPUT **9** Output 2, for connection to the input of the next unit involved
- 2. INPUT **1** Input 2, for connection to the output of the previous involved unit
- 3. OUTPUT Output 1, for connection to the input of the next unit involved
- 4. INPUT Input 1, for connection to the output of the previous involved unit
- Rubber panel plug with fuse holder for connection to the power supply



# **Connection diagram**

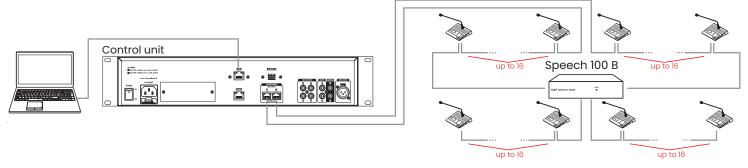

## **Technical specifications**

Input connections Power supply Rubber panel plug International IP20
2 x network socket RJ45
International Protection Rating

Output connections Power supply for 2 x network socket RJ45 Dimensions (W × H × D) 305 mm × 45 mm × 97 mm

further devices (W  $\times$  H  $\times$  D) 97 Hill Output power  $2 \times 36 \text{ V} = 1.5 \text{ A}$  Weight 2.45 kg

Output power  $2 \times 36 \text{ V} = 1.5 \text{ A}$ Ambient conditions Temperature range 0 °C...40 °C

Power consumption 72 W Ambient conditions Temperature range 0 °C...40 °C Relative humidity 20%...80%

250 V, slow blow (non-condensing)



Discover the entire t.bone range on our website:

tbone.audio



Visit us on Instagram and discover the full audio experience: tbone.audio/instagram



Visit our YouTube channel for product videos and interesting stories:

tbone.audio/youtube



## Disposal of the packing material

Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



# Disposal of your old device

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions at www.thomann.de.

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. For example, use the Thomann GmbH classified ads.

If your old device contains personal data, delete those data before disposing of it



Observe the disposal note regarding documentation in France.