

th•mann

KBH-200BKM / KBH 400

Quick Start Guide

This quick start guide contains important information on the safe operation of the product. Read and follow the safety advice and instructions given. Retain the quick start guide for future reference. If you pass the product on to others please include this quick start guide.

Safety instructions

Intended use

This product is intended for use as seat. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke!

Danger of tipping on unsuitable ground

If placed on soft or uneven ground, the stand may overturn and cause injuries and property damage. Place the stand on flat and solid surfaces only.



Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage. Never exceed the maximum load capacity specified for the stand.



Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your surface and after some time cause permanent dark stains. In case of doubt, do not put the rubber feet directly on the surface and use a suitable underlay if necessary, i.e. felt-pad floor protectors or similar.

Features

- Piano bench
- Stable metal frame
- Seat cushion: black artificial leather
- Max. load capacity: 140 kg

- Hydraulic height adjustment: 420 mm - 560 mm
- Seating surface: 520 mm × 330 mm (KBH-200BKM)
640 mm × 330 mm (KBH-400BKM)
- Weight: 6.7 kg (KBH-200BKM)
9.4 kg (KBH-400BKM)



Adjusting the seat height

Lowering the seat

For lowering the seat, sit down on the piano bench, pull the lateral levers upwards and hold them until the desired seat height is reached.



When lowering the seat of the piano bench KBH-400 BKM, make sure to sit in the middle of the seat, otherwise the piano bench may possibly get wedged in the feet.

Lifting the seat

For lifting the seat, get up from the piano bench, pull the lateral levers upwards and hold them until the desired seat height is reached.



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.