

MiniStomp Copy Paste

Quick start guide

This document contains important information on the safe use of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. If you pass the product on to others, please include this document. Contents are subject to change. Please refer to the latest version of the documentation, which is available for download at www.thomann.de.

Safety instructions

Intended use

This device is designed to change the sound of signals from musical instruments with electromagnetic pickups. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damage resulting from improper use. This device may be used only by persons with sufficient physical, sensory, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Risk of injury and choking hazard for children!



Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such as knobs) that children could play with.

Operating location

Do not ever use this product:

- in direct sunlight
- in conditions of extreme temperature or humidity
- in extremely dusty or dirty places
- in locations where the device may get wet
- in the vicinity of magnetic fields

General handling

- To prevent damage, never exert force while operating the device.
- Never immerse the device in water. Wipe only with a clean and dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents

Keep the device away from impurities!


Keep the device away containers with liquid. If any liquid penetrates the device, this could destroy the device or cause a fire. Ensure that no metallic parts enter the device

Features

- · Digital looper
- 15 minutes of high-quality recording
- 3 memory slots (tracks)
- · Undo and redo function
- Unlimited overdubs

- True bypass for eliminating signal interferences when the device is switched off
- Solid metal housing
- Level control
- · On/off switch with status LED display
- 6.3 mm jack input and output

Connections and operating elements

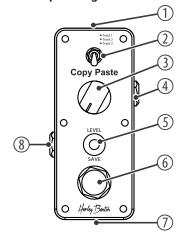

- 1 9V connection for power adapter
- 2 Switch for switching between track memory slots
- 3 [LEVEL] controller | Adjusts the overall volume.
- 4 Input socket, 6.3 mm jack
- 5 [SAVE] button with integrated status LED
- 6 Foot switch
- 7 Micro-USB port
- 8 Output socket, 6.3 mm jack



MiniStomp Copy Paste

Using the product

Connecting the pedal

- 1. Using suitable cables, connect the in and outputs (4, 8) on the sides of the device to the required in and outputs of other devices.
- 2. Connect a 9V power adapter to the designated connection (1).

Recording a loop

- 1. To start recording, press the foot switch (6). The LED (5) lights up red.
- 2. Press the foot switch (6) again to stop recording.
 The recorded loop is played back. The LED (5) lights up green.

Recording an overdub

- 1. Play back a recorded loop.
- 2. Press the foot switch (6) to start the overdub recording. The LED (5) lights up red.
- Press the foot switch (6) again to stop recording.all previously recorded loops are played back. The LED (5) lights up green.

Deleting and restoring the most recent loop

- 1. During playback, press the foot switch (6) and hold it down for at least two seconds.
- 2. During playback, press the foot switch (6) again and hold it down for at least two seconds.

The LED (5) flashes green. The previously deleted loop is restored.

Pausing/continuing playback

- 1. Press the foot switch (6) twice quickly. Playback is paused.
- 2. Press the foot switch (6) briefly. Playback is resumed.

Deleting all loops

- 1. Stop the playback.
- Press the foot switch (6) and hold it down for at least two seconds. All loops are deleted.

Saving tracks

Loops can be saved individually on one of the three track memory slots. If the loops are not saved manually to the track memory slots (tracks 1 - 3), all loops of the current track memory slot are combined into one loop. This means that no individual recordings are saved, and so individual loops can no longer be deleted and restored.

- 1. Use the switch (2) to select a track memory slot.
- 2. Record multiple loops.
- 3. Stop the playback.
- 4. Press the [SAVE] button (5) and press it down for at least two seconds.

 The LED (5) flashes red. The loops are saved to the set track memory slot.

Technical specifications

Dimensions: $92 \text{ mm} \times 38 \text{ mm} \times 32 \text{ mm}$

Weight: 133 gCurrent consumption: 20 mA

Power supply: 9 V == via power adapter,

centre negative

(power adapter not included in delivery)



Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended. Do not dispose of your old device with your normal household waste. Dispose of the product through an approved waste disposal firm or through your local waste management facility. When disposing of the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste management facility.