



## Note:

The connection socket for the triple-pedal is located on the bottom of the digital pianos DP-26, DP-28 and SP-5600.

