 
© 2018 Roland Corporation

01

Check the included items

As so on as you open the package, check to see that all items are included. If anything is missing, please contact your dealer.

* This package does not include a kick pedal. Use with a commercially available kick pedal.







☐ Kick pad (KD-10)



☐ Cymbal pad for hi-hat



(CY-8 x 2)

□ V-Cymbal for crash/ride



□ V-Pad for snare

(PDX-8)

* The PD-8A is a new unit designed specifically for the TD-17K. It does not support the use of the rim-shot technique.

(PD-8A x 3)

it or t

(TD-17-L)





□ Connection cable


(special for TD)




☐ Setup Guide (this document)
☐ Owner's manual set
☐ Drum key

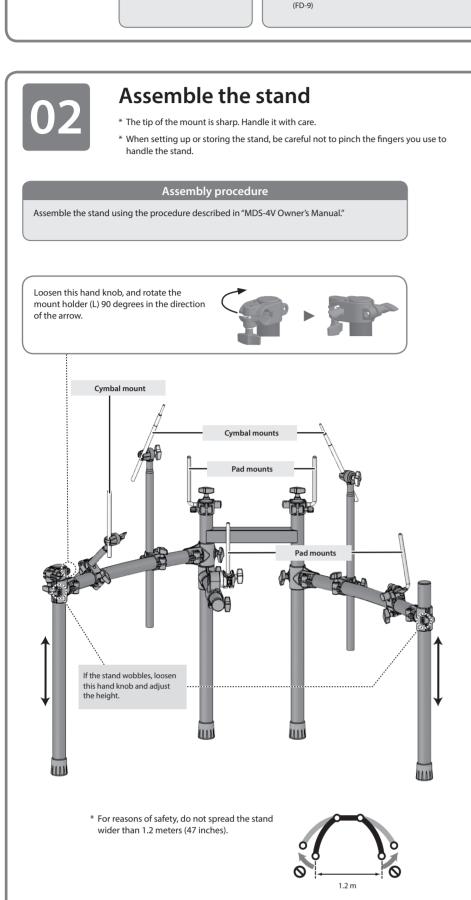

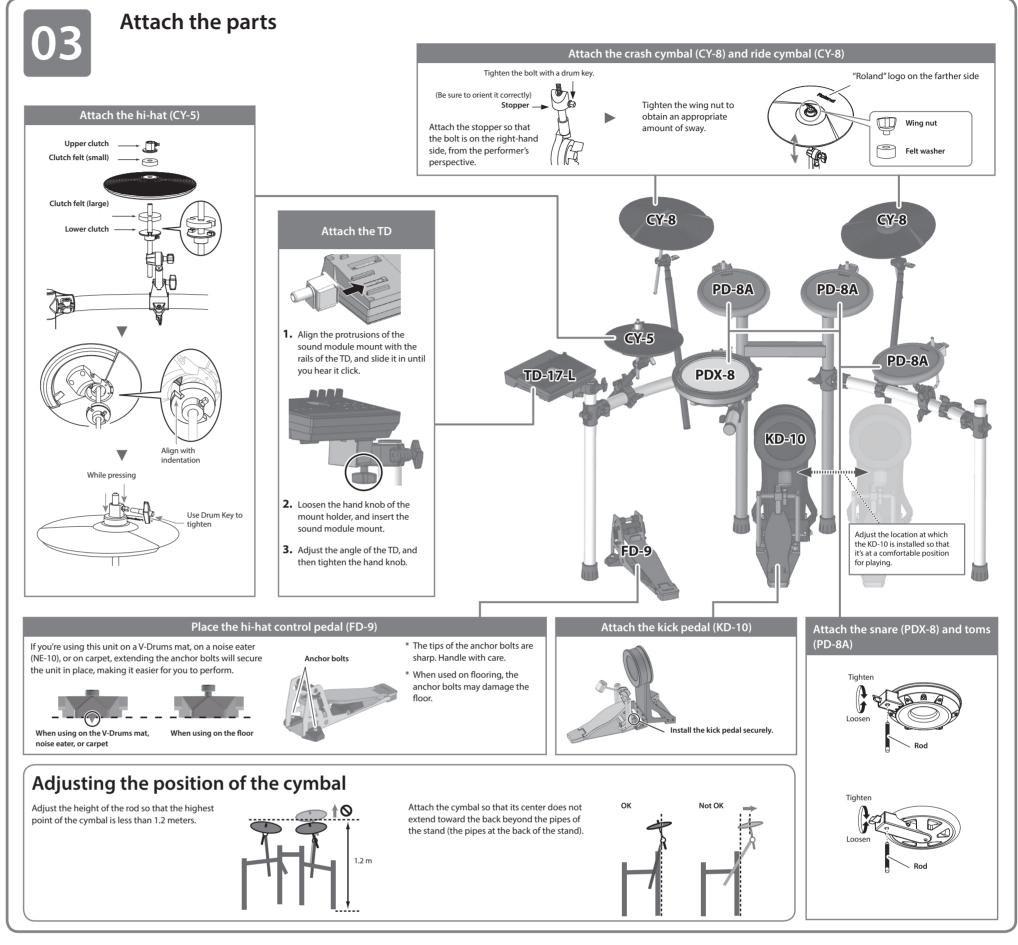


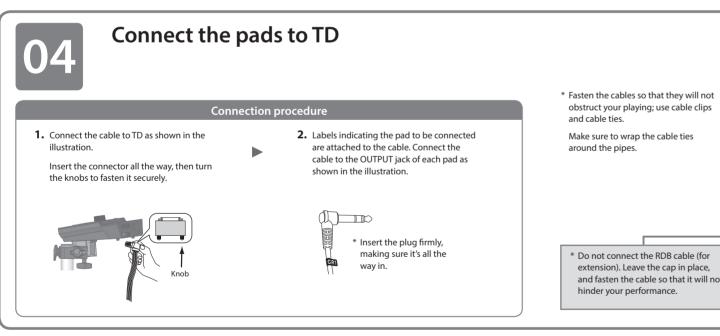


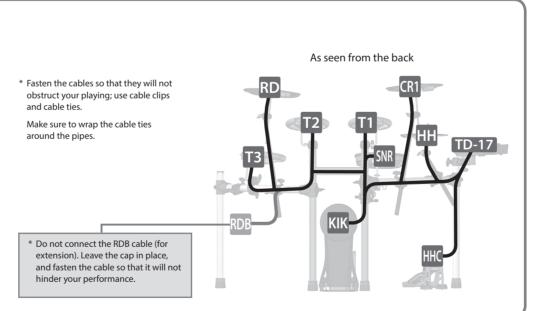



Connect the AC adaptor, speakers, or headphones as described in the owner's manual of the TD.

* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

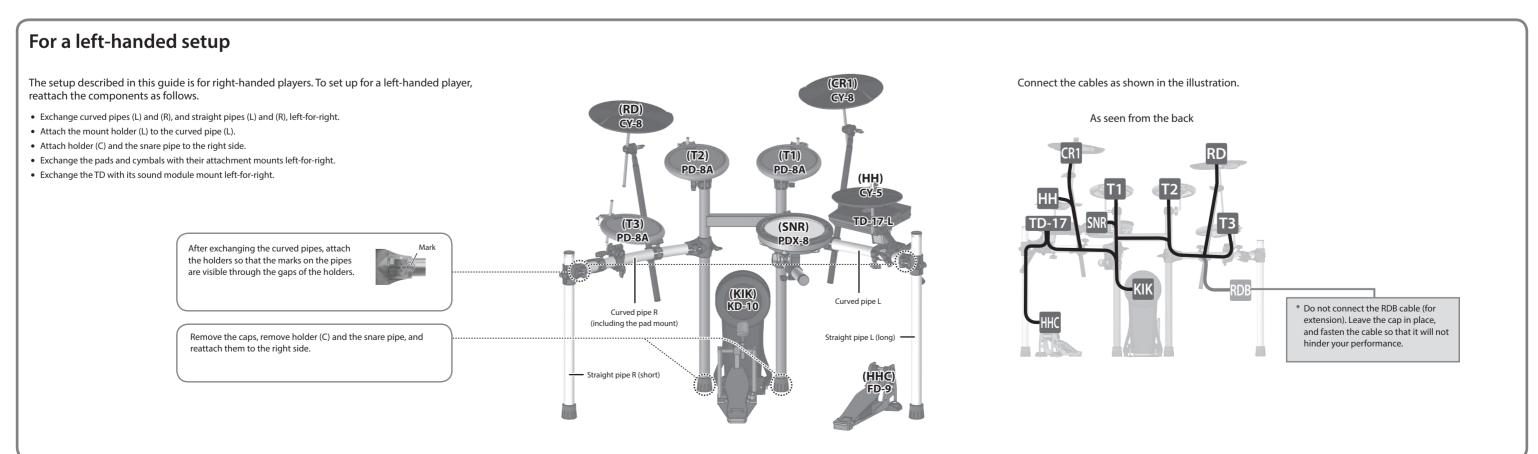

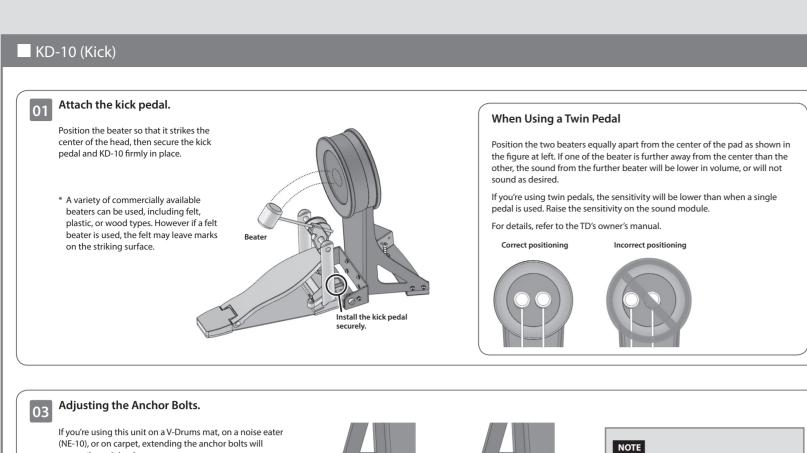

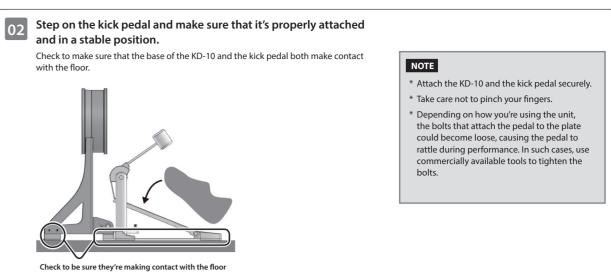

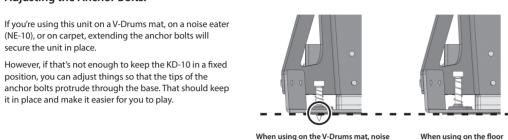

* When used on flooring, the anchor bolts may damage the floor. Adjust the anchor bolts correctly.
* The tips of the anchor bolts are sharp. Handle with care.

Component names

