



**the  
t.amp**

PA 4080 KB  
keyboardcombo

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Deutschland  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

05.01.2017, ID: 147171 (V2)

# Table of contents

<b>1</b>	<b>General information</b> .....	<b>5</b>
1.1	Further information.....	6
1.2	Notational conventions.....	7
1.3	Symbols and signal words.....	7
<b>2</b>	<b>Sicherheitshinweise</b> .....	<b>9</b>
<b>3</b>	<b>Features and scope of delivery</b> .....	<b>14</b>
<b>4</b>	<b>Installation and starting up</b> .....	<b>15</b>
4.1	Tips on handling speakers.....	16
<b>5</b>	<b>Connections and controls</b> .....	<b>17</b>
<b>6</b>	<b>Operation</b> .....	<b>23</b>
<b>7</b>	<b>Technical specifications</b> .....	<b>26</b>
<b>8</b>	<b>Plug and connection assignment</b> .....	<b>28</b>
<b>9</b>	<b>Troubleshooting</b> .....	<b>32</b>
<b>10</b>	<b>Cleaning</b> .....	<b>33</b>

**11 Protecting the environment..... 34**

# 1 General information

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

## 1.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 1.2 Notational conventions

This manual uses the following notational conventions:



### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.

## 1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.



## 2 Sicherheitshinweise

### Intended use

This device is intended to be used for amplification and playback of signals from musical instruments and microphones. Use the unit only as described in this manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

## Sicherheit



### **DANGER!**

#### **Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



### **DANGER!**

#### **Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



**DANGER!**

**Electric shock caused by short-circuit**

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



**CAUTION!**

**Possible hearing damage**

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



### **NOTICE!**

#### **Risk of fire**

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



### **NOTICE!**

#### **Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



**NOTICE!**

**Power supply**

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

### 3 Features and scope of delivery

Special features of this four-channel keyboard combo:

- 80 watt RMS output power
- Built-in spring reverb, foot-switchable (FS not included)
- 1 × MIC input (XLR, balanced) and 1 × LINE input (1/4" phone socket) per channel
- Volume, tone and reverb control per channel
- 2 additional CD/Tape in and outputs
- Master section with 3-band EQ
- External effects loop
- 12" Celestion speakers and tweeter
- Integrated tripod mounting flange
- Incl. casters and pull-out handle

## 4 Installation and starting up

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



### **NOTICE!**

#### **Possible property damage by magnetic fields**

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

### 4.1 Tips on handling speakers

We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.

 
For optimum results both impedance and power handling of the speakers must match the requirements of the amplifier. Always follow the technical specifications of the speakers! The overall impedance of the connected loudspeakers must not exceed the minimum output impedance of the amp. The amps max. RMS output power should be 50 % above the power handling capacity of the connected speakers.

If you notice distortion during operation, either the amp or the speaker is overloaded. This may permanently damage the amp or the speaker. Always reduce the volume when you hear distortion.



## 5 Connections and controls

Oberseite

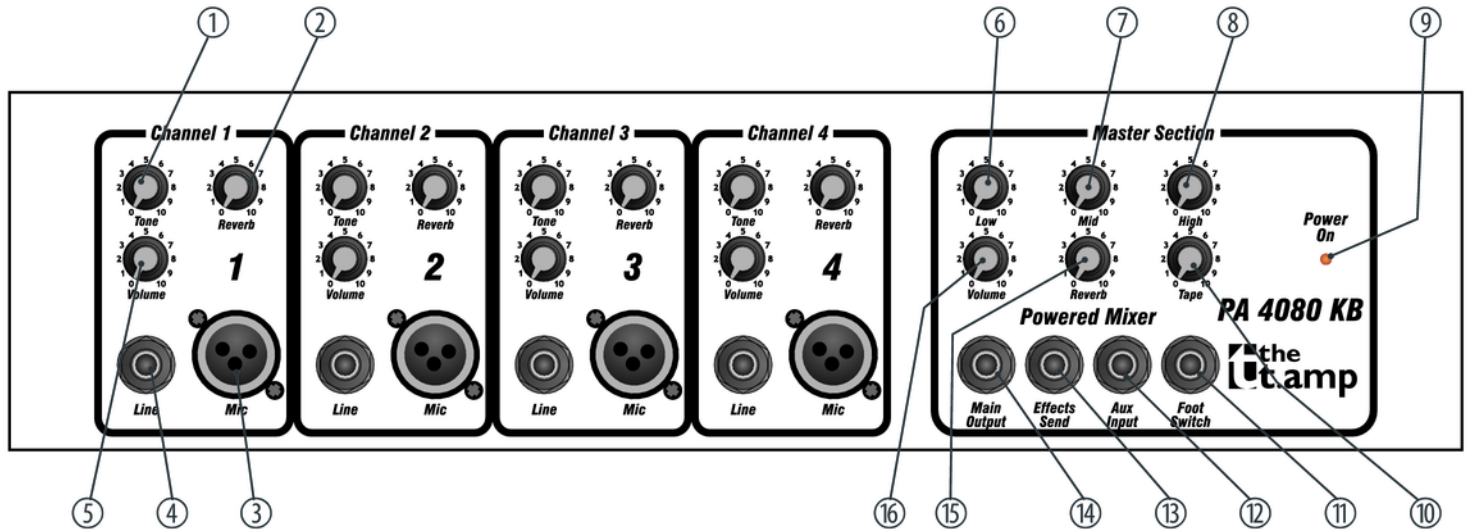


PA 4080 KB

1	<i>[Tone]</i> Klangregler zum Einstellen des gewünschten Sounds im jeweiligen Kanal.
2	<i>[Reverb]</i> Hallregler zum Einstellen des Hallpegels im jeweiligen Kanal.
3	<i>[Mic]</i> Symmetrischer Mikrofoneingang, niederohmig, als XLR-Anschluss ausgeführt.
4	<i>[Line]</i> Unsymmetrischer Line-Eingang, hochohmig, als 6,35-mm-Klinkenbuchse ausgeführt.
5	<i>[Volume]</i> Lautstärkeregler zum Einstellen der gewünschten Lautstärke im jeweiligen Kanal.
6	<i>[Low]</i> Tiefenregler der 3-Band-Klangregelung für das Summensignal.

7	<i>[Mid]</i> Mittenregler der 3-Band-Klangregelung für das Summensignal.
8	<i>[High]</i> Höhenregler der 3-Band-Klangregelung für das Summensignal.
9	<i>[Power On]</i> Diese Betriebsanzeige leuchtet, wenn das Gerät eingeschaltet ist.
10	<i>[Tape]</i> Mit diesem Regler steuern Sie die Lautstärke, mit der die Signale des Eingangs „CD/Tape“ wiedergegeben werden.
11	<i>[Foot Switch]</i> Hier können Sie einen Fußschalter (nicht mitgeliefert) mit einem 6,35-mm-Klinkenstecker anschließen, um die interne Hallfunktion ein- oder auszuschalten.
12	<i>[Aux Input]</i> Unsymmetrischer AUX-Eingang, über den Sie zusätzlich Signale einspeisen können, z.B. als Effekt-Return.

13	<i>[Effects Send]</i> An diesem Ausgang liegt das zusammengefasste Signal an, das mit den <i>[Reverb]</i> -Reglern in den Kanälen abgegriffen wird.
14	<i>[Main Output]</i> Über diesen Line-Ausgang können Sie das Summensignal des Geräts z.B. an eine Endstufe weiterleiten.
15	<i>[Reverb]</i> Mit diesem Regler stellen Sie den Hallpegel für das Summensignal ein.
16	<i>[Volume]</i> Mit diesem Regler stellen Sie die Lautstärke des Summensignals ein.

 Rückseite

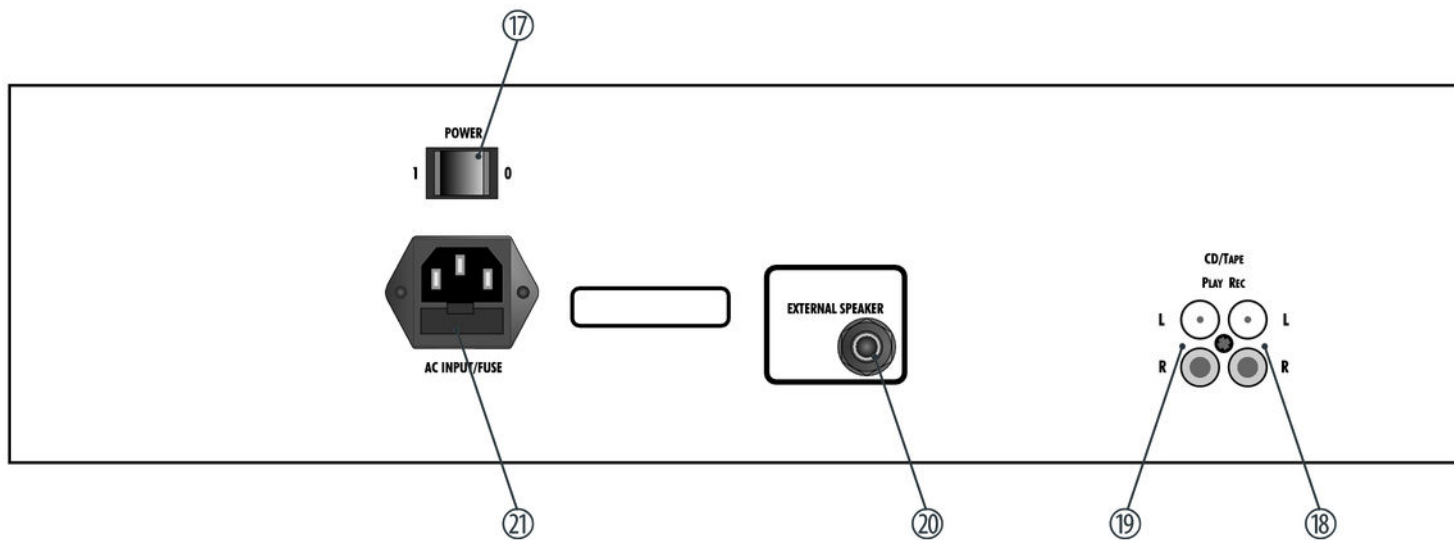

PA 4080 KB

17	<i>[POWER]</i> Mit diesem Netzschalter schalten Sie das Gerät ein und aus.
18	<i>[CD/TAPE REC]</i> Über diese Anschlüsse können Sie das Line-Ausgangssignal des Geräts z.B. mit einem Bandgerät aufzeichnen.
19	<i>[CD/TAPE PLAY]</i> Hier können Sie den Line-Ausgang von Bandgeräten, CD- oder MP3-Spielern für zusätzliche Einspielungen anschließen.
20	<i>[EXTERNAL SPEAKER]</i> Ausgang zum Anschluss eines externen Lautsprechers (6,35-mm-Klinkenbuchse). Die Impedanz des externen Lautsprechers muss mindestens 8 $\Omega$ betragen.
21	<i>[AC INPUT/FUSE]</i> Netzanschlussbuchse für die Spannungsversorgung. Unterhalb der Buchse befindet sich der Sicherungshalter.

## 6 Operation

### Wiring

Connect microphones to the low-impedance XLR inputs [*Mic*] or to the high-impedance 1/4" inputs [*Line*].

Connect musical instruments to the 1/4" inputs [*Line*].

If desired, connect one or more speaker boxes via a suitable speaker cable to the [*External Speaker*] socket on the rear panel of the unit. The overall impedance of the connected load must not come below 8  $\Omega$ . Otherwise, the device will be overloaded.

Use the RCA sockets [*CD/Tape Play*] on the rear panel of the unit to connect a CD player or tape devices for additional inputs.

Use the RCA sockets [*CD/Tape Rec*] on the rear panel of the unit to connect recording devices or the like.

The unbalanced [*Main Output*] socket provides the master signal with line level. Here you may connect a power amp for additional amplification.

The unbalanced [*Effects Send*] socket provides the combined effect signal that is tapped from the four channels. Here you can connect an external effects device, which then takes over the signal processing instead of the built-in reverb function.

If you route the effect signal from the [*Effects Send*] output into an external effects device, connect its outlet to the [*Aux Input*] to lead the processed signal back into the signal path.

You can connect a foot switch (not supplied) to the two-pole *[Foot Switch]* socket to turn the internal reverb function on or off.

Connect the mains power connection via the supplied mains cable to an earthed mains power wall outlet to supply the device with operating voltage.

### Turning on

When all connections have been established, turn on the *[POWER]* switch. The *[Power On]* LED then lights up.

### Adjusting sound and volume

You can adjust the volume of the individual signals with the *[Volume]* controls in each channel. The overall volume is set by the *[Volume]* control in the master section.

Turn the *[Tone]* control to shape the sound of the individual signals in each channel. There is an additional 3-band EQ with *[Low]*, *[Mid]* and *[High]* controls for the overall signal in the master section.

You can set the reverb level for each channel separately with the *[Reverb]* controls. The overall reverb level can be adjusted using the *[Reverb]* control in the master section.

Use the *[Tape]* control to adjust the playback volume of the device connected to the *[CD/Tape Play]* sockets.



**Turning off**

If you no longer want to use the device, turn it off with the *[POWER]* switch. The *[Power On]* LED then turns off.

## 7 Technical specifications

Leistungsaufnahme bei 1/8 der max. Ausgangsleistung (rosa Rauschen)	42 W	
Versorgungsspannung	230 V~ 50 Hz	
Ausgangsleistung	80 W (RMS), 160 W (Peak)	
Sicherung	120 V: 5 mm × 20 mm, 2 A, 250 V, träge 230 V: 5 mm × 20 mm, 1 A, 250 V, träge	
Eingangsimpedanz	Mic-Eingänge	1 kΩ
	Line-Eingänge	10 kΩ
	CD/Tape-Eingang	10 kΩ
Maximale Verstärkung	Mic-Eingänge	76 dB
	Line-Eingänge	56 dB
	Tape-Eingang	42 dB

Klangregelung im Kanal		±15 dB @ 5 kHz
Klangregelung in der Summe	Höhen	±15 dB @ 10 kHz
	Mitten	±15 dB @ 1 kHz
	Tiefen	±15 dB @ 100 Hz
Schutzschaltung	Stummschaltung nach Einschalten	2 Sekunden
Abmessungen (B × H × T)	500 mm × 620 mm × 320 mm	
Gewicht	18 kg	

## 8 Plug and connection assignment

### Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

### Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

**1/4" TS phone plug (mono, unbalanced)**



1	Signal
2	Ground, shielding

**1/4" TRS phone plug (mono, balanced)**




1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground

## 1/4" TRS phone plug (stereo, unbalanced)




1	Signal (left)
2	Signal (right)
3	Ground

## XLR plug (balanced)

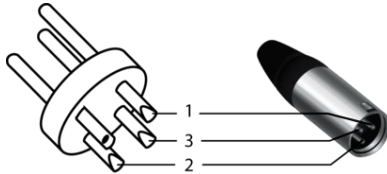

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)

**XLR plug (unbalanced)**

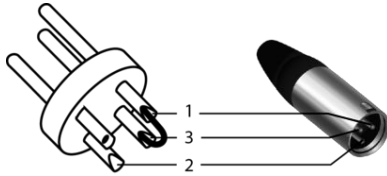 

1	Ground, shielding
2	Signal
3	Bridged to pin 1

## 9 Troubleshooting

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

Symptom	Remedy
The unit does not work, no sound, no indicator lights up.	Check the mains connection and the main fuse. Disconnect the device from the mains power supply. Open the fuse holder beneath the IEC chassis connector (21) and check the fuse. If it's blown, replace it by a new fuse with same specifications. Refit the fuse holder cap and reconnect the device to the mains power supply.

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at [www.thomann.de](http://www.thomann.de).



## 10 Cleaning

### Device components

Clean the device components that are accessible from the outside regularly. The cleaning frequency depends on the operating environment: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the device components.

- Clean with a dry soft cloth.
- Stubborn dirt can be removed with a slightly dampened cloth.
- Never use solvents or alcohol for cleaning.

### Fan grids

The fan grids of the device must be cleaned on a regular basis to remove dust and dirt. Before cleaning, switch off the device and disconnect AC-powered devices from the mains. Use a lint-free damp cloth for cleaning. Never use solvents or alcohol for cleaning.

## 11 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

### Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · [www.thomann.de](http://www.thomann.de)