

Pocket Master I

Features::

- Provides 3 functions
- ✓ Blackout switch
- ✓ Function switch
- ✓ Mode switch

- User modes offer additional function switches, such as Strobe, 2 light programmes, Gobo and colour change, Sound to Light
- \checkmark Dimensions: 88 \times 57 \times 20 mm
- ✓ Weight: 0.32 kg

Operating:

Use the Mode button to switch between different modes, e. g., fast / slow, audio / manual / auto, position, latch, . . . according to the functions.

Use the Function button to select a variety of functions such as Strobe, PAN / TILT motion, Gobo or colour changes, PAN / TILT positions. The functions vary from device to device.

The various functions of the devices can be operated and synchronized via Pocket Master I.

For more information about the devices and their functions, refer to the respective instruction manual.

Suitable for use with BL-50, BL-100, FL-50, FL-110 DMX, FX-330, FX-550, FX-440 DMX, HL-40 DMX, MH150, MH250S, MH-360, MH-575 S MKII Pro Spot, MV250H, SC-50, SC-100, Power Strobe 1500, NovaSpot 250.

This device serves as a simple hand-held device to control various effect lighting fixtures via Master / Slave link. Use the device only as described here. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices. For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste. Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



Thomann GmbH Hans-Thomann-Straße 1 • 96138 Burgebrach Germany • www.thomann.de