



Millenium

BS-2400
speaker stand

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

04.09.2015, ID: 168996

Table of contents

1	General notes.....	4
2	Safety notes.....	6
3	Features.....	9
4	Instructions for use.....	10
5	Technical data.....	15
6	Protecting the environment.....	16


1 General notes

This user manual contains important information on the safe operation of the product. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this product. If you sell the product to another user, be sure that they also receive this manual.

Our products are subject to a process of continuous development. We therefore reserve the right to make changes without notice.

Symbols and signal words

This section provides an overview of the symbols and signal words used in this user manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

2 Safety notes

Intended use

This speaker stand is used for stable fixing and height-adjustable installation of loudspeaker cabinets. Use the product only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This product may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this product only if they are supervised or instructed by a person who is responsible for their safety.

Safety**DANGER!****Danger for children**

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.

**CAUTION!****Danger of tipping when transported under load**

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.

3 Features

Features of the speaker stand:

- Can be extended up to a height of 2 m (79 in.)
- Centric load up to 50 kg (110 lbs)
- Extension tube made of hardened steel
- Legs and cross braces made of aluminium
- M10 female thread at the top end
- TÜV/GS approved
- Transport length in folded condition: 1.20 m (47.2 in.)

4 Instructions for use

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



CAUTION!

Danger of tipping when transported under load

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.



NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

Installation



1. ➤ Unfold the legs of the stand until the cross braces are in a horizontal position.
2. ➤ Tighten the locking screw at the stand base to fix this position.
3. ➤ Lift the loudspeaker cabinet onto the extension tube. The weight of the loudspeaker cabinet to be installed must not exceed the maximum centric load of 50 kg (110 lbs).
4. ➤ Fold out the hand crank.
5. ➤ To adjust the height, untighten the locking screw at the crank case.
6. ➤ Press and hold the yellow security button at the crank case while adjusting the desired height with the hand crank.
7. ➤ Release the yellow security button at the crank case, fix the position of the extension tube with the locking screw at the crank case and fold the hand crank back in.

Removal

1. ▶ Fold out the hand crank.
2. ▶ Untighten the locking screw at the crank case.
3. ▶ Press and hold the yellow security button at the crank case while fully lowering the extension tube.
4. ▶ Release the yellow security button at the crank case, fix the position of the extension tube with the locking screw at the crank case and fold the hand crank back in.
5. ▶ Lift off the loudspeaker cabinet from the extension tube.
6. ▶ Tighten the locking screw at the stand base.
7. ▶ Fold the legs of the stand.

5 Technical data

Rated centric load	50 kg (110 lbs)
Minimum support height	1,240 mm (48.8 in.)
Maximum support height	2,015 mm (79.3 in.)
Insert pipe	36 mm (1.4 in.) in diameter
Stand pipe	42 mm (1.7 in.) in diameter
Stand legs	25 mm (1 in.) in diameter
Weight	8.2 kg (18.1 lbs)
Transport length in folded condition	120 cm (47.2 in.)
Colour	Black

6 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

BS-2400



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · www.thomann.de