

Millenium

SLS300
lighting stand

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

27.01.2017, ID: 180075

Table of contents

1	General notes.....	4
2	Safety instructions.....	6
3	Features	9
4	Operating.....	10
5	Technical specifications.....	26
6	Protecting the environment.....	27


1 General notes

This user manual contains important information on the safe operation of the product. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this product. If you sell the product to another user, be sure that they also receive this manual.

Our products are subject to a process of continuous development. We therefore reserve the right to make changes without notice.

Symbols and signal words

This section provides an overview of the symbols and signal words used in this user manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

2 Safety instructions

Intended use

This light stand is intended to be used for the stable mounting and height-adjustable positioning of spotlights. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.



CAUTION!

Danger of tipping when transported under load

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.

3 Features

Special features:

- Quick and easy assembly
- 3 m wide crossbar, optionally expandable to max. 4.5 m
- Support height up to 3 m
- Maximum weight-bearing capacity of the system: 25 kg
- Maximum weight-bearing capacity per tripod: 18 kg

4 Operating

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



CAUTION!

Danger of tipping when transported under load

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



CAUTION!

Danger of tipping on unsuitable surfaces

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



CAUTION!

Danger of tipping due to overload

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.



NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

Scope of delivery



Before you set up your light stand, check the completeness of the delivery according to the following list:

1. ▶ Truss section A (2 ×)



2. ▶ T-piece B without bolt (2 ×)

3. ▶ Pipe C without screw joint (1 ×)



4. ▶ Pipe D with screw joints (2 ×)





5. ▶ T-piece E with bolt (4 ×)




6. ▶ Stand F (2 ×)

7. Allen key



Assembly

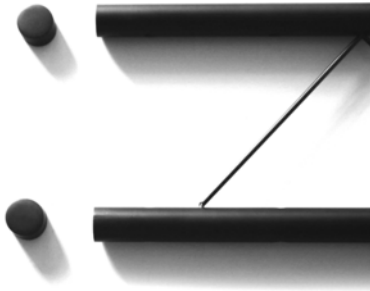

Basically you can carry out the following steps on your own. But with the assistance of a second person the assembly will be much easier.

1. ➤ Remove the rubber caps from the ends of the truss sections (A).



2. ▶ Attach the two T-pieces (B) to the ends of the tube (C).




3. ▶ Plug the combination of (B) and (C) on the open side of a truss section (A). Then slide the tubes (D) through the T-pieces (B) into truss section (A) and screw the tubes (D).



4. ➤ Plug the second truss section on the open end and screw it.



5. ➤ Insert the T-pieces (E) on the outer ends of the two truss sections (A).

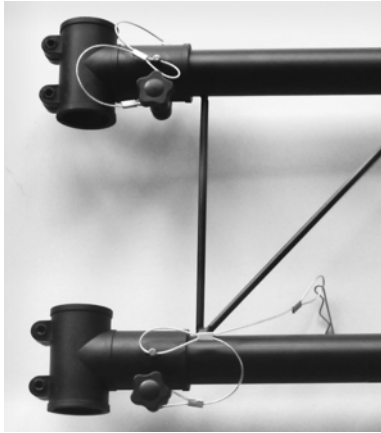

- 6.** ➤ Secure the T-pieces (E) with the safety pin.



- 7.** ▶ Unfold the legs of the tripod until the cross braces are in a horizontal position.
- 8.** ▶ Fix this position with the safety screw on the carriage to which the three feet are attached.
- 9.** ▶ Pull out the safety pin and loosen the safety screw on the extension tube.
- 10.** ▶ Pull out the extension tube to the desired height and insert the safety pin through the appropriate grid holes. Then slide the safety cotter through the hole of the safety bolt.
- 11.** ▶ Fix the position of the extension tube with the safety screw on the extension tube.



- 12.** ▶ Plug the truss with the T-pieces on the extension tube of the stands and attach the truss with the hex screws of the T-pieces (E).
- 13.** ▶ Install the spotlight(s) if necessary with adapters on the truss. Observe the instructions of the respective manufacturer. The maximum load capacity of the truss of 25 kg (18 kg per stand) must not be exceeded.

Dismounting

1. ➤ Remove the spotlight(s).
2. ➤ Loosen the Allen screws on the T-pieces (E) at the ends of the truss and pull the truss from the tripods.
3. ➤ Disassemble the truss in the reverse order of the assembly instructions as far as it makes sense to you for transportation or storage in respect of any next assembly.
4. ➤ Pull out the safety bolt at the tripod and hold the extension tube while you loosen the safety screw on the extension tube.
5. ➤ Slide the extension tube all the way down and slide the safety pin through the appropriate grid holes.
6. ➤ Fix the position of the extension tube with the safety screw on the extension tube.
7. ➤ Loosen the screw on the carriage to which the three feet are attached.
8. ➤ Fold up the legs of the tripod.
9. ➤ Pack all parts of the system in their original package, as possible, and store the package in a dry place protected from moisture.

5 Technical specifications

Crossbar	3 m wide, consisting of two truss parts, each 1.50 m, optionally expandable to max. 4.50 m
Pipe distance crossbar (outside)	27 cm
Pipe diameter crossbar	39 mm
Maximum weight-bearing capacity of the system	25 kg
Maximum weight-bearing capacity per tripod	18 kg
Maximum support height	3 m
Total weight of the system	12 kg
Colour	Black

6 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

SLS300



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · www.thomann.de