

Manual

Kick Box™ Mark III



Congratulations and thank you for purchasing a FINHOL product. FINHOL produces at highest standards. All Finhol products are strictly quality inspected before delivery.

The Kick Box™ Mark III is the first digital stomp box. All previous stomp boxes work either with a built-in microphone or a built-in pickup system.

The disadvantages of this analog technology is obvious, on the one hand, these devices have problems with feedback, on the other hand one needs powerful amplifier system that can handle the deep indifferent „Bloppsound“.


With the Kick Box™ Mark III there is no feedback, the real sample sound is always good, even via small Acoustic-Amp's.

Another advantage lies in the choice of 2 sounds, this is not possible with current stomp boxes, switching between the two sounds is made possible by a small toggle switch on the front of the Kick Box™ Mark III.

Further on the Kick Box™ Mark III has an additional input for the guitar, one can use this opportunity to mixed both signals. Many guitarists use small acoustic guitar amps which have only 2 inputs usually for guitar and microphone, for this application, the Kick Box™ Mark III is perfect.

The Kick Box™ Mark III can be operated with an internal battery, as well as an external power supply, which is part of the delivery.

Sound 1: Bass Drum
Sound 2: Cajon Bass

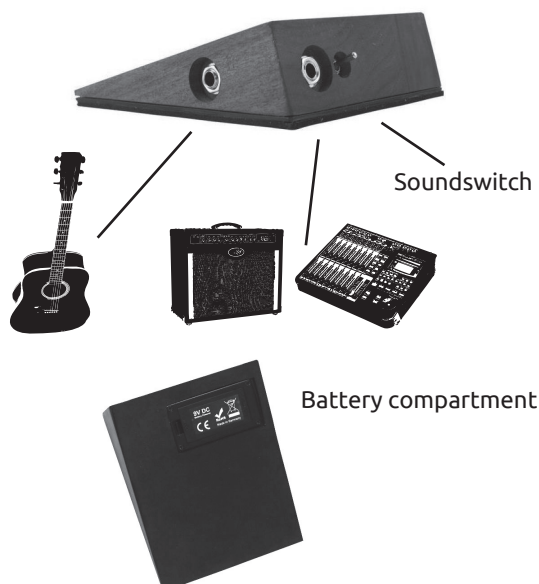

Technical Data

- Switch for 2 sounds
- Sensor controlled
- Velocity sensitive (Dynamicrange 5,46 dB)
- Accumulator / Battery-Container: for 9 V Block
- DC socket for 9 Volt Power Supply (- Pin / + Housing)
- Microprocessor controlled
- Real Sample Play
- Solid walnut oiled (150x120x40 mm)
- Weight appr. 220 gr.
- Anti-slip mat
- Input jack 6.3 mm unbalanced for guitar
- Output jack 6.3 mm unbalanced (unit is turned on plugged in)
- Operating time: approx. 20 h
- CE, ROHS, Made in Germany

Technical Data Power Supply

- 9 Volt DC
- Power 500 mA
- Plug: 5,5 mm / 2,1 mm
- Polarity: (- Pin + Housing)
- Switching power supply technology

Warning!

Store the product in a place that is neither excessively dry nor excessively moist. And since the temperature influences the humidity neither excessively hot ore excessively cold.

Don` t take this product apart and don` t try to repair it yourself.

Always keep this product in a case ore gigbag, to it`s safety.

The + (plus) - (minus) contacts of battery or accumulator and battery compartment must match. Inserted the wrong way (reverse polarity wich means + on - and - on +) the electronics will not work and can be damaged. Also the battery or accumulator could overheat in certain circumstauces and thereby damage the product ore it could start a fire.

Only use highquality batteries or accumulators.

Always turn the product off after use, by pulling all plugs otherwise the battery or accumulator could discharge through standby current.

If you shouldn` t use this product for more than 1 week, please take the battery or accumulator out of the compartment. With batteries and accumulators there is always the risk of leakage wich could highly damage your product.

Always dispose the batteries and accumulators properly. Don` t ever throw batteries or accumulators into fire, this could cause an explosion and severe injuries.-

Finhol Beteiligungsgesellschaft mbH
Geschäftsbereich Musikinstrumente und Zubehör
Geschäftsführer: Udo Amend
Registergericht: Amtsgericht Mannheim
Nobelstr. 9 - 13 • D-76275 Ettlingen
www.shop finhol.de • finhol@gmx.de
HRB: 106334 • St. Nr.:35006/04661 • USt-IdNr.: DE156664640
WEEE-Reg. Nr. DE 508 98 772