



Phantom 20 LED Beam

ORDERCODE 40182



Highlite International B.V.
Vestastraat 2
6468 EX Kerkrade
The Netherlands
Phone: +31 45-5667700

SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec.

The Showtec Phantom 20 LED Beam brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



Showtec Phantom 20 LED Beam™ Product Guide

Warning 2

- Safety Instructions 2
- Operating Determinations 4
- Rigging 4
- Return Procedure 6
- Claims 6

Description of the device 7

- Overview 7
- Backside 8

Installation 8

Set Up and Operation 8

- Control Modes 9
 - One Phantom (Built-in Programs) 9
 - One Phantom (Sound-control) 9
 - Multiple Phantoms (Master/Slave control) 9
 - Multiple Phantoms (DMX Control) 10
- Fixture Linking 11
- Data Cabling 11
- Control Panel 12
- Control Mode 12
- DMX Addressing 12
- Menu Overview 13
 - Main Menu Options 14
 - DMX Addressing 14
 - Built-in Programs Mode 15
 - DMX Advanced/Basic Mode 15
 - Advanced Mode 16
 - Audio Sensitivity 16
 - Pan movement Mode 16
 - Tilt movement Mode 16
 - Display Mode 16
 - Pan Mode 16
 - Tilt Mode 16
 - System Information 17
 - Password Change 17
- DMX Channels 18
 - 12 Channels 18
 - 9 Channels 20
- Channel settings 22

Maintenance 22

- Replacing a Fuse 23
- Static Gobo-wheel, Colorwheel 23

Troubleshooting 23

- No Light, No Movement - All Products 23
- No Response to DMX 23

Product Specification 25

Warning

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec Phantom 20 LED Beam with IEC powercable 0,9m
- 1 bracket for truss mounting
- Safety eye
- User manual



LED Expected Lifespan

LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. If improving your lifespan expectancy is of a higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.



CAUTION!

**Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!**



Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use device indoor, avoid contact with water or other liquids.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- If the lens is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Movinghead must be installed out of the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the Phantom. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



CAUTION ! EYEDAMAGES !
Avoid looking directly into the light source.
(meant especially for epileptics) !



Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 0.5 meter.
- The maximum ambient temperature $t_a = 45^\circ\text{C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 35°C .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash, etc.

You endanger your own safety and the safety of others!

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !


Procedure:

- If the projector is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the projector, with the mounting-bracket, to the trussing system.
- The projector must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the projector, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.



The Phantom can be placed on a flat stage floor or mounted to any kind of truss by a clamp.

Mounting a clamp to the underside of the Phantom moving head

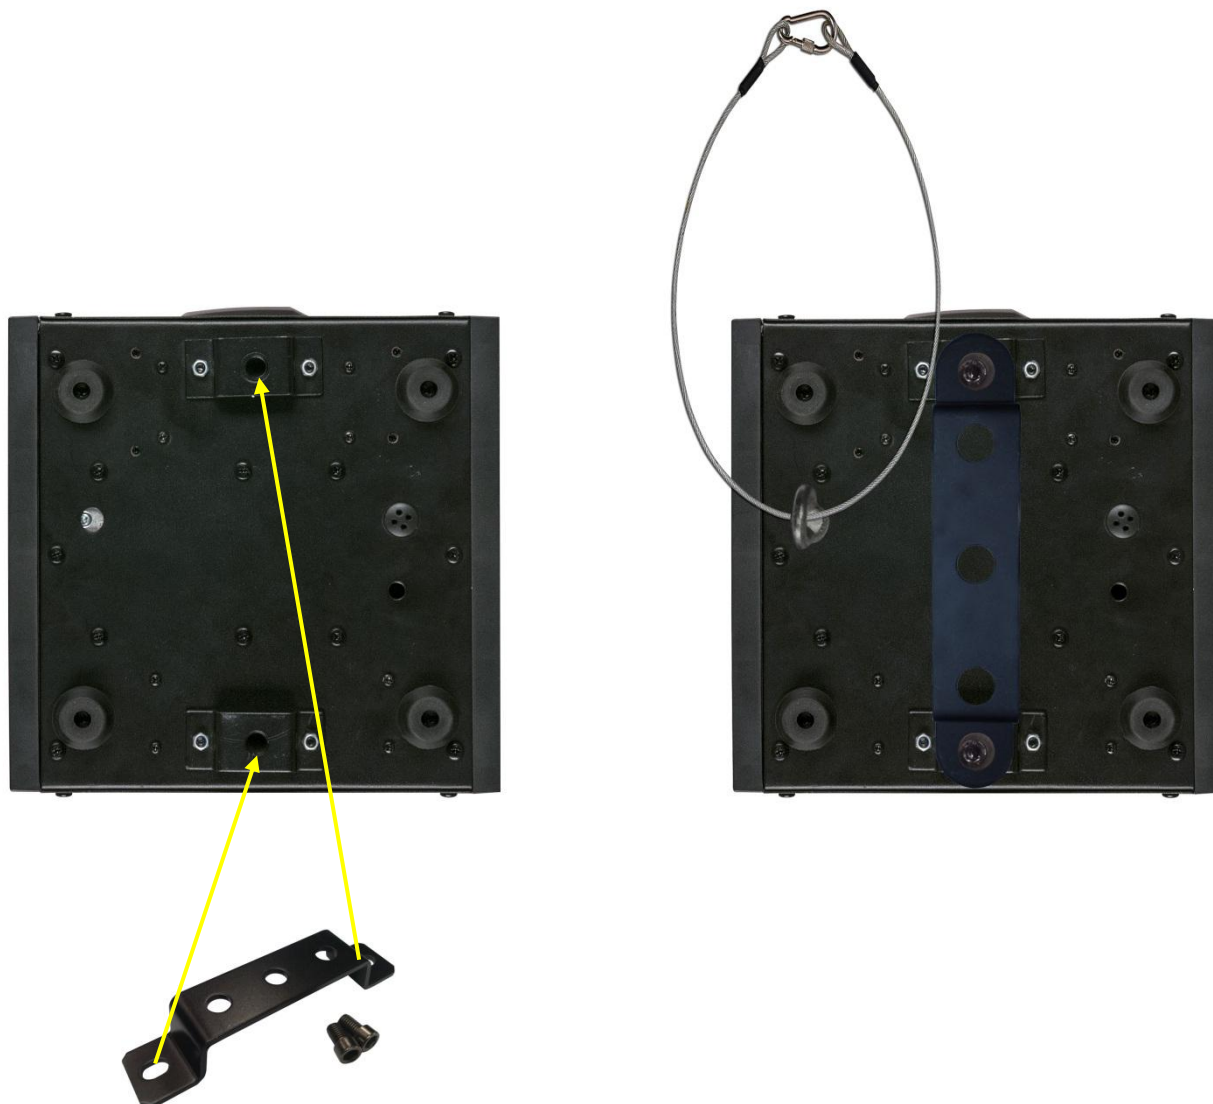


Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The Showtec Phantom 20 LED Beam is a moving-head with high output and great effects.

- Input Voltage: 100-240 VAC, 50/60Hz
- Power consumption: 65W max. at full output
- LED Drive Current: 5A
- DMX-control via standard DMX-controller
- User-selectable Pan ranges, 540° / 360° / 180°
- User-selectable Tilt ranges, 270° / 180° / 90°
- Reverse Pan / Tilt movement
- Special: Pan / Tilt movement blackout
- Pan 0° -- 540°
- Tilt 0° -- 270°
- Pan/Tilt resolution: 16 bit
- Control: DMX-512, Master/Slave, Sound-controlled
- 16 Built-in programs selectable by DMX
- Light Source: 1 x 20W LED
- Colourwheel with 7 dichroic-colours and white
- Color functions: Rainbow-flow effect
- Rotating Gobowheel with 9 static metal gobos and open with Gobo Shake Function (No replaceable gobos)
- Rotation: Bi-directional
- Gobo functions: Gobo-flow effect, Gobo shake
- Single clamp bracket, which makes it easy to handle and position in truss systems
- Output: 7100 Lux @ 5m.
- Beam Angle: 5°
- Dimmer: 0-100%
- Strobe: 0-20Hz
- Housing: Black Metal & Flame-retardant plastic
- Fixture Connection: XLR Data in/out (XLR 3-pin), IEC Power in
- Fuse F2A / 250V
- Dimensions: 205 x 214 x 273 mm(WxDxH)
- Weight: 4,7 kg
- User selectable Basic (9CH) or Advanced (12CH) operating modes

Overview



Fig. 1

1) Lens

2) Menu Buttons + LCD Display

Backside



Fig. 2

- 3) IEC power connector + Fuse F2A 250V
- 4) DMX signal connector (IN) 3-pin
- 5) DMX signal connector (OUT) 3-pin

Installation

Remove all packing materials from the Phantom 20 LED Beam. Check that all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Set Up and Operation

Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Connect the device to the main power supply. The device can be music-controlled by its built-in microphone.

Control Modes

There are 4 modes:

- Stand-alone (built-in programs)
- Sound-controlled
- Master/Slave
- DMX512 (12 Channels ADVANCED or 9 channel BASIC)

One Phantom (Built-in Programs)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. When the Phantom is not connected by a DMX-cable, it functions as a stand-alone device. Please see page 15 for more information about the built-in programs.

One Phantom (Sound-control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. When the Phantom is not connected by a DMX-cable, it functions as a stand-alone device. Turn on the music. If the device is set to sound-control, then the Phantom will react to the beat of the music. Please see page 15 for more information about the sound-control options.

Multiple Phantoms (Master/Slave control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Phantom.

The pins:



1. Earth
2. Signal -
3. Signal +

4. Link the units as shown in (Fig. 3), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 15 (Built-in Programs, or Music control). This means on the master device you can set your desired operation Mode and all slave devices will react the same as the master device.

Multiple Phantoms (Master/Slave control)



Multiple Phantoms (DMX Control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Phantoms and other devices.


Occupation of the XLR-connection:

DMX-OUTPUT XLR mounting-socket:




- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

DMX-input XLR mounting-plug:

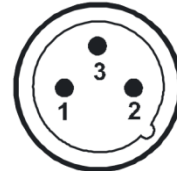

- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

The transformation of the controller line of 3 pins and 5 pins (plug and socket)

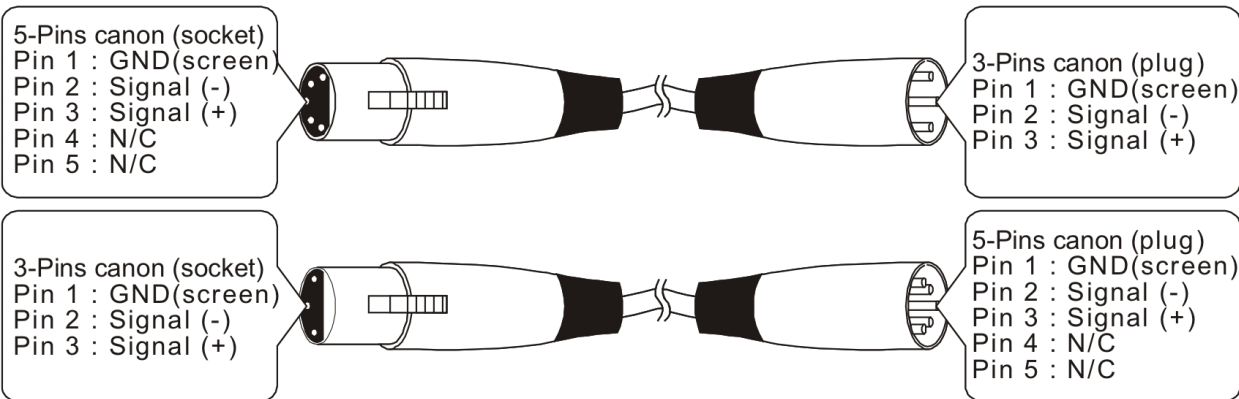

4. Link the units as shown in (figure 4), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Phantoms DMX Set Up



Note : Link all cables before connecting electric power



Fig. 4

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters
Maximum recommended number of Phantoms on a DMX data link: 30 fixtures

Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p. **Ordercode** FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

The Phantom 20 LED Beam can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

Control Panel

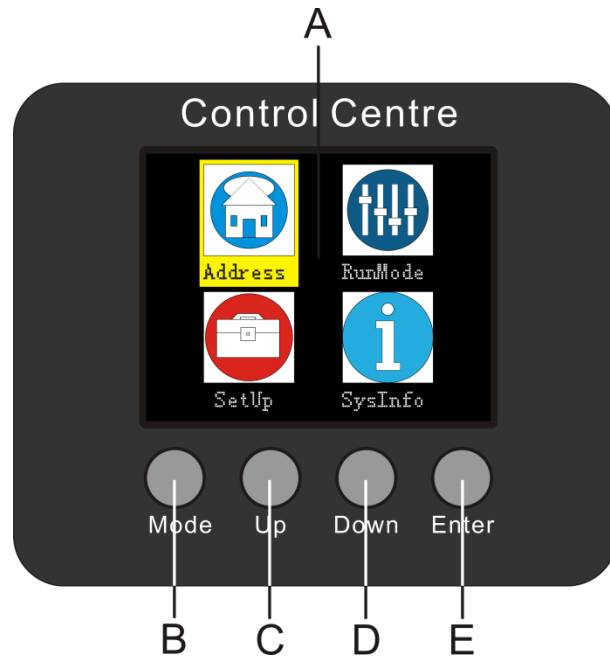


Fig. 5

- A. LCD Display
- B. MODE button
- C. Up Button

- D. Down Button
- E. ENTER Button

Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

DMX Addressing

The control panel on the front side of the base allows you to assign the DMX fixture address, which is the first channel from which the Phantom will respond to the controller.

Please note when you use the controller, the unit has **12** channels.

When using multiple Phantoms, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Phantoms should be **1(001)**; the DMX address of the second Phantom

should be **1+12=13 (013)**; the DMX address of the third Phantom should be **13+12=25 (025)**, etc.

Please, be sure that you don't have any overlapping channels in order to control each Phantom correctly.

If two or more Phantoms are addressed similarly, they will work similarly.

For address settings, please refer to the instructions under "Addressing".

Controlling:

After having addressed all Phantom fixtures, you may now start operating these via your lighting controller.

Note: After switching on, the Phantom will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

If not, the problem may be:

- The XLR cable from the controller is not connected with the input of the Phantom.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

Menu Overview

Up/Down




ENTER



Address setting

001

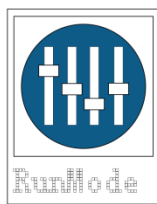


ENTER



Running mode

Dmx	● 12CH
Auto	Auto01
Sound	
Slave	

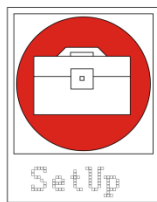


ENTER



Advanced setting

Sensitivity	100
PanReserve	OFF
TiltReserve	OFF
ScreenReverse	OFF
PanAngle	540
TiltAngle	270

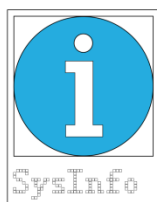

ENTER




System information

Ver	X-20B V1.0
RunningMode	DMX
DmxAddress	001


Main Menu Options




DMX address

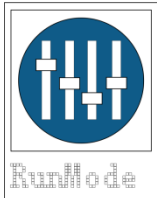

DMX Mode / Built-in Programs / Sound-controlled / Master-Slave Mode

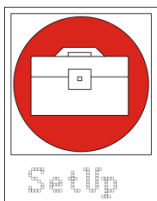


Audio Sensitivity / Pan + Tilt/Reverse Pan + Tilt / Display/Reverse Display/ Pan + Tilt Angle

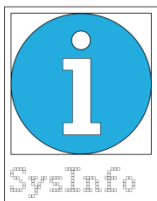

System Info

DMX Addressing

With this menu you can set the DMX address.

1) Press Mode, until the display shows  .
Address

2) Press Enter to confirm. You can choose 512 different DMX addresses.
Use the Up / Down buttons to select the required address from **001** ^{Up/Down} **512** .

3) Once you have set the desired DMX address, press the enter button to store your DMX address.

Built-in Programs Mode

You can select 4 different Programs when using the Phantom.



- 1) Press MODE until the display shows settings, then press ENTER to open the menu and change your settings.
- 2) Use the UP / DOWN buttons to select one of 4 programs.



DMX Advanced/Basic Mode

- 1) When the display shows : **Dmx** , press ENTER to open the menu and change your settings.
- 2) When the display shows : **12CH** , the device has 12 Channels.
- 3) When you press Up/Down, the display will show **9CH** . The device now has 9 channels.

Auto Mode

- 1) Use the Up/Down buttons to scroll through the Running Mode.
- 2) When the display shows : **Auto** , press ENTER to open the menu and change your settings.
- 3) You can choose one of 16 built-in programs by pressing the Up/Down buttons. **Auto01** ^{Up/Down} **Auto16**

Sound-controlled Mode


- 1) Use the Up/Down buttons to scroll through the Running Mode.
- 2) When the display shows : **Sound** , press ENTER.
- 3) The device is now sound-controlled and will react to the music.


Slave Mode

- 1) Use the Up/Down buttons to scroll through the Running Mode.
- 2) When the display shows : **Slave** , press ENTER.
- 3) The device is now a slave device. It will now react the same as its master.

Advanced Mode


You can select 6 different Advanced settings when using the Phantom 20 Beam.

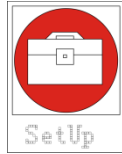


- 1) Press MODE until the display shows , then press ENTER to open the menu and change your settings.
- 2) Use the UP / DOWN buttons to select all 6 settings.

Advanced setting	
Sensitivity	100
PanReverse	OFF
TiltReverse	OFF
ScreenReverse	OFF
PanAngle	540
TiltAngle	270

 
Audio Sensitivity

- 1) When the display shows : , the device is in Audio Sensitivity Mode.
- 2) Press ENTER to open the menu and change your settings.
- 3) When you press Up/Down, you can set the audio sensitivity from 000 to 100. T

 
Pan movement Mode

- 1) When the display shows :  and has been set to OFF, the device is in normal Pan Mode.
- 2) Press ENTER to open the menu and change your settings.
- 3) When you press Up/Down and set the device to ON, the Pan function is reversed.

Tilt movement Mode

- 1) When the display shows :  and has been set to OFF, the device is in normal Tilt Mode.
- 2) Press ENTER to open the menu and change your settings.
- 3) When you press Up/Down and set the device to ON, the Tilt function is reversed.

 Display Mode

- 1) When the display shows :  and has been set to OFF, the device is in normal Display Mode.
- 2) Press ENTER to open the menu and change your settings.
- 3) When you press Up/Down and set the device to ON, the Display function is reversed.

Pan Mode

- 1) When the display shows : , then press ENTER to open the menu and change your settings. You are able to set 3 different Pan Angles.

540	Pan is 540°.
360	Pan is 360°.
180	Pan is 180°.

Tilt Mode

- 1) When the display shows : , then press ENTER to open the menu and change your settings. You are able to set 3 different Tilt Angles.

270	Tilt is 270°.
180	Tilt is 180°.
090	Tilt is 090°.

System Information

You can see the current Running Mode, the DMX Address and the current Software version.

- 1) Press MODE until the display shows settings.



, then press ENTER to open the menu and **view** your

System information	
Ver	X-20B V1.0
RunningMode	DMX
DmxAddress	001

Password Change

This is a Service Function.

- 1) Press and hold **MODE** for 3 seconds.
- 2) The display will show 0000.
- 3) Press the Up button to change the value. Press the Down button to go to the next digit.
- 4) Enter **password: 2323**.
- 5) A new menu will open and the display shows:

Zero Adjust	
PAN	128
TILT	128
GOBO	128
COLOR	128
LAMP	000

- 6) You can scroll through the menu with the Up/Down buttons.
- 7) Press ENTER to open a specific menu and change a certain value.
- 8) When you press Up/Down, you can set the value of PAN, TILT, GOBO and COLOR from 000 to 255. You can change the LAMP value from 000 to 070.
- 9) Press the ENTER button to store your setting. This option will auto-exit after 10 seconds.

DMX Channels

12 Channels

Channel 1 – Horizontal movement (Pan)

Push the slider up, in order to move head horizontally (PAN).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 540° and stopped at any position you wish.

Channel 2 – Pan fine 16 bit

Channel 3 – Vertical movement (Tilt)

Push the slider, up in order to move head vertically (TILT).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 270° and stopped at any position you wish.

Channel 4 – Tilt fine 16 bit

Channel 5 – PAN/TILT Speed

0-255	From Max Speed (0) to Min. Speed (255)
-------	----------------------------------------

Channel 6 – Colourwheel

Linear color change following the movement of the slider. Between 128 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-15	Open / White
16-31	Blue
32-47	Yellow
48-63	Pink
64-79	Green
80-95	Red
96-111	Light Blue
112-127	Orange
128-191	Clockwise rotation (CW) rainbow effect from slow to fast
192-255	Counter-clockwise rotation (CCW) rainbow effect from slow to fast

Channel 7 – Static Gobo-wheel + Gobo Shake

0-9	Open / White
10-15	Gobo 1
16-21	Gobo 2
22-27	Gobo 3
28-33	Gobo 4
34-39	Gobo 5
40-45	Gobo 6
46-51	Gobo 7
52-57	Gobo 8
58-63	Gobo 9
64-69	Gobo Shake 9 from slow to fast
70-75	Gobo Shake 8 from slow to fast
76-81	Gobo Shake 7 from slow to fast
82-87	Gobo Shake 6 from slow to fast
88-93	Gobo Shake 5 from slow to fast
94-99	Gobo Shake 4 from slow to fast
100-105	Gobo Shake 3 from slow to fast
106-111	Gobo Shake 2 from slow to fast
112-117	Gobo Shake 1 from slow to fast
118-127	Open / White
128-191	Clockwise rotation (CW) rainbow effect from slow to fast
192-255	Counter-clockwise rotation (CCW) rainbow effect from slow to fast

Channel 8 – Dimmer intensity

0-255	From black to brightest
-------	-------------------------

Channel 9 – Shutter / Strobe (Dimmer must be open)

0-3	Close
4-7	Shutter open
8-76	Strobe effect, from slow to fast (0-10 flashes/sec.)
77-145	Pulse strobe effect from slow to fast
146-215	Random strobe effect, from slow to fast (0-10 flashes/sec.)
216-255	Shutter open

Channel 10 – Channel Functions

0-9	No Function
10-14	Blackout during Pan/Tilt movement
15-19	Blackout during Colorwheel movement
20-24	Blackout during Gobowheel movement
25-29	Blackout during Pan/Tilt/Colorwheel movement
30-34	Blackout during Pan/Tilt/Gobowheel movement
35-39	Blackout during Gobowheel /Colorwheel movement
40-44	Blackout during Pan/Tilt/Gobowheel /Colorwheel movement
45-69	No Function
70-74	Reset after 5 seconds
75-79	No Function
80-84	X, Y negative direction after 5 seconds
85-89	X negative direction after 5 seconds
90-94	No Function
95-99	Y negative direction after 5 seconds
100-104	No Function
105-109	Cancel X negative direction after 5 seconds
110-114	No Function
115-119	Cancel Y negative direction after 5 seconds
120-124	No Functions
125-129	Cancel X, Y direction after 5 seconds
130-255	No Function

Channel 11 – Built-in Programs + Sound-controlled Program

0-7	No Function
8-22	Built-in Program 1
23-37	Built-in Program 2
38-52	Built-in Program 3
53-67	Built-in Program 4
68-82	Built-in Program 5
83-97	Built-in Program 6
98-112	Built-in Program 7
113-127	Built-in Program 8
128-142	Built-in Program 9
143-157	Built-in Program 10
158-172	Built-in Program 11
173-187	Built-in Program 12
188-202	Built-in Program 13
203-217	Built-in Program 14
218-232	Built-in Program 15
233-247	Built-in Program 16
248-255	Sound-controlled Program

Channel 12 – Speed

0-2557	From fast to slow
--------	-------------------

9 Channels

Channel 1 – Horizontal movement (Pan)

Push the slider up, in order to move head horizontally (PAN).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 540° and stopped at any position you wish.

Channel 2 – Vertical movement (Tilt)

Push the slider, up in order to move head vertically (TILT).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 270° and stopped at any position you wish.

Channel 3 – Colourwheel

Linear color change following the movement of the slider. Between 128 - 255, the color-wheel rotates continuously the so-called "Rainbow" effect.

0-15	Open / White
16-31	Blue
32-47	Yellow
48-63	Pink
64-79	Green
80-95	Red
96-111	Light Blue
112-127	Orange
128-191	Clockwise rotation (CW) rainbow effect from slow to fast
192-255	Counter-clockwise rotation (CCW) rainbow effect from slow to fast

Channel 4 – Static Gobo-wheel + Gobo Shake

0-9	Open / White
10-15	Gobo 1
16-21	Gobo 2
22-27	Gobo 3
28-33	Gobo 4
34-39	Gobo 5
40-45	Gobo 6
46-51	Gobo 7
52-57	Gobo 8
58-63	Gobo 9
64-69	Gobo Shake 9 from slow to fast
70-75	Gobo Shake 8 from slow to fast
76-81	Gobo Shake 7 from slow to fast
82-87	Gobo Shake 6 from slow to fast
88-93	Gobo Shake 5 from slow to fast
94-99	Gobo Shake 4 from slow to fast
100-105	Gobo Shake 3 from slow to fast
106-111	Gobo Shake 2 from slow to fast
112-117	Gobo Shake 1 from slow to fast
118-127	Open / White
128-191	Clockwise rotation (CW) rainbow effect from slow to fast
192-255	Counter-clockwise rotation (CCW) rainbow effect from slow to fast

Channel 5 – Dimmer intensity

0-255	From black to brightest
-------	-------------------------

Channel 6 – Shutter / Strobe (Dimmer must be open)

0-3	Close
4-7	Shutter open
8-76	Strobe effect, from slow to fast (0-10 flashes/sec.)
77-145	Pulse strobe effect from slow to fast
146-215	Random strobe effect, from slow to fast (0-10 flashes/sec.)
216-255	Shutter open

Channel 7 – Channel Functions

0-9	No Function
10-14	Blackout during Pan/Tilt movement
15-19	Blackout during Colorwheel movement
20-24	Blackout during Gobowheel movement
25-29	Blackout during Pan/Tilt/Colorwheel movement
30-34	Blackout during Pan/Tilt/Gobowheel movement
35-39	Blackout during Gobowheel /Colorwheel movement
40-44	Blackout during Pan/Tilt/Gobowheel /Colorwheel movement
45-69	No Function
70-74	Reset after 5 seconds
75-79	No Function
80-84	X, Y negative direction after 5 seconds
85-89	X negative direction after 5 seconds
90-94	No Function
95-99	Y negative direction after 5 seconds
100-104	No Function
105-109	Cancel X negative direction after 5 seconds
110-114	No Function
115-119	Cancel Y negative direction after 5 seconds
120-124	No Functions
125-129	Cancel X, Y direction after 5 seconds
130-255	No Function

Channel 8 – Built-in Programs + Sound-controlled Program

0-7	No Function
8-22	Built-in Program 1
23-37	Built-in Program 2
38-52	Built-in Program 3
53-67	Built-in Program 4
68-82	Built-in Program 5
83-97	Built-in Program 6
98-112	Built-in Program 7
113-127	Built-in Program 8
128-142	Built-in Program 9
143-157	Built-in Program 10
158-172	Built-in Program 11
173-187	Built-in Program 12
188-202	Built-in Program 13
203-217	Built-in Program 14
218-232	Built-in Program 15
233-247	Built-in Program 16
248-255	Sound-controlled Program

Channel 9 – Speed

0-2557	From fast to slow
--------	-------------------

Channel settings

40182 Phantom 20 LED Beam Fixture-settings												
Channel	1	2	3	4	5	6	7	8	9	10	11	12
Function	Pan	Pan-Fine	Tilt	Tilt-Fine	Pan/Tilt Speed	Colorwheel	Static Gobowheel	Dimmer	Shutter Strobe	Functions	LED Chasing Program	Auto Program Speed
255					255 Slow					216-255 No Function	248-255 Sound Active	
128					0 Fast					176-215 No Function	233-247 Auto Program 16	
0					0 Fast					136-175 No Function	218-232 Auto Program 15	

Fig. 6

Maintenance

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

The Showtec Phantom 20 LED Beam requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. The front lens will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light-output very quickly.

The cooling-fans, colour-wheel, the gobowheel, the gobos and the internal lenses should be cleaned monthly with a soft brush.

Please clean internal components once a year with a light brush and vacuum cleaner.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a screwdriver into the slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Static Gobo-wheel



Fig. 7

Colorwheel

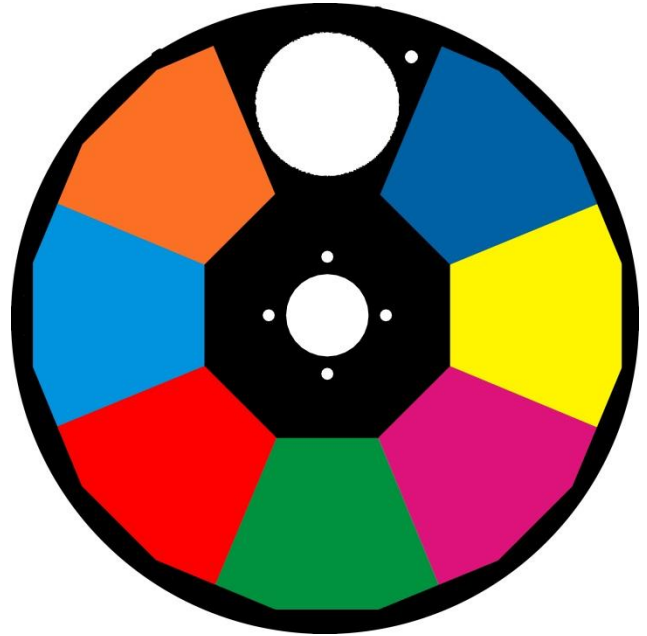


Fig. 8

Troubleshooting

No Light, No Movement - All Products

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas: the power supply, the lamp, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The LEDs. Return the Phantom 20 LED Beam to your Showtec dealer.
3. The fuse. Replace the fuse. See page 23 for replacing the fuse.

No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX setting. Make sure that DMX addresses are correct.
2. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
3. Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

Problem	Probable cause(s)	Remedy
One or more fixtures are completely dead.	No power to the fixture	<ul style="list-style-type: none"> • Check that power is switched on and cables are plugged in.
	Primary fuse blown.	<ul style="list-style-type: none"> • Replace fuse.
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	<ul style="list-style-type: none"> • Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	<ul style="list-style-type: none"> • Install a phase reversing cable between the controller and the first fixture on the link.
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	<ul style="list-style-type: none"> • Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.
	Bad data link connection	<ul style="list-style-type: none"> • Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Data link not terminated with 120 Ohm termination plug.	<ul style="list-style-type: none"> • Insert termination plug in output jack of the last fixture on the link.
	Incorrect addressing of the fixtures.	<ul style="list-style-type: none"> • Check address setting.
	One of the fixtures is defective and disturbs data transmission on the link.	<ul style="list-style-type: none"> • Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. • Have the defective fixture serviced by a qualified technician.
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	<ul style="list-style-type: none"> • Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
Shutter closes suddenly	The color wheel, gobowheel or a gobo has lost its index position and the fixture is resetting the effect.	<ul style="list-style-type: none"> • Contact a technician for servicing the problem persists.
No light or lamp cuts out intermittently	Fixture is too hot.	<ul style="list-style-type: none"> • Allow fixture to cool. • Clean fan. • Make sure air vents at control panel and front lens are not blocked. • Turn up the air conditioning .
	LEDs damaged	<ul style="list-style-type: none"> • Disconnect fixture and return to your dealer.
	The power supply settings do not match local AC voltage and frequency.	<ul style="list-style-type: none"> • Disconnect fixture. Check settings and correct if necessary.

Product Specification

Model: Showtec Phantom 20 LED Beam
 Input Voltage: 100-240 VAC, 50/60Hz
 Power consumption: 65W max. at full output
 Fuse F2A / 250V
 Dimensions: 205 x 214 x 273 mm (WxDxH)
 Weight: 4,7 kg

Operation and Programming

Signal pin OUT: pin 1 earth, pin 2 (-), pin 3 (+)
 Set Up and Addressing: LED control panel
 Pan/Tilt resolution: 8-16 bit
 DMX Channels: 12 or 9
 Signal input 3-pin XLR male
 Signal output 3 -pin XLR female

Electro-mechanical effects

DMX-control via standard DMX-controller
 User-selectable Pan ranges, 540° / 360° / 180°
 User-selectable Tilt ranges, 270° / 180° / 90°
 Reverse Pan / Tilt movement
 Special: Pan / Tilt movement blackout
 Pan 0° -- 540°
 Tilt 0° -- 270°
 Pan/Tilt resolution: 16 bit
 Control: DMX-512, Master/Slave, Sound-controlled
 16 Built-in programs selectable by DMX
 Light Source: 1 x 20W LED
 Colourwheel with 7 dichroic-colours and white
 Color functions: Rainbow-flow effect
 Rotation: Bi-directional
 Gobo functions: Gobo-flow effect, Gobo shake
 Rotating Gobowheel with 9 static metal gobos and open with Gobo Shake Function (No replaceable gobos)
 Single clamp bracket, which makes it easy to handle and position in truss systems.
 Output: 7100 Lux @ 5m.
 Beam Angle: 5°
 Input Voltage: 100-240 VAC, 50/60Hz
 Power consumption: 65W max. at full output
 LED Drive Current: 5A
 Dimmer: 0-100%
 Strobe: 0-20Hz
 Housing: Black Metal & Flame-retardant plastic
 User selectable Basic (9CH) or Advanced (12CH) operating modes

Gobos

Colourwheel: heat-resistant and intensify glass; dichroic glass coating
 Max. ambient temperature t_a : 40°C; Max. housing temperature t_b : 80°C
 Cooling: 2 axial fans – 1 fan in the projector and 1 in the base
 Motor: high quality stepping-motor controlled by microprocessors


Minimum distance:

Minimum distance from flammable surfaces: 0.5m
 Minimum distance to lighted object: 1.3m

Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info
 Email: service@highlite.nl

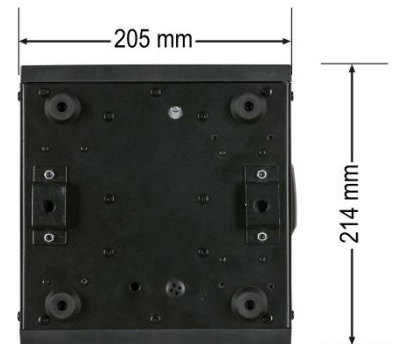



© 2014 Showtec.