

## Manual

Cajokick™



Congratulations and thank you for purchasing a FINHOL product. FINHOL produces at highest standards. All Finhol products are strictly quality inspected before delivery.

The multi percussion pedal for many applications. Whether a cajon player, percussionist or acoustic guitarist, everyone knows the problem, one wants additionally to use the foot.

In addition, every cajon-player wants a game extension for his hands. Although there are a variety of e-drum modules, with corresponding pads on the market, a compact device for foot and hand operation one searches in vain. Exactly this problem is now solved.

The device is controlled by sensors and touch-sensitive features 12 selectable instruments, can be used with an internal 9 volt battery, also it can be operated with an external power supply, which is part of the delivery.

The Sounds:

Cajon Bass, Bass Drum, Synth Bass, Hihat, Ride, Rimshot, Cowbell, Tambourine, Cabasa, Handclap, Clave & Guiro.



## Technical Data

- Rotary switch with mute function for sound change
- Volume control
- Sensitivity control
- Sensor controlled
- Velocity sensitive
- Microprocessor controlled
- Real Sample Play
- Aluminum die-cast housing
- Weight: approx. 300 gr.
- Dimensions: 120 x 90 x 35mm
- Anti-slip mat
- Angle for foot operation
- Fastening material for cajon mounting
- Transport protection through anti-slip mat
- Output jack 6.3 mm unbalanced (unit is turned on plugged in)
- DC Connector: 9 V power supply (- Pin / + Housing)
- Battery compartment on the inside: 9 V Block
- CE, ROHS, Made in Germany

## Technical Data Power Supply

- 9 Volt DC
- Power 500 mA
- Plug: 5,5 mm / 2,1 mm
- Polarity: (- Pin + Housing)
- Switching power supply technology

### Warning!

Store the product in a place that is neither excessively dry nor excessively moist. And since the temperature influences the humidity neither excessively hot ore excessively cold.

Don` t take this product apart and don` t try to repair it yourself.

Always keep this product in a case ore gigbag, to it`s safety.

The + (plus) - (minus) contacts of battery or accumulator and battery compartment must match. Inserted the wrong way (reverse polarity wich means + on - and - on +) the electronics will not work and can be damaged. Also the battery or accumulator could overheat in certain circumstaues and thereby damage the product ore it could start a fire.

Only use highquality batteries or accumulators.

Always turn the product off after use, by pulling all plugs otherwise the battery or accumulator could discharge through standby current.

If you shouldn` t use this product for more than 1 week, please take the battery or accumulator out of the compartment. With batteries and accumulators there is always the risk of leakage wich could highly damage your product.

Always dispose the batteries and accumulators properly. Don` t ever throw batteries or accumulators into fire, this could cause an explosion and severe injuries.-

Finhol Beteiligungsgesellschaft mbH  
Geschäftsbereich Musikinstrumente und Zubehör  
Geschäftsführer: Udo Amend  
Registergericht: Amtsgericht Mannheim  
Nobelstr. 9 - 13 • D-76275 Ettlingen  
www.shop.finhol.de • finhol@gmx.de  
HRB: 106334 • St. Nr.:35006/04661 • USt-IdNr.: DE156664640  
WEEE-Reg. Nr. DE 508 98 772