



**the
t.mix**

mix 1402FX

mixer

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

23.01.2017, ID: 401658

Table of contents

1	General information	4
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	6
2	Safety instructions	8
3	Features	13
4	Installation and starting up	14
5	Connections and controls	15
6	Technical specifications	33
7	Plug and connection assignment	35
8	Protecting the environment	39

1 General information

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used for amplification, mixing and playback of signals from musical instruments and microphones. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety**DANGER!****Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.

**DANGER!****Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



CAUTION!

Possible hearing damage

With loudspeakers or headphones connected, the device can produce volume levels that may cause temporary or permanent hearing impairment.

Do not operate the device permanently at a high volume level. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment.



NOTICE!

Risk of fire

Do not cover the device nor any ventilation slots. Do not place the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Danger of short circuit

Switching on phantom power will damage the device if unbalanced XLR cables are connected.

Only turn on phantom power when exclusively balanced XLR cables are connected.

3 Features

- 14-channel mixer with built-in FX processor
- 8 mono channels (MIC, line) with switchable Low-Cut, 3-band EQ and Panorama control
- 2 stereo channels (line) with 2-band EQ and Balance control
- 1 × AUX control per channel, PRE/POST selectable
- PFL switch per channel
- Master output L/R via 2 × XLR and 2 × 1/4" jack
- CTRL room output L/R (1/4" jack)
- Headphones output (1/4" TRS jack)
- 1 × stereo RCA input
- 1 × stereo RCA output
- FX processor switchable via optional foot switch
- 48 V phantom power, globally switchable
- Headphones output adjustable with CTRL out
- Built-in power supply

4 Installation and starting up

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Before connecting the operating voltage and before connecting or disconnecting audio cables, set all volume controls of the unit to zero to avoid damage to the connected speakers and devices.



NOTICE!

 
Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

5 Connections and controls

Mono channel strip

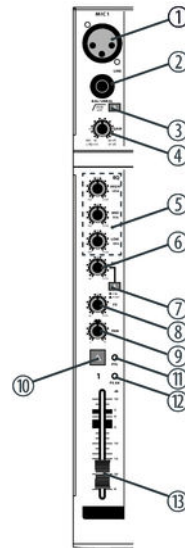


mix 1402FX

1	<i>[MIC]</i> Balanced XLR mono input to connect a microphone.
2	<i>[LINE]</i> 1/4" phone input to connect a line level audio source (keyboards, drum modules etc., balanced or unbalanced).
3	<i>[80 Hz HPF]</i> High pass filter to attenuate rumble noise and other low frequency interference.
4	<i>[GAIN]</i> Rotary control to adjust the input level.
5	<i>[EQ]</i> 3-band EQ for treble <i>[HIGH]</i> , mids <i>[MID]</i> and bass <i>[LOW]</i> .
6	<i>[AUX]</i> Rotary control to adjust the signal portion to be sent to the <i>[AUX SEND]</i> output to e.g. create a monitor mix.
7	<i>[PRE / POST]</i> When this switch is pressed, the signal portion set with the <i>[AUX]</i> control is not affected by the channel fader (<i>[PRE]</i>). When the switch is not pressed, the AUX signal is not subject to the channel fader (<i>[POST]</i>).

8	<i>[FX]</i> Rotary control to control the signal portion, which is sent to the internal effects section as well as to the <i>[FX SEND]</i> output.
9	<i>[PAN]</i> Rotary control to arrange the channel signal within the stereo panorama R / L.
10	<i>[PFL]</i> switch With this switch pressed, the channel signal is unaffected by the setting of the channel fader and the internal effects section and present at the outputs <i>[PHONES]</i> and <i>[CR OUT]</i> . The switch does not affect the signal at the outputs <i>[MAIN OUTPUT]</i> and <i>[REC OUT]</i> .
11	<i>[PFL]</i> LED This LED lights on activated PFL function.
12	<i>[PEAK]</i> The LED lights up on channel overload. If this happens, turn the <i>[GAIN]</i> control to the left until this LED is extinguished.
13	The channel fader sets the strength of the channel signal in the overall signal.

 Stereo channel strip

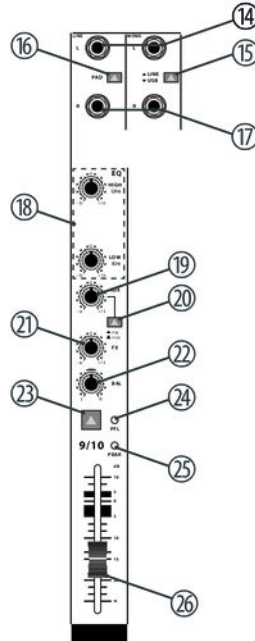

14	<p><i>[L]</i></p> <p>1/4" phone input to connect the left signal of a stereo line level audio source (keyboards, drum modules etc.).</p> <p>With mono signals in channel 11/12, use this input with the <i>[R]</i> socket unused so the signal is present at both sum channels.</p>
15	<p><i>[LINE USB]</i></p> <p>Switch for selecting the analogue line input R / L or the USB input.</p>
16	<p><i>[PAD]</i></p> <p>Switch for lowering the input sensitivity with particularly powerful signals.</p>
17	<p><i>[R]</i></p> <p>1/4" phone input to connect the right signal of a stereo line level audio source (keyboards, drum modules etc.).</p>
18	<p><i>[EQ]</i></p> <p>2-band EQ for treble <i>[HIGH]</i> and bass <i>[LOW]</i>.</p>


19	<i>[AUX]</i> Rotary control to adjust the signal portion to be sent to the <i>[AUX SEND]</i> output to e.g. create a monitor mix.
20	<i>[PRE / POST]</i> When this switch is pressed, the signal portion set with the <i>[AUX]</i> control is not affected by the channel fader (<i>[PRE]</i>). When the switch is not pressed, the AUX signal is not subject to the channel fader (<i>[POST]</i>).
21	<i>[FX]</i> Rotary control to adjust the signal portion, which is sent to the internal effects section as well as to the <i>[FX SEND]</i> output.
22	<i>[BAL]</i> Rotary control to arrange the channel signal within the stereo balance.
23	<i>[PFL]</i> switch With this switch pressed, the channel signal is unaffected by the setting of the channel fader and the internal effects section and present at the outputs <i>[PHONES]</i> and <i>[CR OUT]</i> to adapt the values). The switch does not affect the signal at the outputs <i>[MAIN OUTPUT]</i> and <i>[REC OUT]</i> .
24	<i>[PFL]</i> LED This LED lights on activated PFL function.

25 *[PEAK]*

The LED lights up on channel overload. If this happens in channel 9/10 press the *[PAD]* switch. When overload occurs in channel 11/12 reduce the output level of the signal source connected here.

26 The channel fader sets the strength of the channel signal in the overall signal.

 
Effects section, AUX

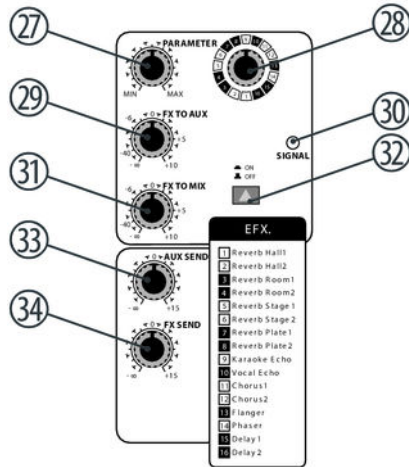

27	<i>[PARAMETER]</i> Rotary control to set the main parameter of the currently selected effect.
28	<i>[1 - 16]</i> Rotary control to select the desired effect, see list <i>[EFX.]</i> printed beneath the 'ON OFF' switch.
29	<i>[FX TO AUX]</i> Rotary control to adjust the effects portion present at the output <i>[AUX SEND]</i> .
30	<i>[SIGNAL]</i> When this LED lights up a signal is present at the input of the effect section.
31	<i>[FX TO MIX]</i> Rotary control to adjust the effects portion in the overall signal.
32	<i>[ON OFF]</i> Button to turn the effects function on or off.

- | | |
|----|--|
| 33 | <i>[AUX SEND]</i>
Rotary control to adjust the overall level at the <i>[AUX SEND]</i> output. |
| 34 | <i>[FX SEND]</i>
Rotary control to adjust the overall level at the <i>[FX SEND]</i> output. |

 Master section

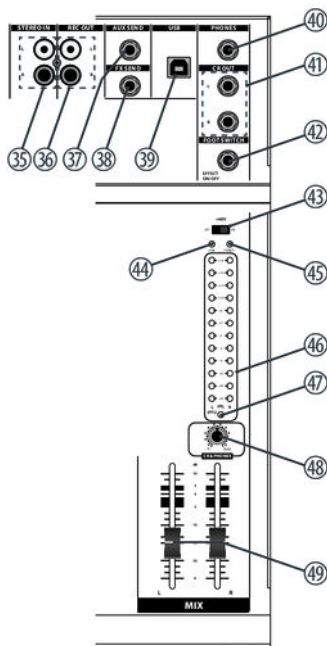

mix 1402FX

35	<i>[STEREO IN]</i> Stereo RCA input for line level audio sources.
36	<i>[REC OUT]</i> Stereo RCA output for line level audio sources. Here, the sum signal is present, but unaffected by the master faders.
37	<i>[AUX SEND]</i> At this line level output the signal set with the <i>[AUX]</i> channel controls is present, maybe to create a monitor mix.
38	<i>[FX SEND]</i> At this line level output the signal set with the <i>[FX]</i> channel controls is present, maybe to be sent to an external effects device.
39	<i>[USB]</i> USB port for feeding in digital audio signals or for digital output of the sum signal, unaffected by the master faders.
40	<i>[PHONES]</i> Stereo headphones output.

41	<i>[CR OUT]</i> Outputs to connect studio monitors, e.g. active speakers or a stereo power amplifier with passive speakers.
42	<i>[FOOT SWITCH]</i> Connector for a foot switch to turn the internal effects section on or off.
43	<i>[+48V] switch</i> When this switch is in the ON position, a phantom voltage of 48 V $\overline{\text{---}}$ is present at the XLR sockets in the mono channels for using condenser mics. If no condenser mics are used, the switch should be in the OFF position. The phantom voltage must not be switched on if an unbalanced XLR cable is connected to one of the MIC inputs.
44	<i>[+48V] LED</i> This LED is lit when the phantom power is on.
45	<i>[POWER]</i> This LED shows that the unit is turned on.

46 *[LEDs]*

These LED chains indicate the level of the sum signal. Keep the level within a range below +18. The red LEDs indicates overload. In this case, pull back the two master faders so that the red LEDs do not light up any more.

If the PFL button is pressed in one of the channels, the signal in this channel is displayed in the left LED chain, regardless of the channel fader.

47 *[PFL]*

This LED lights up when in at least one of the channels the *[PFL]* button is pressed and thus the LED chains do not display the sum signal.

 
48 *[CR & PHONES]*

Rotary control to adjust the level at the outputs *[CR OUT]* and *[PHONES]*.

49 *[L MIX R]*

Master fader to adjust the sum level at the outputs *[MAIN OUTPUT]*, *[CR OUT]* and *[PHONES]*.

Rear panel

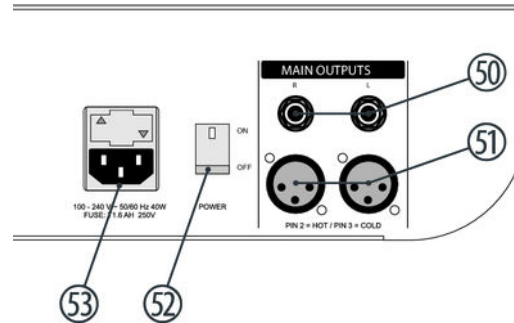

50 [MAIN OUTPUTS]

Balanced 1/4" phone outputs for connecting power amplifiers, effects or recording devices.

51 [MAIN OUTPUTS]

Balanced XLR outputs for connecting power amplifiers, effects or recording devices.

 
52 *[POWER]*

Mains switch to turn the device on or off.

53 *[SIGNAL]*


IEC chassis connector for mains connection with fuse holder. To replace the fuse, carefully take out the fuse holder with a small screwdriver, replace the defective fuse with a new one of the same type and push the fuse holder back in until it snaps into place.

Connection pattern – club gig

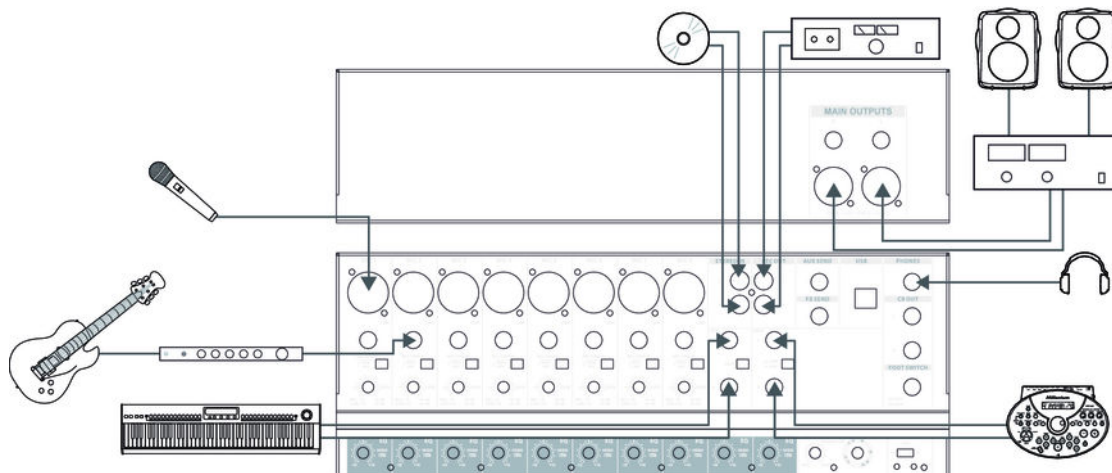

mix 1402FX

 Connection pattern – PC home recording

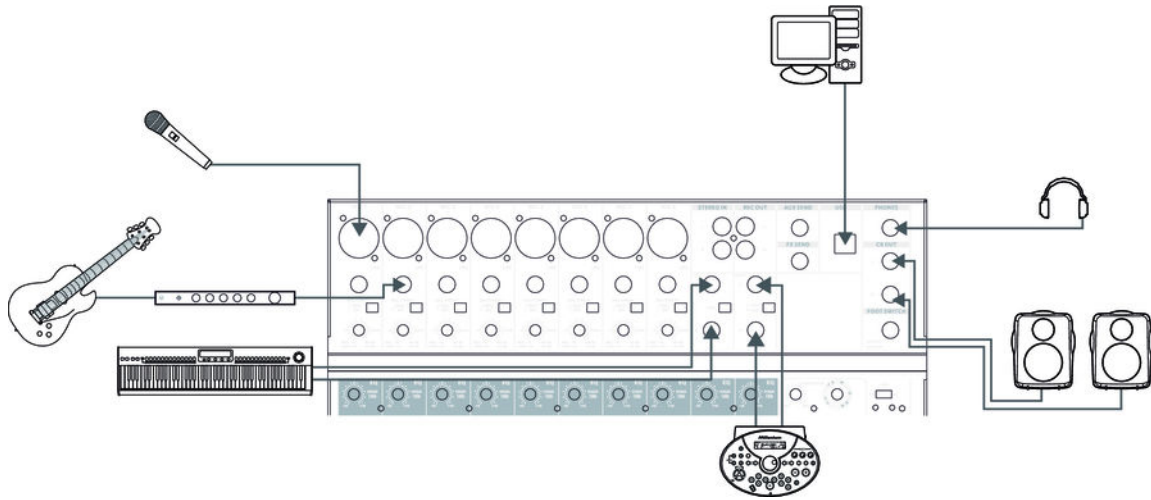

6 Technical specifications

Max. output level, balanced (1% THD @ 1 kHz)	MAIN OUTPUT	+26 dBu ± 1 dBu
Max. output level, unbalanced (1% THD @ 1 kHz)	MAIN OUTPUT	+21 dBu ± 1 dBu
	Headphones output	150 mW ± 5 mW @ 32 Ω
Distortion (THD + N)		<0.025% @ +14 dBu ± 0.5 dBu
Frequency response		20 Hz ~ 20 kHz ± 2 dB
Signal-to-noise ratio		80 dB ± 5 dB fader @ max.
Input level	MIC input	+4 dBu ± 1 dBu max.
	Stereo line input	+21 dBu ± 1 dBu max.
Impedances	MIC input	balanced: 6 kΩ, unbalanced 3 kΩ ±200 Ω
	Line input	balanced: 44 kΩ, unbalanced 22 kΩ ±2 kΩ
	all unbal. Outputs	100 Ω

	all balanced outputs	200 Ω
Signal gain mono channel		44 dB adjustable mic input (-16 ~ -60 dB) Line (-10 dB ~ +34 dB)
EQ	Treble	+/- 10 dB, \pm 1.5 dB @ 12 kHz shelving
	Mids	+/- 10 dB, \pm 1.5 dB @ 1 kHz shelving
	Bass	+/- 10 dB, \pm 1.5 dB @ 80 Hz shelving
Effects	16 in total	8 \times reverb, 4 \times delay, 2 \times chorus, 1 \times flanger, 1 \times phaser
Common mode rejection		63 dB \pm 3 dB @ 1 kHz
Phantom voltage		48 V \pm 2 V
Operating supply voltage		AC 100 – 240 V \sim , 50/60 Hz
Fuse		5 mm \times 20 mm, 1.6 A, 250 V, slow-blow
Power consumption		40 W
Dimensions (W \times H \times D)		363 \times 98 \times 350 mm
Weight		4.35 kg

7 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TS phone plug (mono, unbalanced)



1	Signal
2	Ground, shielding

1/4" TRS phone plug (mono, balanced)




1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground

1/4" TRS phone plug (stereo, unbalanced)




1	Signal (left)
2	Signal (right)
3	Ground

 XLR plug (balanced)

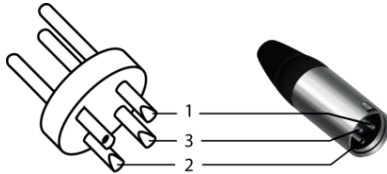

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)

 XLR plug (unbalanced)

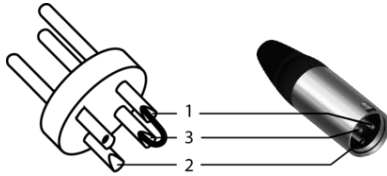

1	Ground, shielding
2	Signal
3	Bridged to pin 1

RCA connection



Drawing and table indicate the pin assignment of an RCA plug.

1	Signal
2	Ground, shielding

8 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

mix 1402FX



