

Options of “Pressing an active preset switch”

When user presses an active preset footswitch, GEC9 provide three options:


1. Go back to the last engaged preset.
2. Always engage the same preset.
3. Master bypass.

The factory default is “Master bypass”, user can change the option with following steps,

Hold bank “DOWN” switch then power up GEC9, the display shows


“b” (Master bypass)

or “n” (Always engage the same preset)

or “” (Go back to the last engaged preset)

Press bank “DOWN” switch to change the option, press bank “UP” switch choose and quit.

1- Overview

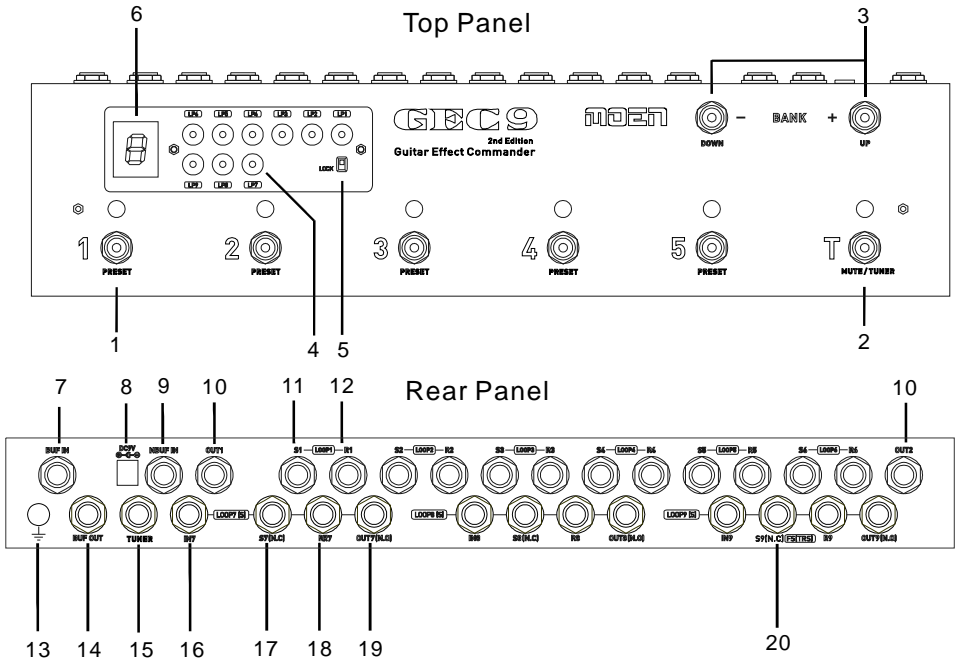

(1) PRESETS

These switches immediately recall the settings stored in the corresponding PRESET 1-5. All the presets are stored in nonvolatile memory, will not be erased even without power supply.

(2) MUTE/CLEAN

This switch shuts off the LOOP OUT (LOUT1&LOUT2) and switches the INPUT to CLEAN jack, press it again will get back to normal operation.

(3) BANK UP / DOWN

BANK UP/DOWN scrolls up/down the bank number, there are 20 banks in total. Bank 1-20 are displayed as 1 2 3 4 5 6 7 8 9 0 1. 2. 3. 4. 5. 6. 7. 8. 9. 0.

(4) Program Buttons

These buttons turn on / off loop1 to loop9 separately.

(5) Program Lock Switch

When the switch is at "lock" position, the program buttons are disabled. Lock the program buttons to avoid mis-programming.

(6) BANK DISPLAY

It indicates the bank number.