



401-USB Play

Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
Internet: [www.thomann.de](http://www.thomann.de)

29.01.2025, ID: 441280 (V4)

---

## Table of contents

<b>1</b>	<b>General information</b> .....	<b>5</b>
	1.1 Symbols and signal words.....	5
<b>2</b>	<b>Safety instructions</b> .....	<b>6</b>
<b>3</b>	<b>Features</b> .....	<b>8</b>
<b>4</b>	<b>Installation</b> .....	<b>9</b>
<b>5</b>	<b>Connections and controls</b> .....	<b>10</b>
<b>6</b>	<b>Technical specifications</b> .....	<b>13</b>
<b>7</b>	<b>Plug and connection assignment</b> .....	<b>14</b>
<b>8</b>	<b>Protecting the environment</b> .....	<b>16</b>





# 1 General information

This document contains important instructions for the safe operation of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. Make sure that it is available to all those using the product. If you sell the product to another user, be sure that they also receive this document.

Our products and documentation are subject to a process of continuous development. They are therefore subject to change. Please refer to the latest version of the documentation, which is ready for download under [www.thomann.de](http://www.thomann.de).

## 1.1 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this document.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>WARNING!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

## 2 Safety instructions

### Intended use

This device is intended to be used for amplification, mixing and playback of signals from musical instruments and microphones. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

### Safety



#### **DANGER!**

##### **Risk of injury and choking hazard for children!**

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such knobs) that children could play with.



#### **DANGER!**

##### **Danger to life due to electric current!**

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device when covers, safety equipment or optical components are missing or damaged.



#### **DANGER!**

##### **Danger to life due to electric current!**

A short circuit could lead to a fire hazard and risk of death. Always use proper ready-made insulated triple-core mains cable with a safety plug. Do not modify the mains cable or the plug. In case of isolation damage, disconnect immediately the power supply and arrange repair. If in doubt, seek advice from a qualified electrician.



#### **WARNING!**

##### **Possible hearing damage due to high volumes on speakers or headphones!**

With speakers or headphones connected, the device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage. Do not operate the device permanently at a high volume level. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment.



#### **NOTICE!**

##### **Risk of fire due to covered vents and neighbouring heat sources!**




If the vents of the device are covered or the device is operated in the immediate vicinity of other heat sources, the device can overheat and burst into flames. Never cover the device or the vents. Do not install the device in the immediate vicinity of other heat sources. Never operate the device in the immediate vicinity of naked flames.



#### **NOTICE!**

##### **Damage to the device if operated in unsuitable ambient conditions!**

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments with direct sunlight, heavy dirt and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.

-  **NOTICE!**  
**Damage to the device due to high voltages!**  
The device can be damaged if it is operated with the incorrect voltage or if high voltage peaks occur. In the worst case, excess voltages can also cause a risk of injury and fires. Make sure that the voltage specification on the device matches the local power grid before plugging in the device. Only operate the device from professionally installed mains sockets that are protected by a residual current circuit breaker (FI). Ensure that the power cord plug is easily accessible at all times if it is the only device to safely disconnect the device from the mains supply. As a precaution, disconnect the device from the power grid when storms are approaching or if the device will not be used for a longer period.
-  **NOTICE!**  
**Risk of fire due to installation of a wrong fuse!**  
Using fuses of a different type than compatible with the device may cause a fire and seriously damage the device. Only use fuses of the same type. Observe the labelling on the device casing and the information in the "Technical data" chapter.
-  **NOTICE!**  
**Possible staining due to plasticiser in rubber feet!**  
The plasticiser contained in the rubber feet of this product may react with the coating of the floor and cause permanent dark stains after some time. If necessary, use a suitable mat or felt slide to prevent direct contact between the product's rubber feet and the floor.

### 3 Features

- 4-channel DJ mixer with USB player
- 1 × microphone input with talk over (XLR / 1/4" combo jack)
- 1 × microphone input (1/4" phone socket)
- 1 × headphones output (stereo, as 1/4" phone jack)
- 1 × master output (RCA sockets)
- 2 × line inputs (RCA sockets)
- 2 × phono / line inputs (RCA sockets)
- 1 × output for recording device (RCA sockets)
- 1 × USB port for recording and playback

 


## 4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.


Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

### Connection options

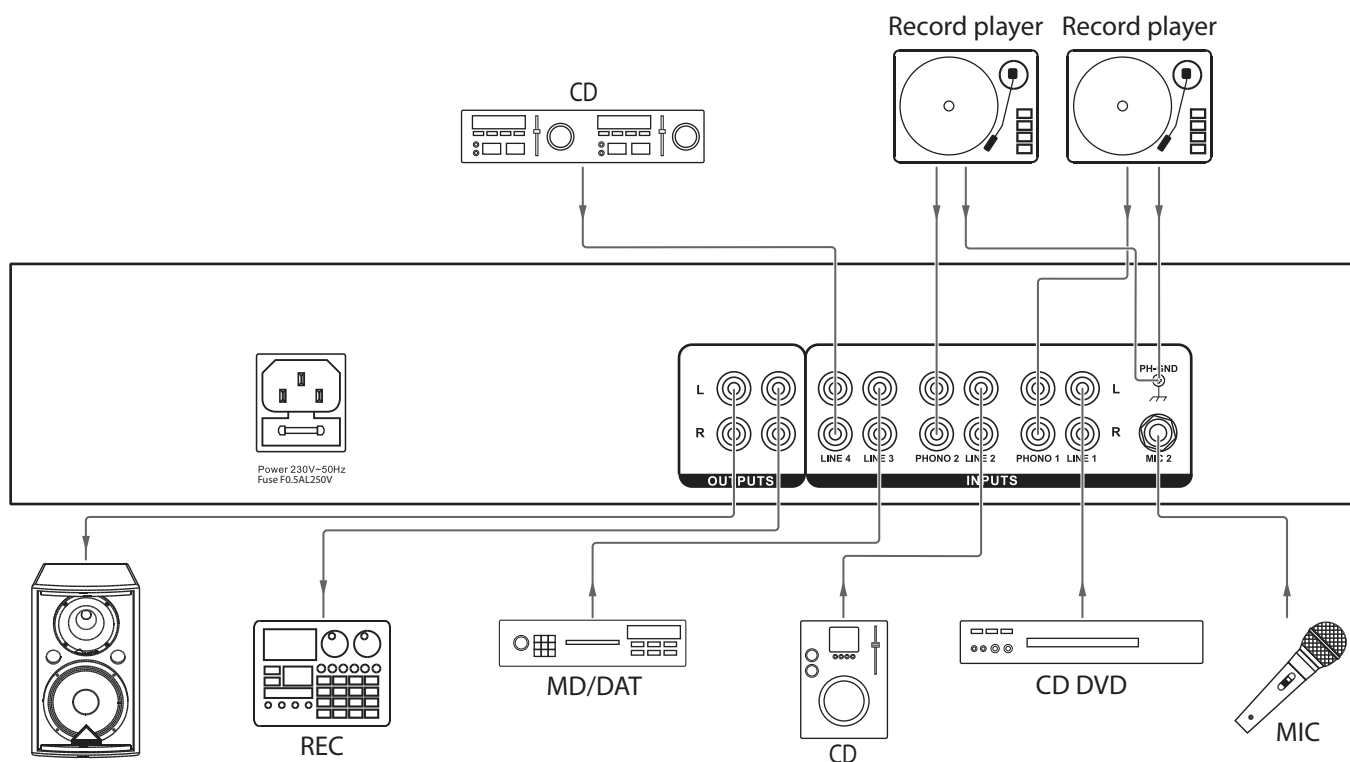


## 5 Connections and controls
 
### Front

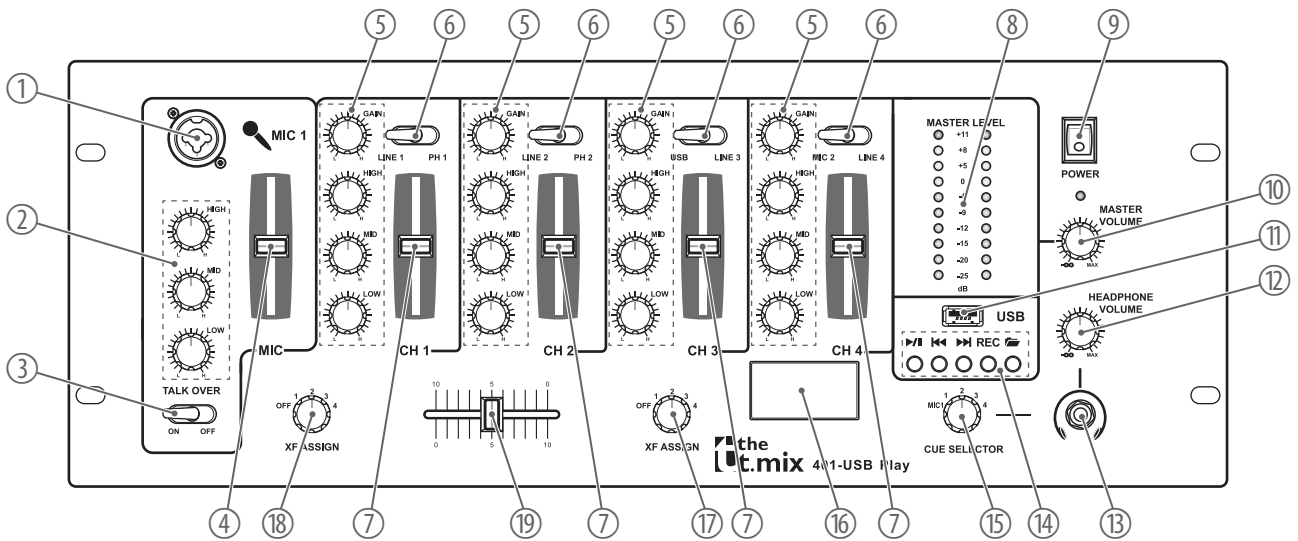


- 1 [MIC 1] | Microphone input, designed as an XLR / 6.3 mm combo jack socket.
- 2 [HIGH]/[MID]/[LOW] | Rotary control for direct tone control of the microphone input signal (bass, mids, treble)
- 3 [TALK OVER] | Activates the talkover function. When the selector switch is moved in the ON position, all other signal sources are attenuated, so that microphone 1 is clearly audible. In OFF position, all signals retain their original level.
- 4 Volume control for microphone 1.
- 5 [GAIN]/[HIGH]/[MID]/[LOW] | Rotary control for adjusting the input signal to the working level of the device and for direct sound control of the respective channel (low, mids, high).
- 6 Input source selector switch for the respective channel
- 7 Control for adjusting the volume of the respective channel
- 8 The level indicator shows the volume of the output channel or the currently selected solo channel / cue.
- 9 [POWER] | Main switch. Turns the device on and off. This LED lights up when the device is on.
- 10 [MASTER VOLUME] | Rotary control for adjusting the master output volume.
- 11 [USB] | Connection for recording or playback via a USB device. Finish the playback or select another signal source before removing the USB flash drive.
- 12 [HEADPHONE VOLUME] | Rotary control for adjusting the headphone volume.
- 13 Monitor output for headphones, designed as a 6.3 mm jack socket (stereo).
- 14 Operating buttons of the MP3 player (see ['Display' on page 11](#))
- 15 [CUE SELECTOR] | Rotary control for selecting the channel that can be heard through the headphones.
- 16 Display of the MP3 player (see ['Display' on page 11](#))
- 17 [XF ASSIGN] | Rotary control for selecting the channel assigned to the right side of the crossfader.
- 18 [XF ASSIGN] | Rotary control for selecting the channel assigned to the left side of the crossfader.
- 19 [Crossfader] | Control for crossfading from one stereo signal to another. If the controller is in middle position, both channels can be heard.

 Display

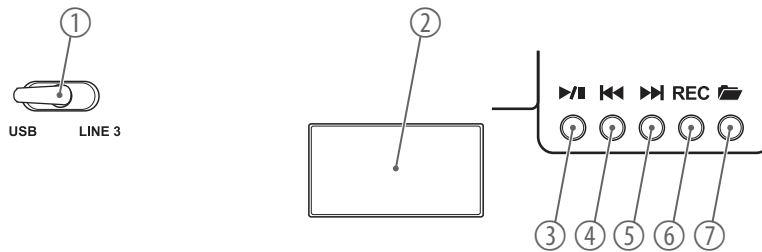

1	Switching to USB
2	Display
3	▶/     Starts or pauses playback.
4	◀◀   Selects the previous track for playback.
5	▶▶   Selects the next track for playback.
6	[REC]   Pressing the button opens the recorder. Press the button again to start or stop the recorder. A long press will save the recording.
7	☰   Pressing the button opens the menu of the player or recorder. Press the arrow buttons to navigate through the menu. Press the button again to confirm a selection. A long press returns you to the main menu.

 
Menu

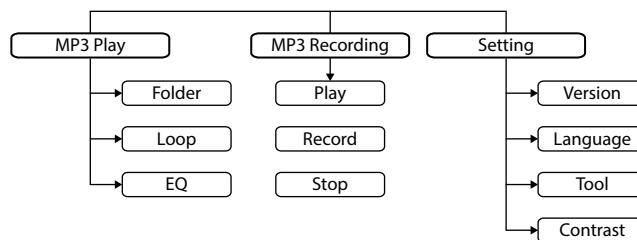

System information

- Supported file formats: MP3, WMA and WAV
- Supported formatting: FAT16 and FAT32
- Maximum storage capacity: 32 GB

## Back

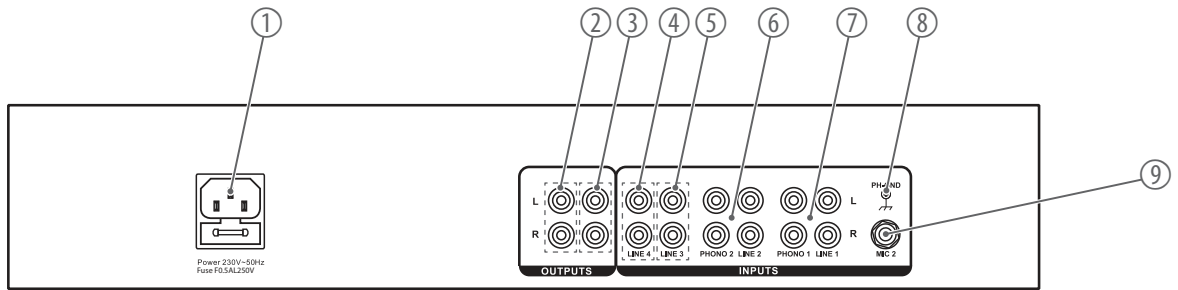 

1	Rubber panel plug for connection to the mains, with fuse holder
2	Master output for connecting an amplifier or active speaker, designed as cinch sockets
3	Output for connecting a recording device, designed as cinch sockets
4	[ <i>LINE 4</i> ]   Inputs for line level signals (e.g., CD, DVD, MP3) for channel 4, designed as cinch sockets.
5	[ <i>LINE 3</i> ]   Inputs for line level signals (e.g., CD, DVD, MP3) for channel 3, designed as cinch sockets.
6	[ <i>PHONO 2</i> ]/[ <i>LINE 2</i> ]   Inputs for phono level signals (e.g., turntable) and line level (e.g. CD; DVD, MP3) for channel 2, designed as cinch sockets.
7	[ <i>PHONO 1</i> ]/[ <i>LINE 1</i> ]   Inputs for phono level signals (e.g., turntable) and line level (e.g. CD; DVD, MP3) for channel 1, designed as cinch sockets.
8	Grounding screws to reduce hum noise when connecting turntables
9	[ <i>MIC 2</i> ]   Microphone input, designed as a 6.3 mm jack socket.

## 6 Technical specifications

Input connections	Power supply		C14 rubber panel plug
	Microphone input	Type	XLR panel socket, 3-pin
		Level	1.5 mV
		Impedance	1 k $\Omega$
	Microphone input	Type	6.3-mm jack socket
		Level	1.5 mV
		Impedance	1 k $\Omega$
	Line input	Type	4 $\times$ Cinch sockets
		Level	3 mV
		Impedance	47 k $\Omega$
	Phono input	Type	8 $\times$ Cinch sockets
		Level	150 mV
Impedance		27 k $\Omega$	
Output connections	Master output	Type	2 $\times$ Cinch sockets
		Level	1 V
		Impedance	5.6 k $\Omega$
	Rec output	Type	2 $\times$ Cinch sockets
		Level	1 V
		Impedance	5.6 k $\Omega$
	Stereo head-phone output	Type	6.3-mm jack socket
		Level	500 mW
		Impedance	32 $\Omega$
Tone control (EQ)	Bass, mids, treble		
			- 13 dB...+13 dB
Frequency range			20 Hz ... 20 kHz, $\pm$ 2 dB
Signal-to-noise ratio			> 80 dB
Total harmonic distortion (THD)			0.1%
Supply voltage			230 V $\sim$ 50 Hz
Fuse			5 mm $\times$ 20 mm, 0.5 A, 250 V, slow blow
Dimensions (W $\times$ H $\times$ D)			505 mm $\times$ 199 mm $\times$ 115 mm
Weight			3.85 kg
Ambient conditions	Temperature range		0 $^{\circ}$ C...40 $^{\circ}$ C
	Relative humidity		20%...80% (non-condensing)

## 7 Plug and connection assignment

### Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

### Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

### 1/4" TS phone plug (mono, unbalanced)



 
1	Signal
2	Ground, shielding

### 1/4" TRS phone plug (mono, balanced)




1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground

### XLR plug (balanced)

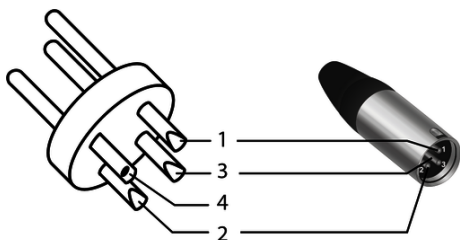

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)
4	Shielding on plug housing (option)

## RCA connection

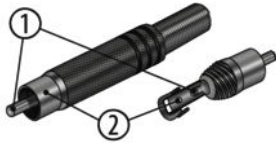 


Drawing and table indicate the pin assignment of an RCA plug.

1	Signal
2	Ground, shielding


## 8 Protecting the environment
 
### Disposal of the packing material

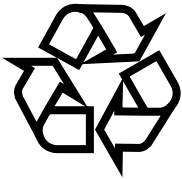


Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner.

 Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.

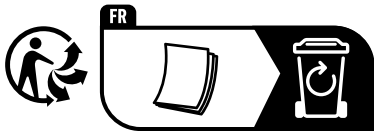

Observe the disposal note regarding documentation in France.

### Disposal of your old device

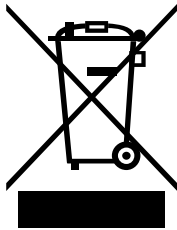 

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions on [www.thomann.de](http://www.thomann.de).

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. For example, use the classified ads of Thomann GmbH.

If your old device contains personal data, delete those data before disposing of it.









