



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

15.10.2018, ID: 446041, 446042

# **Table of contents**

1	General notes	. 4
	1.1 Further information	. 5
	1.2 Symbols and signal words	6
2	Safety instructions	8
3	Features	12
4	Installation and starting up	14
5	Technical specifications	
6	Cleaning	21
7	Protecting the environment	22



# 1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.



## 1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.	
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.	
Online guides	Our online guides provide detailed information on technical basics and terms.	
Personal consultation	For personal consultation please contact our technical hotline.	
Service	If you have any problems with the device the customer service will gladly assist you.	



## **1.2** Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.



Warning signs	Type of danger
	Warning – high-voltage.
	Warning – suspended load.
	Warning – danger zone.



# 2 Safety instructions

#### Intended use

This device is intended for use as an electronic lighting effect by means of LED technology. The device is designed for professional use and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Extend the life of the device by regular breaks in operation and avoid switching it on and off frequently. This device is not suitable for continuous use.



#### Safety



## DANGER!

#### Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



#### DANGER!

#### Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.





#### DANGER!

#### Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



# WARNING!

Eye damage caused by high light intensity

Never look directly into the light source.



## NOTICE!

**Risk of fire** 

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.

thomann MUSIC IS OUR PASSION

#### NOTICE!

#### Voltage supply

Connect the device directly to the power grid. It must not be connected to a dimmer.

Before connecting the device, you have to ensure that the rated voltage indicated on the device matches the voltage of the power grid available in the operating place. You must also take care that the power grid is protected by a residual current circuit breaker. Failure to do so can result in damage to the device and injury to the user.

In case a thunderstorm is coming up or you're not going to use the device for a longer period of time, disconnect it from the power grid to reduce the risk of electric shock and fire.

### LED Power-Flood Pro 100 W 6K, 200 W 6K

MUSIC IS OUR PASSION

## 3 Features

The device is characterized by:

- Robust metal housing
- Noiseless operation due to passive cooling
- High luminous power with low power consumption
- Outdoor use due to protection class IP65
- Lockable input socket (Power Twist IP65 True 1) for power supply, matching power cord included

# Information about protection class IP65

Equipment with protection class IP65 are dust-tight and completely protected against contact (first code number). They are also protected against splash water from any angle (second code digit). That is why this equipment can also be used outdoors. Event technology equipment is generally only designed for temporary use however (event lighting) and not for permanent use outdoors.

The specified protection class does not make a statement about the weather resistance of the equipment (resistance to changing ambient conditions as well as against the effects of sunlight and UV rays).

th•mann MUSIC IS OUR PASSION

The seals and screw connections of the equipment must be checked regularly to ensure a fault-free operation. In cases of doubt, consult a specialist workshop in due time.



# 4 Installation and starting up

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



#### WARNING!

#### Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



#### NOTICE!

#### **Risk of overheating**

Always ensure sufficient ventilation.

The ambient temperature must not exceed the limits stated in the chapter Technical Specifications of the User Manual.



## NOTICE!

#### Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.

#### **Mounting options**

You can install the unit in hanging or standing position. When in use, the device must always be attached to a solid surface or an approved truss. Use the openings of the bracket provided for mounting.



Always work from a stable platform whenever installing, moving or servicing the unit. In doing so, the area underneath the unit must be cordoned off.

The safety cable must be attached to the bracket.




Please note that this device must not be connected to a dimmer.


Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



# 5 Technical specifications

LED Power-Flood Pro 100 W 6K

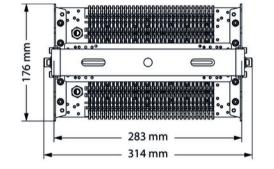

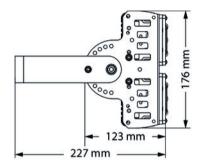


LEDs	96 × Cree 3030, each 1 W
Beam angle	60°×60°
Operating supply voltage	100 V – 240 V ~ 50/60 Hz
Power consumption	max. 100 W



Dimensions (W $\times$ H $\times$ D, w/o bracket)	314 mm $\times$ 176 mm $\times$ 123 mm (15.35in. $\times$ 15.55in. $\times$ 5.31in.)
Protection class	IP65
Temperature range	−30 °C +50 °C
Weight	3.2 kg



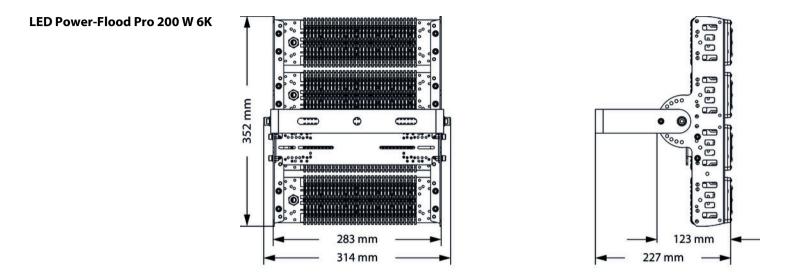

LEDs	192 × Cree 3030, each 1 W
Beam angle	60°×60°



Operating supply voltage	100 V – 240 V ~ 50/60 Hz
Power consumption	max. 200 W
Dimensions (W $\times$ H $\times$ D, w/o bracket)	314 mm $\times$ 352 mm $\times$ 123 mm (15.35in. $\times$ 15.55in. $\times$ 5.31in.)
Protection class	IP65
Temperature range	−30 °C +50 °C
Weight	5.2 kg



# 6 Cleaning

#### **Optical lenses**

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

th•mann

# 7 Protecting the environment

Disposal of the packaging material



#### Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

LED floodlight

UISIC IS OUR PASSION

Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de