

Harley Benton

FRFR-112A Guitar DSP
guitar combo

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

27.03.2020, ID: 478594

Table of contents

1	General information	4
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	6
2	Safety instructions	8
3	Features	12
4	Starting up	13
5	Connections and controls	15
6	DSP functions	18
7	Technical specifications	23
8	Plug and connection assignment	25
9	Cleaning	28
10	Protecting the environment	29

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under www.thomann.de.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.



Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used for amplification and playback of signals from musical instruments with electromagnetic pickups. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Possible damage due to installation of a wrong fuse

The use of different types of fuses can cause serious damage to the unit. Fire hazard!

Only fuses of the same type may be used.

3 Features

The device is characterized by the following features:

- Full range flat-response speaker box for a modern digital guitar setup (amp modelling and multi-effects processor)
- 4 DSP sound programmes
- various DSP equalizer modes, each with ± 12 dB level control per band
- 1200 watt power amp, class D
- 12-inch woofer and 1-inch tweeter
- suitable for use as floor monitor or on a tripod
- 2 \times XLR / 1/4" phone jack combo socket for adjustable MIC / Line input
- 1 \times 3.5 mm phone jack socket as AUX input for connecting line devices
- 1 \times XLR output
- suitable dust cover optional (item no. 410589)

4 Starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



NOTICE!

Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.





NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.

The unit can be mounted on a tripod or set up on the floor or a sufficiently sized and stable surface.

5 Connections and controls

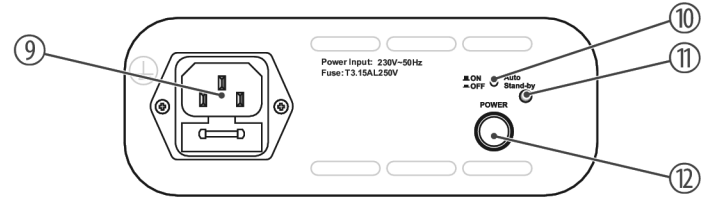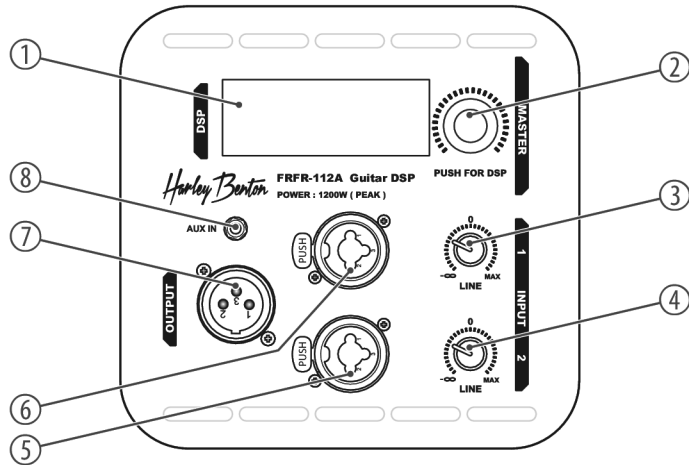

FRFR-112A Guitar DSP

Front panel

1	<i>[DSP]</i> backlit display for DSP functions
2	<i>[MASTER / PUSH FOR DSP]</i> Rotary control for the overall volume, push button for activating the DSP functions
3	<i>[INPUT 1 LINE]</i> Rotary gain control for input 1. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.
4	<i>[INPUT 2 LINE]</i> Rotary gain control for input 2. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.
5	Mic / Line input, designed as XLR / 1/4" phone jack combo socket, balanced
6	Mic / Line input, designed as XLR / 1/4" phone jack combo socket, balanced

Front panel

7	<i>[OUTPUT]</i> Line output, designed as XLR chassis plug. The combined signal of both inputs is present here, unaffected by DSP.
8	<i>[AUX IN]</i> 3.5 mm phone socket for connecting line level devices such as MP3 or CD players. Stereo signals are combined.

Rear panel

9	IEC chassis plug with fuse holder for the power supply
10	<i>[ON OFF Auto Stand-by]</i> Turns the automatic shutdown function on and off. When pressed, the function is deactivated, when not pressed, it is activated. The device will turn off after approx. 60 minutes without input signal. When the input signal recurs, the device returns automatically.
11	This LED lights up when the automatic shutdown function is active.
12	<i>[POWER ON / OFF]</i> Mains switch. Turns the device on and off.

6 DSP functions

Function selection

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* to switch between menu items or values.
3. ▶ Press *[MASTER | PUSH FOR DSP]* to activate the menu shown in the display or to confirm a value.
4. ▶ To exit a menu item without changes, select 'EXIT' and press *[MASTER | PUSH FOR DSP]* to confirm.

Setting the sound programme

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'MODE' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'Sim1', 'Sim2', 'Sim3' or 'OFF' and press *[MASTER | PUSH FOR DSP]* to confirm.
⇒ The selected sound program is set.

EQ setting

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'EQ SET' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'EQ TYPE' and press *[MASTER | PUSH FOR DSP]* to confirm.
4. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'PA', 'GUITAR1' or 'GUITAR2' and press *[MASTER | PUSH FOR DSP]* to confirm.
⇒ The selected EQ setting is set.

Setting the level of a frequency band

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'EQ SET' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'EQ LOW' (bass control), 'EQ MID' (mids control) or 'EQ HIGH' (treble control) and press *[MASTER | PUSH FOR DSP]* to confirm.

4. ▶ Turn *[MASTER | PUSH FOR DSP]* to raise or lower the level of the selected frequency band and press *[MASTER | PUSH FOR DSP]* to confirm.

Setting the LED mode

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'LED MODE' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'OFF' (LED not active), 'ON' (LED active) or 'LIMITER' (LED flashes when limiter is activated) and press *[MASTER | PUSH FOR DSP]* to confirm.

Dimming the display

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'LCD DIM' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'OFF' or 'ON' and press *[MASTER | PUSH FOR DSP]* to confirm.

Setting the display brightness

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'BRIGHT' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* to set a value between '1' (low) and '10' (high) and press *[MASTER | PUSH FOR DSP]* to confirm.

Setting the display contrast

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'CONTRAST' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* to set a value between '1' (low) and '10' (high) and press *[MASTER | PUSH FOR DSP]* to confirm.

Reset

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'RESET' and press *[MASTER | PUSH FOR DSP]* to confirm.
3. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'Confirm Reset: YES' and press *[MASTER | PUSH FOR DSP]* to confirm.
 - ⇒ The device is reset to factory default settings.
4. ▶ To keep the existing settings, choose 'Confirm Reset: NO' and press *[MASTER | PUSH FOR DSP]* to confirm.

System information

1. ▶ Press *[MASTER | PUSH FOR DSP]* to call up the main menu.
2. ▶ Turn *[MASTER | PUSH FOR DSP]* until the display shows 'INFO' and press *[MASTER | PUSH FOR DSP]* to confirm.
 - ⇒ The current firmware version of the DSP function is displayed.

7 Technical specifications

Speaker	12-inch woofer 1" tweeter	
Amp class	Class-D power amp	
Input connections	Mic / Line	2 × XLR / jack combo socket, balanced
	Line level player	1 × 3.5 mm jack socket
	Voltage supply	IEC chassis plug C14
Output connections	Line level mix from both inputs	1 × XLR, 3-pin
Output power	RMS: 300 W	
	Peak: 1200 W	
Frequency range	48 Hz ... 19 kHz, -3 dB	
Sound pressure level (SPL), max.	134 dB	
Power consumption	461 W	

Technical specifications

Operating supply voltage	230 V ~ 50 Hz	
Fuse	5 mm × 20 mm, 3 A, 250 V, slow-blow	
Dimensions (W × H × D)	348 mm × 607 mm × 355 mm	
Weight	14.6 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	50 %, non-condensing

Further information

Dust cover optional	Yes (item no. 410589)
---------------------	-----------------------

8 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

Balanced and unbalanced transmission


Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.


Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TS phone plug (mono, unbalanced)

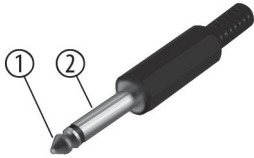


1	Signal
2	Ground, shielding

1/4" TRS phone plug (mono, balanced)

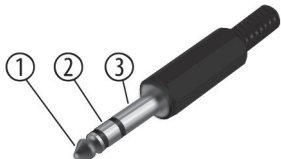


1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground

XLR plug (balanced)

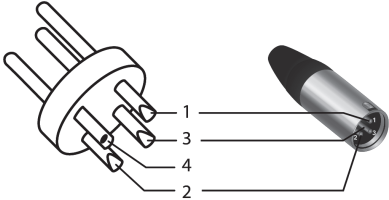

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)
4	Shielding on plug housing (option)

XLR plug (unbalanced)

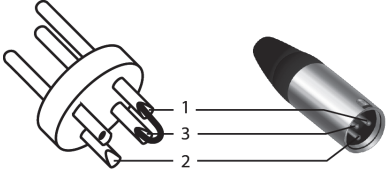

1	Ground, shielding
2	Signal
3	Bridged to pin 1

9 Cleaning

Device components

Clean the device components that are accessible from the outside regularly. The cleaning frequency depends on the operating environment: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the device components.

- Clean with a dry soft cloth.
- Stubborn dirt can be removed with a slightly dampened cloth.
- Never use solvents or alcohol for cleaning.

10 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

Notes

th•mann
MUSIC IS OUR PASSION

guitar combo



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · www.thomann.de