



DSX 110 M, DSX 112 M,
DSX 115 M

Active speaker

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

02.12.2020, ID: 505046, 505047, 505048

Table of contents

1	General information	4
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	6
2	Safety instructions	8
3	Features	14
4	Starting up	15
5	Connections and controls	17
6	DSP functions	23
7	Technical specifications	25
8	Plug and connection assignment	32
9	Cleaning	35
10	Protecting the environment	36

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under www.thomann.de.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.



Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is designed for sound reinforcement. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage.

Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures).

Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.



NOTICE!

Possible damage due to installation of a wrong fuse

The use of different types of fuses can cause serious damage to the unit. Fire hazard!

Only fuses of the same type may be used.



NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

3 Features

The 2-way active speaker is characterized by the following features:

- 2-way active speaker box for PA and DJ application
- Maximum output power: 900 W (DSX 110 M), 1200 W (DSX 112 M) oder 1350 W (DSX 115 M)
- 10-inch woofer (DSX 110 M), 12-inch woofer (DSX 112 M) or 15-inch woofer (DSX 115 M)
- 1.35" compression driver
- backlit display for DSP functions
- 4 DSP sound programmes: band, guitar, vocal, drums
- Low-Cut filter
- 2 × adjustable MIC / Line input, XLR / 1/4" combo socket
- 1 × Line out, XLR
- high-quality wooden housing with 36 mm tripod flange and carrying handles
- Standby function (DSX 110 M)

4 Starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



NOTICE!

Possible property damage by magnetic fields

Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

The unit can be mounted on a stand or set up on the floor or a sufficiently sized and stable surface.




NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.

5 Connections and controls

Model DSX 110 M

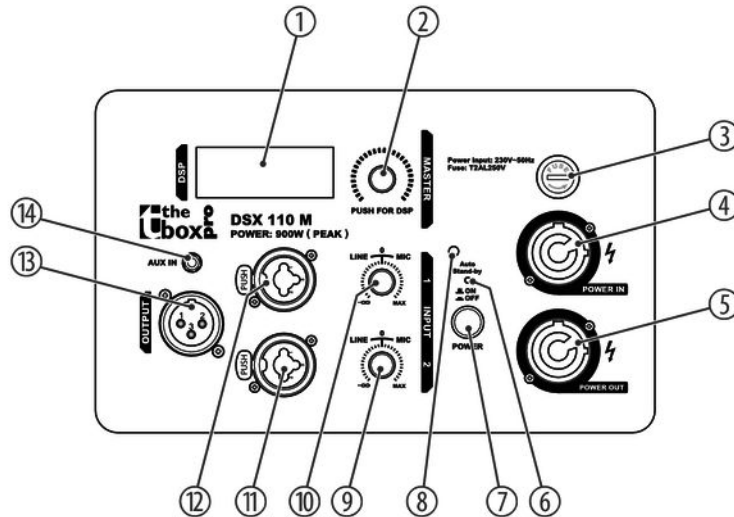


DSX 110 M, DSX 112 M, DSX 115 M

1	<i>[DSP]</i> backlit display for DSP functions
2	<i>[MASTER PUSH FOR DSP]</i> Rotary control for the overall volume, push button for activating the DSP functions
3	Fuse holder
4	<i>[POWER IN]</i> Lockable input socket (Power Twist) for power supply
5	<i>[POWER OUT]</i> Lockable output socket (Power Twist) for the power supply of further units
6	<i>[Auto Stand-by]</i> Behind this opening, you find the switch that turns the automatic shutdown function on and off. When pressed, the function is deactivated; when released, it is activated and switches off the device after 60 minutes without input signal. The device automatically turns back on again on returning input signal.
7	<i>[POWER]</i> Mains switch. Turns the device on and off.

8	<i>LED [AUTO Stand-by]</i> This LED lights up when the automatic shutdown function is active.
9	<i>[LINE / MIC 2]</i> Rotary gain control for input 2. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.
10	<i>[LINE / MIC 1]</i> Rotary gain control for input 1. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.
11	Mic / Line input 2, designed as XLR / 1/4" combo socket, balanced
12	Mic / Line input 1, designed as XLR / 1/4" combo socket, balanced
13	<i>[OUTPUT]</i> Line output, designed as XLR chassis plug. The combined signal of both inputs is present here, unaffected by DSP.
14	<i>[AUX IN]</i> 3.5 mm jack socket for connecting line level devices such as MP3 or CD players. Stereo signals are combined.

Model DSX 112 M, DSX 115 M

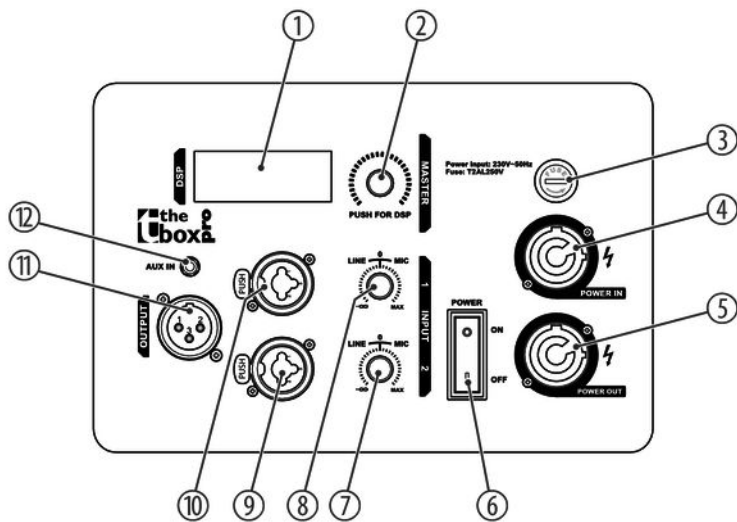

1	<i>[DSP]</i> backlit display for DSP functions
2	<i>[MASTER PUSH FOR DSP]</i> Rotary control for the overall volume, push button for activating the DSP functions
3	Fuse holder
4	<i>[POWER IN]</i> Lockable input socket (Power Twist) for power supply
5	<i>[POWER OUT]</i> Lockable output socket (Power Twist) for the power supply of further units
6	<i>[POWER]</i> Mains switch. Turns the device on and off.
7	<i>[LINE / MIC 2]</i> Rotary gain control for input 2. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.

8	<i>[LINE / MIC 1]</i> Rotary gain control for input 1. Turning clockwise increases the input gain for connecting microphones. Turning counterclockwise decreases the input gain for connecting instruments or devices with line level outputs.
9	Mic / Line input 2, designed as XLR / 1/4" combo socket, balanced
10	Mic / Line input 1, designed as XLR / 1/4" combo socket, balanced
11	<i>[OUTPUT]</i> Line output, designed as XLR chassis plug. The combined signal of both inputs is present here, unaffected by DSP.
12	<i>[AUX IN]</i> 3.5 mm jack socket for connecting line level devices such as MP3 or CD players. Stereo signals are combined.

6 DSP functions

Sound programmes

Press *[MASTER | PUSH FOR DSP]* once during operation to call up the unit's DSP function 'Sound Programme'. 'MODE / LOCATION' appears in the display. Press again *[MASTER | PUSH FOR DSP]* to enable the function 'MODE'. Turn the knob to select one of the sound programmes 'BAND', 'GUITAR', 'VOCAL' or 'DRUMS' and press *[MASTER | PUSH FOR DSP]* to confirm the selection.

Turn *[MASTER | PUSH FOR DSP]* to enable the function 'LOCATION'. Press *[MASTER | PUSH FOR DSP]* to confirm the selection. Turn the knob to select one of the EQ settings 'MONITOR' (monitor) or 'STAND' (stand) and press *[MASTER | PUSH FOR DSP]* to confirm the selection.

3-band EQ

Press *[MASTER | PUSH FOR DSP]* twice during operation to call up the unit's DSP function '3-Band EQ'. 'HIGH EQ' (treble control) appears in the display. Press again *[MASTER | PUSH FOR DSP]* to enable this function. Or turn the knob to select another EQ function 'MID EQ' (mid control) or 'LOW EQ' (bass control) and press *[MASTER | PUSH FOR DSP]* to call it up. Then turn the knob clockwise to raise the level of the selected frequency band by up to 12 dB. Or turn the knob counterclockwise to lower the level of the selected frequency band by up to 12 dB.

2 level meters

Press *[MASTER | PUSH FOR DSP]* three times during operation to call up the unit's DSP function '2 Level Meters'. 'INPUT 1' appears in the display along with a graphical representation of input level 1. Turn the knob until 'INPUT 2' appears in the display along with a graphical representation of input level 2.

Low-Cut filter

Press *[MASTER | PUSH FOR DSP]* four times during operation to call up the unit's DSP function 'High Pass Filter'. '80 Hz' (frequency attenuation below 80 Hz) appears in the display. Press again *[MASTER | PUSH FOR DSP]* to enable this function. Or turn the knob to select another cut-off frequency '100 Hz', '120 Hz' or '150 Hz' and press *[MASTER | PUSH FOR DSP]* to call it up.

7 Technical specifications

DSX 110 M

Speaker	Active monitor speaker Two-way system with 1.35" compression driver and 10" woofer and 2" voice coil	
Amp class	Class-D & Class-AB power stage	
Input connections	Mic / Line	2 × XLR / jack combo socket, balanced
	Line level source	1 × 3.5 mm jack socket
	Power supply	Lockable input socket (Power Twist)
Input impedance	10 kΩ, unbalanced	
	20 kΩ, balanced	
Output connections	Line level mix from both inputs	1 × XLR, 3-pin
	Power supply of further devices	Lockable output socket (Power Twist)

DSX 110 M, DSX 112 M, DSX 115 M

Technical specifications

Output power	RMS: 300 W Peak: 900 W	
Frequency range	60 Hz ... 18 kHz	
Crossover frequency	3 kHz	
Signal-to-noise ratio (1m/W)	-75 dB	
Dispersion characteristics	60 × 60°	
Sound pressure level (SPL), max.	130 dB	
Power consumption	330 W	
Supply voltage	230 V ~ 50 Hz	
Fuse	5 mm × 20 mm, 2 A, 250 V, slow-blow	
Dimensions (W × H × D)	450 mm × 535 mm × 403 mm	
Weight	14.6 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	50 %, non-condensing

DSX 112 M

Speaker	Active monitor speaker Two-way system with 1.35" compression driver and 12" woofer and 2.36" voice coil	
Amp class	Class-D & Class-AB power stage	
Input connections	Mic / Line	2 × XLR / jack combo socket, balanced
	Line level source	1 × 3.5 mm jack socket
	Power supply	Lockable input socket (Power Twist)
Input impedance	10 kΩ, unbalanced	
	20 kΩ, balanced	
Output connections	Line level mix from both inputs	1 × XLR, 3-pin
	Power supply of further devices	Lockable output socket (Power Twist)
Output power	RMS: 400 W	
	Peak: 1200 W	
Frequency range	53 Hz ... 18 kHz	

DSX 110 M, DSX 112 M, DSX 115 M

Technical specifications

Crossover frequency	2,8 kHz	
Signal-to-noise ratio (1m/W)	-81 dB	
Dispersion characteristics	60 × 60°	
Sound pressure level (SPL), max.	132 dB	
Power consumption	400 W	
Supply voltage	230 V ~ 50 Hz	
Fuse	5 mm × 20 mm, 3.15 A, 250 V, slow-blow	
Dimensions (W × H × D)	521 mm × 565 mm × 448 mm	
Weight	16.6 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	50 %, non-condensing

DSX 115 M

Speaker	Active monitor speaker Two-way system with 1.35" compression driver and 15" woofer and 3" voice coil	
Amp class	Class-D & Class-AB power stage	
Input connections	Mic / Line	2 × XLR / jack combo socket, balanced
	Line level source	1 × 3.5 mm jack socket
	Power supply	Lockable input socket (Power Twist)
Input impedance	10 kΩ, unbalanced	
	20 kΩ, balanced	
Output connections	Line level mix from both inputs	1 × XLR, 3-pin
	Power supply of further devices	Lockable output socket (Power Twist)
Output power	RMS: 450 W	
	Peak: 1350 W	
Frequency range	45 Hz ... 18 kHz	

DSX 110 M, DSX 112 M, DSX 115 M

Technical specifications

Crossover frequency	2,5 kHz	
Signal-to-noise ratio (1m/W)	-81 dB	
Dispersion characteristics	60 × 60°	
Sound pressure level (SPL), max.	134 dB	
Power consumption	450 W	
Supply voltage	230 V ~ 50 Hz	
Fuse	5 mm × 20 mm, 3.15 A, 250 V, slow-blow	
Dimensions (W × H × D)	565 mm × 665 mm × 475 mm	
Weight	23 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	50 %, non-condensing

Further information

	DSX 110 M	DSX 112 M	DSX 115 M
Multifunctional housing	Yes	Yes	Yes
Tripod flange	Yes	Yes	Yes
Tweeter 1" and above	Yes	Yes	Yes
Woofers	1 × 10 inch	1 × 12 inch	1 × 15 inch
Microphone input	Yes	Yes	Yes
Line input	Yes	Yes	Yes

8 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TRS phone plug (stereo, unbalanced)



1	Signal (left)
2	Signal (right)
3	Ground

3.5 mm TRS phone plug (mono, balanced)




1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground

Three-pole 1/8" mini phone jack (stereo, unbalanced)



1	Signal (left)
2	Signal (right)
3	Ground, shielding

XLR plug (balanced)

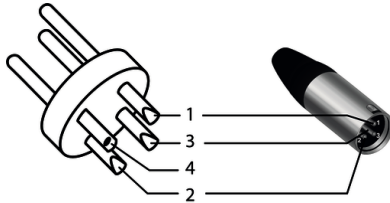

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)
4	Shielding on plug housing (option)

9 Cleaning

Device components

Clean the device components that are accessible from the outside regularly. The cleaning frequency depends on the operating environment: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the device components.

- Clean with a dry soft cloth.
- Stubborn dirt can be removed with a slightly dampened cloth.
- Never use solvents or alcohol for cleaning.

10 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

DSX 110 M, DSX 112 M, DSX 115 M



