

VST-210  
lighting stand

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

20.05.2016, ID: 165418

## Table of contents

<b>1</b>	<b>General notes.....</b>	<b>4</b>
<b>2</b>	<b>Safety instructions.....</b>	<b>6</b>
<b>3</b>	<b>Features.....</b>	<b>9</b>
<b>4</b>	<b>Operating elements.....</b>	<b>10</b>
<b>5</b>	<b>Operating.....</b>	<b>11</b>
<b>6</b>	<b>Technical specifications.....</b>	<b>16</b>
<b>7</b>	<b>Protecting the environment.....</b>	<b>17</b>


# 1 General notes

This user manual contains important information on the safe operation of the product. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this product. If you sell the product to another user, be sure that they also receive this manual.

Our products are subject to a process of continuous development. We therefore reserve the right to make changes without notice.

## **Symbols and signal words**

This section provides an overview of the symbols and signal words used in this user manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

## 2 Safety instructions

### **Intended use**

This light stand is intended to be used for the stable mounting and height-adjustable positioning of spotlights. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

**Safety**



**DANGER!**

**Danger for children**

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!

Never let children play unattended with the product.



**CAUTION!**

**Danger of tipping when transported under load**

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



**CAUTION!**

**Danger of tipping on unsuitable surfaces**

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



**CAUTION!**

**Danger of tipping due to overload**

In case of overload, the stand may tip over and cause injuries and property damage.

Never exceed the maximum load capacity specified for the stand.




### 3 Features

Special features:

- Stable follow spot tripod for mobile use
- Extension tube fixed with safety bolt and cotter
- Mounting type: 28 mm TV spigot
- Maximum load-bearing capacity: 18 kg
- Minimum height: 1.35 m
- Maximum height: 2.10 m
- Maximum vertical lift: 0.75 m
- Weight: 5.7 kg

## 4 Operating elements

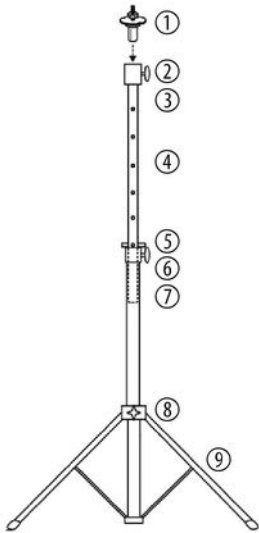

1	TV spigot
2	Safety screw on top of the extension tube for TV spigot
3	Extension tube
4	Grid holes
5	Safety bolt
6	Safety screw on the extension tube
7	Tripod tube
8	Safety screw on the carriage
9	Feet

## 5 Operating

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



### **CAUTION!**

#### **Danger of tipping when transported under load**

If the stand is moved without having removed the installed device, the stand may tip over and cause injuries and property damage.

Remove the installed device before transporting the stand.



**CAUTION!**

**Danger of tipping on unsuitable surfaces**

When the speaker stand is installed on soft or uneven ground, the stand may tip over and cause injuries and property damage.

Install the stand only on even and solid surfaces.



**CAUTION!**

**Danger of tipping due to overload**

In case of overload, the stand may tip over and cause injuries and property damage.


Never exceed the maximum load capacity specified for the stand.

**NOTICE!****Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

## Positioning

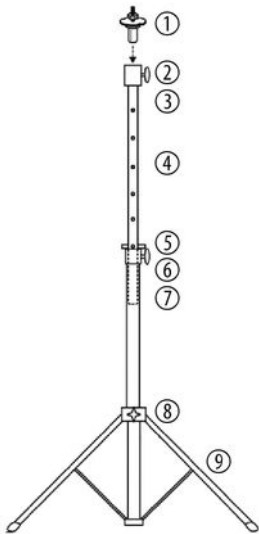

1. ➤ Unfold the feet (9) of the tripod until the cross braces are in a horizontal position.
2. ➤ Fix this position with the safety screw on the carriage (8) to which the three feet are attached
3. ➤ Put the TV spigot (1) on the upper end of the stand and tighten it with the safety screw on top of the extension tube (2).
4. ➤ Install the follow spot on the TV spigot. Observe the instructions of the respective manufacturer. The maximum load-bearing capacity of 18 kg must not be exceeded.
5. ➤ Tighten the safety screw of the spigot.
6. ➤ Pull out the safety bolt (5) and loosen the safety screw on the extension tube (6).
7. ➤ Pull out the extension tube (3) to the desired height, slide the safety bolt (5) through the corresponding grid hole (4), let the load handling safety bolt rest on the clamp and slide the safety cotter through the hole in the safety bolt.
8. ➤ Fix the position of the extension tube with the safety screw on the extension tube (6).

**Dismounting**

- 1.** ▶ Remove the follow spot.
- 2.** ▶ Slide the extension tube (3) all the way down and slide the safety bolt through the appropriate grid hole (4).
- 3.** ▶ Fix the position of the extension tube (3) with the safety screw on the extension tube (6).
- 4.** ▶ Loosen the safety screw on the carriage (8), to which the three feet are attached.
- 5.** ▶ Fold up the feet (9) of the tripod.
- 6.** ▶ Pack all parts of the system in their original package, as possible, and store the package in a dry place protected against moisture.

## 6 Technical specifications

Minimum height	1.35 m
Maximum height	2.10 m
Minimum vertical lift	0.75 m
Maximum weight-bearing capacity	18 kg
Mounting type	TV spigot (28 mm)
Weight	6 kg
Colour	Black



## 7 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.





Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · [www.thomann.de](http://www.thomann.de)