

# ***Millenium***

KS-3000 B/KS-3000 S  
keyboard stand

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

05.08.2015, ID: 265101

## Table of contents

<b>1</b>	<b>General notes.....</b>	<b>4</b>
<b>2</b>	<b>Safety instructions.....</b>	<b>6</b>
<b>3</b>	<b>Features.....</b>	<b>7</b>
<b>4</b>	<b>Operating elements.....</b>	<b>8</b>
<b>5</b>	<b>Operating.....</b>	<b>9</b>
<b>6</b>	<b>Technical specifications.....</b>	<b>13</b>
<b>7</b>	<b>Protecting the environment.....</b>	<b>14</b>

# 1 General notes

This user manual contains important information on the safe operation of the product. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this product. If you sell the product to another user, be sure that they also receive this manual.

Our products are subject to a process of continuous development. We therefore reserve the right to make changes without notice.

## **Symbols and signal words**

This section provides an overview of the symbols and signal words used in this user manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

## 2 Safety instructions

### Intended use

This keyboard stand is used for the stable and height-adjustable installation of keyboards. Use the product only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

### Safety



#### **DANGER!**

#### **Danger for children**

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke!


Never let children play unattended with the product.

### 3 Features

Special characteristics:

- Keyboard stand in columnar form for mobile use.
- Three feet and securing pin for stable standing.
- Two levels with a capacity of 35 kg each
- Carrying handle
- Maximum height: 1.20 m
- 3/8" thread for optional microphone holder, thread adapter to 5/8" thread included
- Weight: 7.7 kg

## 4 Operating elements

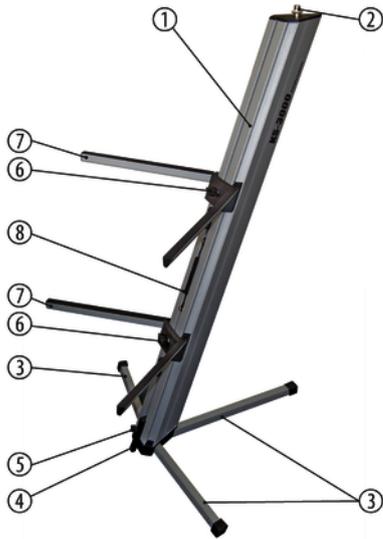

- |   |  |
|---|--|
| 1 | Body.                                  |
| 2 | Thread for optional microphone holder. |
| 3 | Feet.                                  |
| 4 | Securing pin.                          |
| 5 | Locking screw for securing pin.        |
| 6 | Locking screws for the keyboard rests. |
| 7 | Keyboard rests.                        |
| 8 | Carrying handle with locking screws.   |

## 5 Operating

Unpack and check carefully there is no transportation damage before using the product. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



### **CAUTION!**

#### **Danger of tipping on unsuitable ground**

If placed on soft or uneven ground, the stand may overturn and cause injuries and property damage.

Place the stand on a flat and solid surfaces only.



**CAUTION!**

**Danger of tipping during loaded transport**

If the stand is moved without removing the loaded equipment, the stand may tip over and cause injuries and property damage.

Remove all equipment from the stand before moving the stand.



**NOTICE!**

**Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

## Setting up

1. ▶ Place the body (1) on the floor that the rail with the locking screws points downward. Pull the feet (3) of the keyboard stand completely out of the body (1). Then fold the feet outwards until they snap into place. Now set the keyboard stand with its feet on the floor.
2. ▶ Loosen the locking screw of the securing pin (5) and slide the securing pin (4) to the ground. Then tighten the locking screw of the securing pin back firmly.
3. ▶ Flip out the arms of the lower and the upper keyboard rest (7). Loosen the associated locking screws (6) and slide the keyboard rests (7) to the desired height. If the handle (8) should be obstructing at that, loosen its locking screws, move it to a different position and tighten the locking screws of the handle back firmly.

If the keyboard rests are at the correct height, tighten the locking screws (6) back firmly.

4. ▶ Now you can put your instruments on the keyboard rests. To facilitate the wiring, two movable cable holders are attached to the body.

On the thread (2) at the head of the body, you can attach a suitable microphone arm.

### Dismounting

- 1.** ➤ Remove your instruments.
- 2.** ➤ Loosen the locking screw for the securing pin (5) and slide the securing pin (4) all the way up. Then tighten the locking screw for the securing pin back firmly.
- 3.** ➤ Loosen the locking screw (6) of the lower keyboard rest (7) and slide the keyboard rest as far as possible towards the foot of the keyboard stand. Fold up the arms of the lower keyboard rest fully into the recess of the body (1). Then tighten the associated locking screw (6) back firmly.
- 4.** ➤ Loosen the locking screw (6) of the upper keyboard rest (7) and slide the keyboard rest as far as possible towards the centre of the keyboard stand. Fold up both arms of the upper keyboard rest fully into the recess of the body (1). Then tighten the associated locking screw (6) back firmly.
- 5.** ➤ Place the body (1) on the floor that the rail with the locking screws points downward. Fold the feet (3) one after the other forward and push the feet into the body until they click into place.
- 6.** ➤ If you want to use the carrying handle (8), first loosen its locking screws. Slide the carrying handle as possible to the centre of the body (1), then pull it out and tighten the two locking screws back firmly.
- 7.** ➤ Pack all parts of the system in their original package, as possible, and store the package in a dry place protected against moisture.

## 6 Technical specifications

Height	1200 mm
Rest depth	380 mm
Maximum load capacity per level	35 kg
Weight	7.7 kg
Colour	Item no. 265101: Silver Item no. 265103: Black

## 7 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



