

*Harley Benton*

Harley Benton  
Power-Attenuator  
power attenuator

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

09.10.2015, ID: 370975

# Table of contents

<b>1</b>	<b>General information</b> .....	<b>4</b>
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	6
<b>2</b>	<b>Safety instructions</b> .....	<b>8</b>
<b>3</b>	<b>Features</b> .....	<b>12</b>
<b>4</b>	<b>Connections and controls</b> .....	<b>13</b>
<b>5</b>	<b>Technical specifications</b> .....	<b>16</b>
<b>6</b>	<b>Plug and connection assignment</b> .....	<b>17</b>
<b>7</b>	<b>Cleaning</b> .....	<b>19</b>
<b>8</b>	<b>Protecting the environment</b> .....	<b>20</b>

# 1 General information

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

## 1.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 1.2 Notational conventions

This manual uses the following notational conventions:

### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.

## 1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>CAUTION!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – danger zone.

## 2 Safety instructions

### **Intended use**

This device is used to attenuate the output level of guitar amps. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



**Safety**



**DANGER!**

**Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



### **DANGER!**

#### **Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



### **CAUTION!**

#### **Possible hearing damage**

With loudspeakers or headphones connected, the device can produce volume levels that may cause temporary or permanent hearing impairment.

Do not operate the device permanently at a high volume level. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment.



**NOTICE!**

**Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



**NOTICE!**

**Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.



In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

### 3 Features

Power soak for tube amplifiers, ideal for use in rehearsal rooms, recording studios and on stage.

- Input power handling: max. 80 Watt
- Inputs for 4  $\Omega$ , 8  $\Omega$ , 16  $\Omega$
- Outputs: Mic (low-Z), line, speaker
- Controls: Speaker level, line level

## 4 Connections and controls

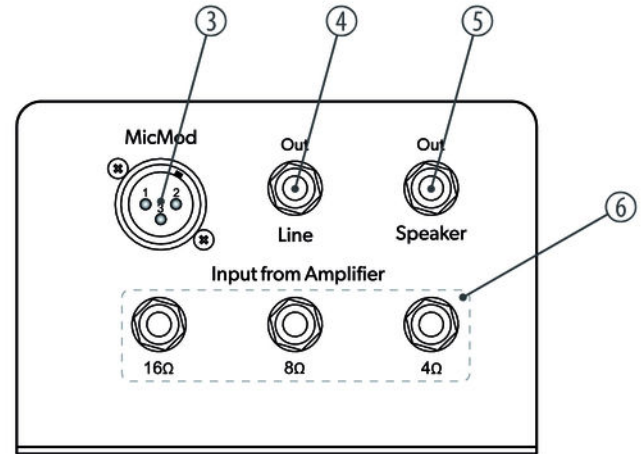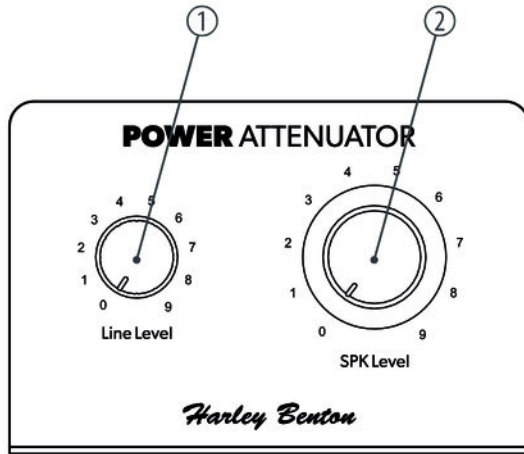

Harley Benton Power-Attenuator

1	<p><i>[Line level]</i></p> <p>Rotary control for adjusting the attenuation of the line out signal.</p>
2	<p><i>[SPK Level]</i></p> <p>Rotary control for adjusting the attenuation of the speaker out signal. Turn this knob counter-clockwise to reduce the volume of the output signal.</p> <p>The output signal is also being attenuated by approx. 3 dB with an open knob (<i>[SPK Level]</i> in position '9'). With a closed knob (<i>[SPK Level]</i> in position '0'), a very low signal may remain audible through the connected speakers when the device is used with a very high amp output signal.</p>
3	<p><i>[MicMod]</i></p> <p>Low-impedance XLR output for connecting a mixing console or recording device.</p>
4	<p><i>[Out Line]</i></p> <p>Line output for connecting an effects processor or power amp.</p>

5 *[Out Speaker]*

Output jack for connecting a passive speaker box.

If you do not connect a loudspeaker and use one of the other two outputs set the knob to '0'.

6 *[Input from Amplifier]*

Input socket for connecting an amplifier.

Always use only one of the three connectors at a time, according to the output impedance of the connected amplifier  
4  $\Omega$ , 8  $\Omega$  or 16  $\Omega$ !

## 5 Technical specifications

Max. input power handling	80 watt
Inputs	3 × 1/4" phone socket (4 Ω, 8 Ω, 16 Ω)
Outputs	1 × XLR (low-Z) 2 × 1/4" phone socket
Dimensions (W × H × D)	126 mm × 93 mm × 155 mm
Weight	950 g



## 6 Plug and connection assignment

### Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.


Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

### 1/4" TS phone plug (mono, unbalanced)



1	Signal
2	Ground, shielding

## XLR plug (unbalanced)

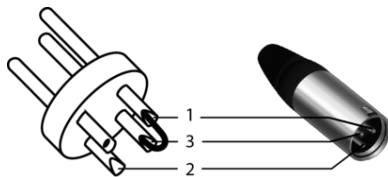

1	Ground, shielding
2	Signal
3	Bridged to pin 1

## 7 Cleaning

### Components

Clean the externally accessible device parts regularly. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the device parts.

- Clean with a soft dry cloth.
- Stubborn stains may be removed with a slightly damp cloth.
- Never use cleaners containing alcohol or thinner.

### Fan grids

The fan grids of the device must be cleaned on a regular basis to remove dust and dirt. Before cleaning, switch off the device and disconnect AC-powered devices from the mains. Use a lint-free damp cloth for cleaning. Never use solvents or alcohol for cleaning.

## 8 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

### Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

Harley Benton Power-Attenuator





Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · [www.thomann.de](http://www.thomann.de)