






 



Laser Remote Control

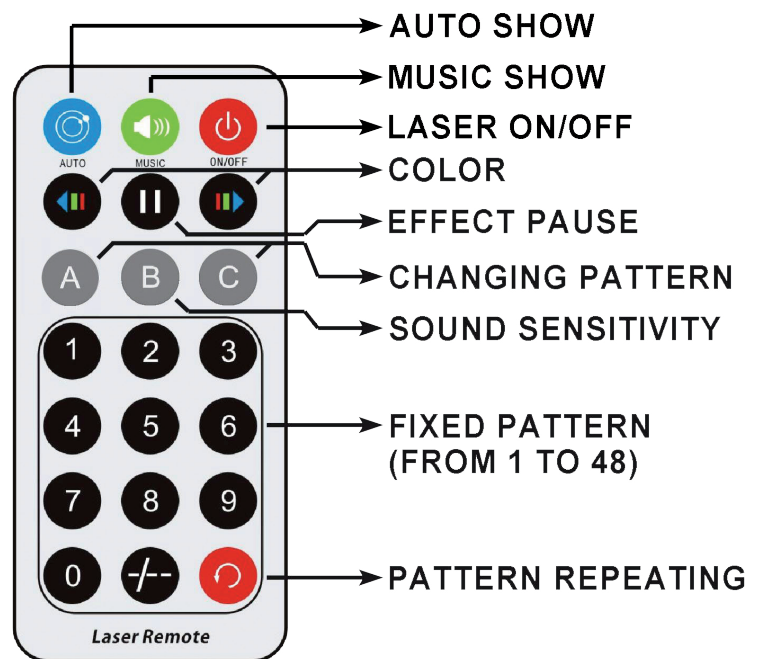

Button	Function	Description
	Switching on / off	To turn the laser on and off in REM mode. In any standalone mode, except SLA mode, pressing 2 seconds activates the REM mode.
	Auto	For an automatically running show
	Music	For a sound-activated show. The blue music LED indicator is flashing when a sound signal is detected.
	Sound sensitivity	In a sound-activated show, press the music button + B + '1~9' to set the sensitivity - '9' is the most sensitive setting.
	Colour changing	Cycle through programmed colours, red & green, green, red.
	Pattern changing	To show and change patterns.
	Fixed pattern	Choose your favourite patterns from 1 to 48.
	Pattern repeat	The previous and current pattern perform a cycle.

Safety instructions



- Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard!
- Do not operate or store the unit in locations, where it is exposed to heat, precipitation, high humidity, pollution, or strong vibrations. Indoor use only!
- Never try to dismantle or repair the unit by yourself in case it doesn't work.
- Never use solvents like alcohol etc. for cleaning the unit.

Protecting the environment

- Do not just dispose of packaging materials with your normal household waste, but make sure that they are fed to a recovery.
- At the end of its operating lifetime, do not dispose of the device with your normal household waste. This device is subject to the European directive 2002/96/EC. Dispose of this device through an approved waste disposal firm or through your local waste facility.
- Dispose of the batteries according to national or local regulations regarding hazardous waste.

