



## Controller SC-4

## User manual

This manual contains important information on the safe operation of the product. Read and follow the safety advice and instructions given. Retain the manual for future reference. If you pass the product on to others please include this manual.

## Safety instructions

### Intended use

This device is used as 4-channel chaser control for effect lighting. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

### Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts from the product. They could swallow the pieces and choke! Never let children unattended use electrical devices.

### Danger to life due to electric shock!



This device may only be connected to power supplies whose protective ground contact provides earth potential.

### Where to use the product

Never use the product

- in conditions of extreme temperature or humidity
- in extremely dusty or dirty areas
- at locations where the unit can become wet

### General handling


- To prevent damage, never use force when handling the product.
- Never immerse the product in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

## Features

- Chaser control either via built-in microphone or automatic change control
- Speed control
- 4 IEC power plugs included

## Operating elements and connections

1. Mode switch: to select the desired operating mode, slow, normal, audio.
2. Channel indicators: to show which channel is currently turned on.
3. SPEED control: to adjust the chaser speed in slow and normal mode.
4. IEC connectors for the spotlights to be controlled.
5. POWER switch: to turn the device on and off.
6. FUSE: Safety fuse. If the device does not work, disconnect it from the power supply and unscrew the fuse from its holder. If blown, replace it with a new fuse of the same type.
7. Mains cable to connect to an earthed mains power outlet.

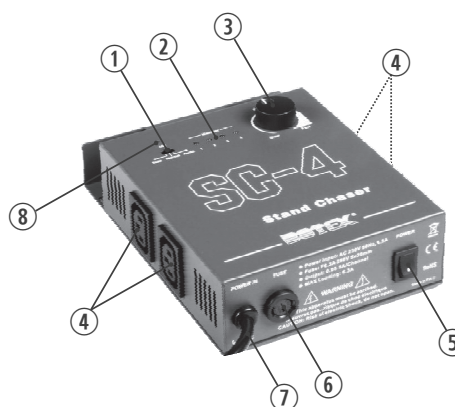

## Using the product

1. Connect up to 4 spot lights via suitable cables to the IEC connectors ④.
2. Insert the plug of the power cord ⑦ into a suitable mains power outlet and switch on the device via the POWER switch ⑤.
3. Select the desired operating mode:
  - SLOW: Operation with slow chaser speed
  - NORMAL: Operation with normal chaser speed
  - AUDIO: Control via audio impulses picked up by the built-in microphone.
4. In SLOW and NORMAL mode, use the SPEED control ③ to select the desired chaser speed.
5. When the unit is no longer used, turn it off with the POWER switch ⑤ and disconnect it from the mains power outlet.

## Technical specifications

- Voltage supply: 230 V ~ 50 Hz
- Current draw: max. 6.3 A
- Current output: 0.05 – 5 A per channel, max. 6.3 A in total
- Fuse: 5 mm × 20 mm, 6.3 A, 250 V, fast-acting
- Dimensions (L × W × H): 200 × 142 × 50 mm
- Weight: 1.20 kg



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.