

TL6000 Torch Lamp

User manual

This manual contains important information on the safe operation of the device. Read and follow the safety advice and instructions given. Retain the manual for future reference. If you pass the device on to others please include this manual.

Safety instructions

Intended use

This device is used for the wireless transmission of audio signals. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

Danger for children



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the $\,$ unit. They could swallow the pieces and choke! Never let unattended chil-

dren use electrical devices.

Where to use the product

Never use the product

- in direct sunlight
- in conditions of extreme temperature or humidity
- · in extremely dusty or dirty areas
- at locations where the unit can become wet
- near magnetic fields

General handling

- To prevent damage, never use force when operating the switches and controls.
- Never immerse the appliance in water. Just wipe it with a clean dry cloth. Do not use liquid cleaners such as benzene, thinners or flammable cleaning agents.

Keep foreign substances from the unit!

Keep the device away from containers with liquids. Should any liquid get into the unit, this could lead to its destruction or fire. Be sure not to let any metal objects into the

Features

- · LED flashlight with zoom function
- · Six different light modes: (100% / 50% / 15% / stroboscope / SOS)
- Robust aluminium housing
- · Even light distribution
- Easy handling thanks to the large button and sliding focus
- · Including hand strap and nylon belt holster
- Operation with 3 × AAA batteries (not included)

Using the device

- Unscrew the cap from the flashlight handle and remove the battery holder.
- Insert $3 \times AAA$ batteries (not included), observing the polarity indicated on the battery holder.
- Push the assembled battery holder back into the handle and turn the cap hand-tight.
- Press the switch to turn on the light. Tap the switch to set 5 modes: Full | Medium | Low | Stroboscope | SOS.
- 5. The flashlight has a zoom of 10° to 75°. You can adjust it by sliding the lamp
- To turn off the light, hold the switch for one second.
- Should the light output decrease significantly, the batteries are exhausted and must be replaced. The flashlight is then ready for use again.
- To reduce the chance of accidental dropping, we recommend using the includ-



Technical data

Beam angle $10^{\circ} - 75^{\circ}$ Light output 10° / 1 m 3900 lx Colour temperature 10300 K

Light duration > 8 hours @ full power

Diameter handle 29 mm Diameter lens 41 mm Overall length 139 - 158 mm Weight w/o batteries 152 g

For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.