


Antennas

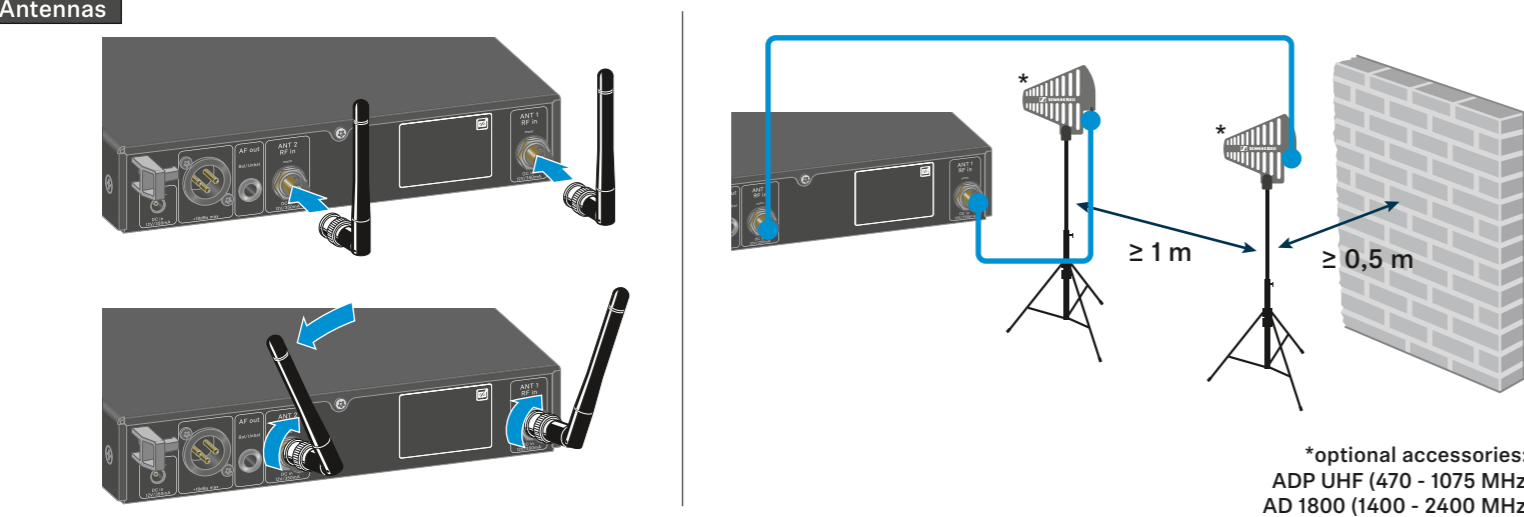

***optional accessories:**
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

EW-D Smart Assist

Download on the **App Store** | GET IT ON **Google Play**

Sennheiser Documentation App

Download on the **App Store** | GET IT ON **Google Play**

or online at www.sennheiser.com/download
EW-D_

Sennheiser electronic GmbH & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 02/21, 583962/A02

Evolution Wireless Digital


EW-D EM
EW-D SK
EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER


Audio Out

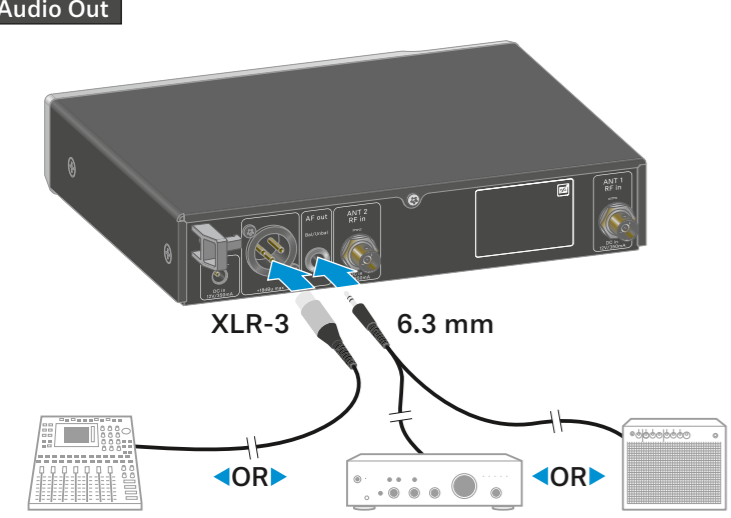

XLR-3 | 6.3 mm

OR

Power supply

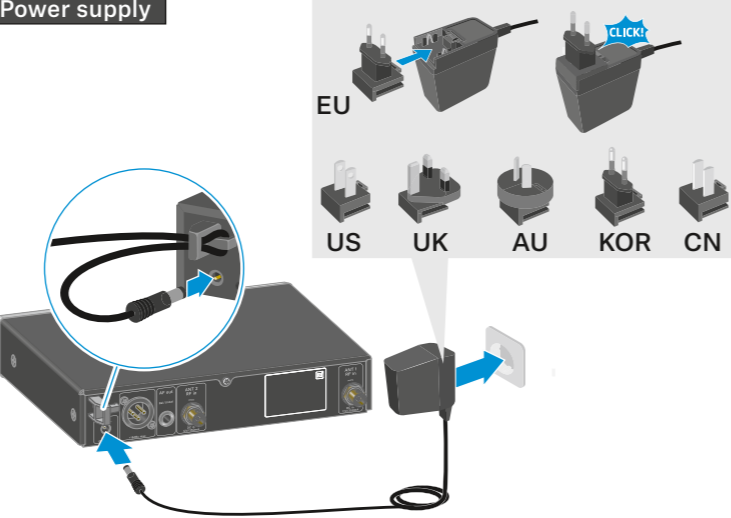


EU | US | UK | AU | KOR | CN

EW-D Smart Assist


The EW-D Smart Assist app simplifies your workflow

- EW-D Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store** | GET IT ON **Google Play**




In the box

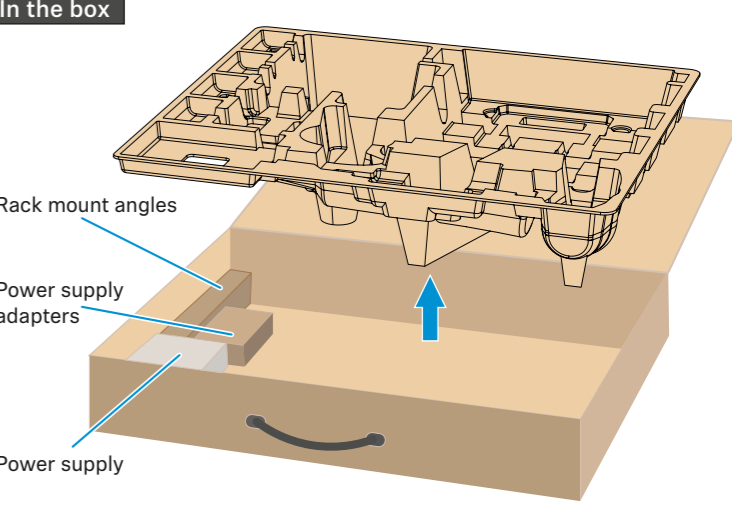

Rack mount angles
Power supply adapters
Power supply


Battery

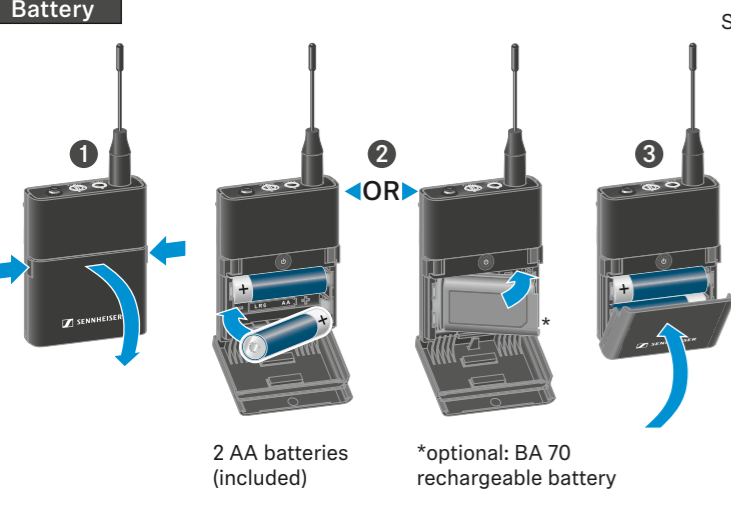

1 2 3

2 AA batteries (included) | *optional: BA 70 rechargeable battery


Battery

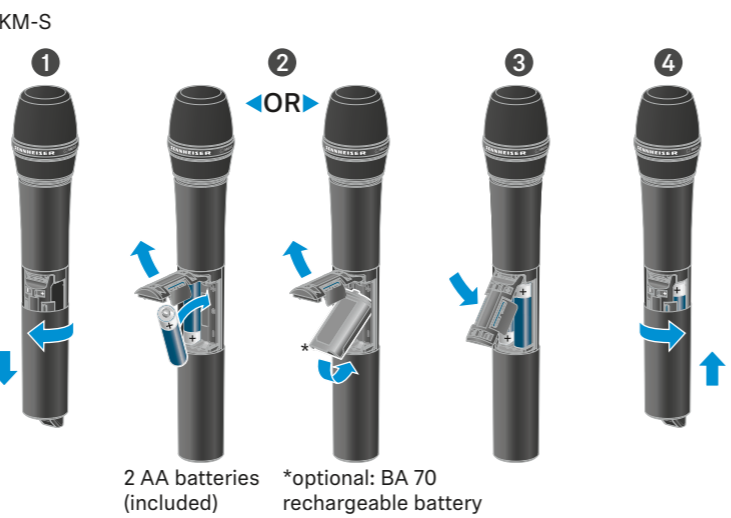


1 2 3 4

2 AA batteries (included) | *optional: BA 70 rechargeable battery

EW-D EM

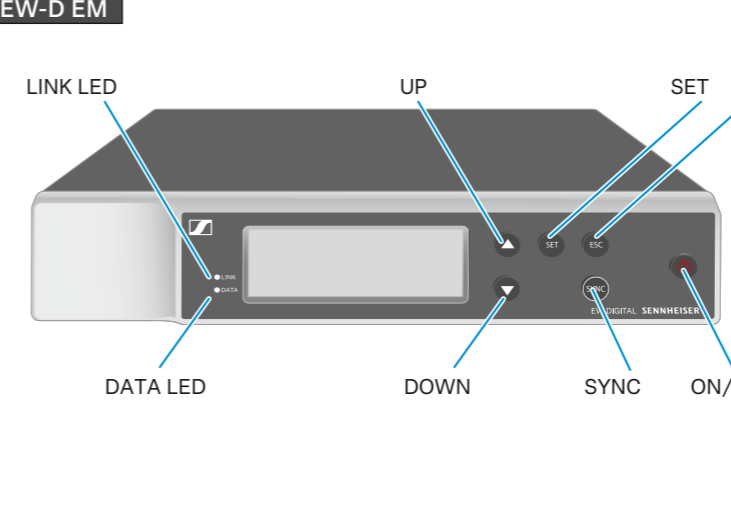

LINK LED | DATA LED | UP | DOWN | SYNC | ON/OFF | SET | ESC

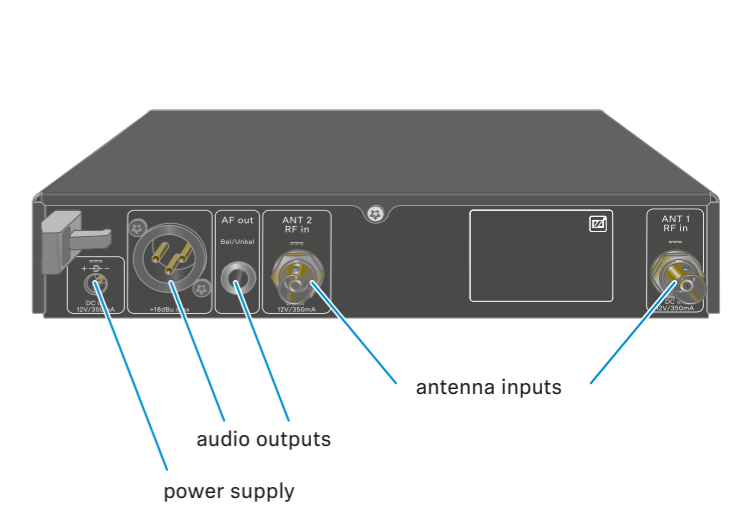


audio outputs
power supply
antenna inputs

On/Off

Off -> On
EM/SK/SKM-S
short on

On -> Off
EM/SK/SKM-S
long off


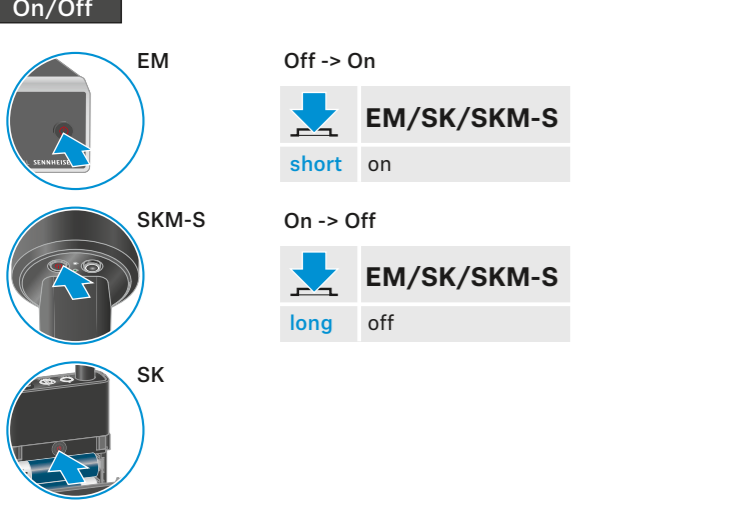


Identify/Battery check


On -> Identify/Check
SK/SKM-S
short Identify/Check

LINK LED SK/SKM-S	≤ 100 %
LINK LED SK/SKM-S	≤ 60 %
LINK LED SK/SKM-S	≤ 20 %

Display of synced EM

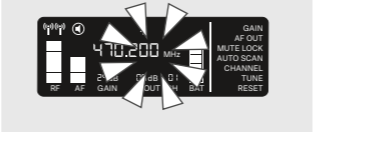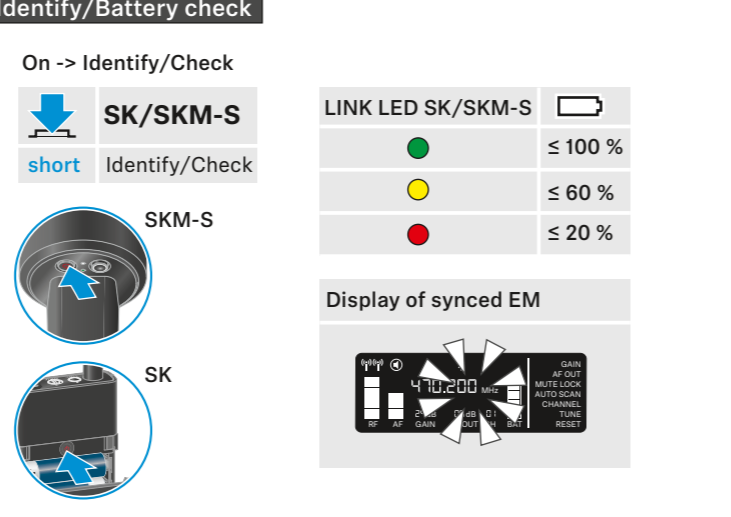



EW-D SKM-S

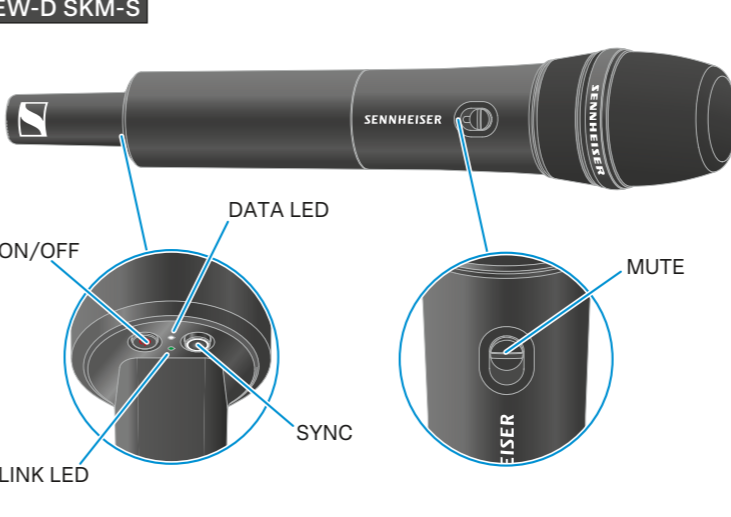

ON/OFF | LINK LED | DATA LED | SYNC | MUTE

EW-D SK

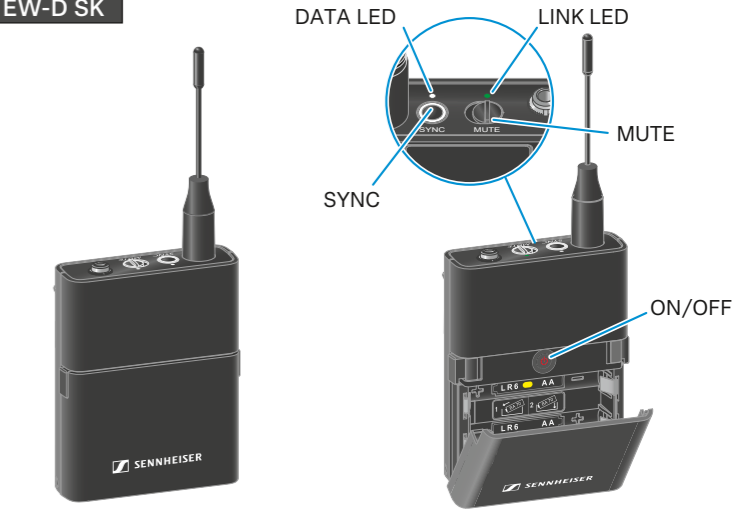

DATA LED | LINK LED | SYNC | MUTE | ON/OFF

Display

Antenna switching diversity, Mute lock, Mute, Frequency, App connection, Key lock, Menu, Radio frequency level, Transmitter audio level, Gain, Audio output level, Channel, Transmitter battery.

Instruction Manual

LEDs

LINK LED	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

DATA LED	
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EM: LINK, DATA, RF

SKM-S: DATA, LINK

SK: DATA, LINK

Instruction Manual

Sync

EM: SYNC button

SKM-S: SYNC button

SK: SYNC button

Instruction Manual

Menu

Gain: 470.200 MHz

AF Out: 470.200 MHz

Mute Lock: 470.200 MHz

Auto Scan: 470.200 MHz → 473.200 MHz

Channel: 470.200 MHz → 472.600 MHz

Tune: 470.200 MHz → 473.200 MHz

Reset: NO → YES

Instruction Manual

EW-D Smart Assist

Available on the App Store | Available on Google play

Sennheiser Documentation App

Available on the App Store | Available on Google play

Mute

SK: MUTE button

SKM-S: MUTE button

Instruction Manual

Key lock

press both

unlocked

locked

Instruction Manual

Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1: yellow

wireless link 2: blue

etc.

Instruction Manual

SKM-S

Correct: Hand holding the microphone.

Incorrect: Holding the microphone by the grille.

Instruction Manual

ME 2, ME 3, ME 4

ME 2: 25 cm (10")

ME 3: 2...3 cm (1")

ME 4: 2...3 cm (1")

Instruction Manual