



Keyboard Cross Reference: GKB-61

January 3rd, 2013

* Note This Page Not Formatted For Printing

Use Ctrl-F to search by Manufacturer, Model Number, or UPC

Manufacturer	Model	UPC	Type	Fits (1)
Access	VIRUS TI 61	889406177802	Keyboard	GKB-61
Alesis	A6		Keyboard	GKB-61
Alesis	ANDROMEDA		Keyboard	GKB-61
Arturia	Origin		Keyboard	GKB-61
Benjamin Adams	CK62		Keyboard	GKB-61
Casio	AT3	079767313838	Keyboard	GKB-61
Casio	CTK-2000	079767313517	Keyboard	GKB-61
Casio	CTK-2100	079767313654	Keyboard	GKB-61
Casio	CTK-2100		Keyboard	GKB-61
Casio	CTK-3000	079767313531	Keyboard	GKB-61
Casio	CTK-3200	079767314071	Keyboard	GKB-61
Casio	CTK4000	079767313548	Keyboard	GKB-61
Casio	CTK-4200	079767314002	Keyboard	GKB-61
Casio	CTK-496		Keyboard	GKB-61
Casio	CTK5000		Keyboard	GKB-61
Casio	CTK6000	079767313814	Keyboard	GKB-61
Casio	CTK-691		Keyboard	GKB-61
Casio	CTK7000	079767313821	Keyboard	GKB-61
Casio	CTK710		Keyboard	GKB-61
Casio	CTK800		Keyboard	GKB-61
Casio	CTK810		Keyboard	GKB-61
Casio	CTK900		Keyboard	GKB-61
Casio	LK-165	874171004248	Keyboard	GKB-61
Casio	LK-2005		Keyboard	GKB-61
Casio	LK-220		Keyboard	GKB-61
Casio	LK-230	079767313661	Keyboard	GKB-61
Casio	LK-270		Keyboard	GKB-61
Casio	LK-280	079767314026	Keyboard	GKB-61
Casio	LK-300TV		Keyboard	GKB-61
Casio	XW-G1	079767314163	Keyboard	GKB-61
Casio	XW-P1	079767314156	Keyboard	GKB-61
CME	UF6		Keyboard	GKB-61
CME	UF60	877295000585	Keyboard	GKB-61
CME	VX 6		Keyboard	GKB-61
Dave Smith	POLY EVOLVER KEYBOARD	855346000869	Keyboard	GKB-61
Ketron	Audya 5		Keyboard	GKB-61
Korg	CX3		Keyboard	GKB-61
Korg	i30		Keyboard	GKB-61
Korg	KORG M1		Keyboard	GKB-61
Korg	Kronos 61	4959112081000	Keyboard	GKB-61
Korg	M3-61	4959112053922	Keyboard	GKB-61
Korg	O1WFD 61		Keyboard	GKB-61
Korg	Pa3X 61	4959112081826	Keyboard	GKB-61
Korg	PA50SD	4959112071803	Keyboard	GKB-61
Korg	X3		Keyboard	GKB-61
Kurzweil	K2661		Keyboard	GKB-61
Kurzweil	PC161		Keyboard	GKB-61
Kurzweil	PC361		Keyboard	GKB-61
Kurzweil	PC3K6	883793202918	Keyboard	GKB-61
Kurzweil	PC3LE6	883793202420	Keyboard	GKB-61
Nord	C2	834035000861	Keyboard	GKB-61
Nord	C2 Combo Organ	834035000861	Keyboard	GKB-61
Nord	C2D Combo Organ	834035000861	Keyboard	GKB-61
Nord	NC1		Keyboard	GKB-61
Novation	Impulse61	815301000426	Keyboard	GKB-61
Roland	BK5	761294502037	Keyboard	GKB-61
Roland	E09	761294400340	Keyboard	GKB-61
Roland	EXR-3		Keyboard	GKB-61
Roland	EXR46-OR		Keyboard	GKB-61
Roland	EXR-5		Keyboard	GKB-61
Roland	FANTOM G6	761294089682	Keyboard	GKB-61
Roland	FANTOM X6		Keyboard	GKB-61
Roland	FANTOM XA 61		Keyboard	GKB-61
Roland	GW-7		Keyboard	GKB-61
Roland	GW-8	761294408179	Keyboard	GKB-61
Roland	JV30		Keyboard	GKB-61
Roland	Prelude	761294409473	Keyboard	GKB-61
Roland	RS-50		Keyboard	GKB-61
Roland	RS-70		Keyboard	GKB-61
Roland	V SYNTH		Keyboard	GKB-61
Roland	V SYNTH GT	761294403051	Keyboard	GKB-61
Roland	XP-50		Keyboard	GKB-61

StudioLogic	Sledge		Keyboard	GKB-61
StudioLogic	VMK-161+	093018822009	Keyboard	GKB-61
StudioLogic	VMK-161+ORGAN		Keyboard	GKB-61
Suzuki	SP-37		Keyboard	GKB-61
Suzuki	SP-67		Keyboard	GKB-61
Yamaha	DJX 203		Keyboard	GKB-61
Yamaha	EZ200	086792304458	Keyboard	GKB-61
Yamaha	EZ220	086792963136	Keyboard	GKB-61
Yamaha	MM6	086792858098	Keyboard	GKB-61
Yamaha	MO6		Keyboard	GKB-61
Yamaha	MOTIF ES6		Keyboard	GKB-61
Yamaha	MOTIF XF6	086792941806	Keyboard	GKB-61
Yamaha	MOTIF XS6		Keyboard	GKB-61
Yamaha	MOTIF6		Keyboard	GKB-61
Yamaha	MOX6	086792950884	Keyboard	GKB-61
Yamaha	PSR E423	086792939506	Keyboard	GKB-61
Yamaha	PSR-293		Keyboard	GKB-61
Yamaha	PSR-3000		Keyboard	GKB-61
Yamaha	PSR-A2000	086792958019	Keyboard	GKB-61
Yamaha	PSR-E203		Keyboard	GKB-61
Yamaha	PSR-E213		Keyboard	GKB-61
Yamaha	PSR-E223		Keyboard	GKB-61
Yamaha	PSR-E233	086792944654	Keyboard	GKB-61
Yamaha	PSR-E233	086792944654	Keyboard	GKB-61
Yamaha	PSR-E303		Keyboard	GKB-61
Yamaha	PSR-E323		Keyboard	GKB-61
Yamaha	PSR-E333	086792944777	Keyboard	GKB-61
Yamaha	PSR-E333	086792944777	Keyboard	GKB-61
Yamaha	PSR-E403		Keyboard	GKB-61
Yamaha	PSR-E413		Keyboard	GKB-61
Yamaha	PSR-E423	086792939506	Keyboard	GKB-61
Yamaha	PSR-E433	086792964706	Keyboard	GKB-61
Yamaha	PSR-OR700		Keyboard	GKB-61
Yamaha	PSR-S500		Keyboard	GKB-61
Yamaha	PSR-S550BK		Keyboard	GKB-61
Yamaha	PSR-S650	086792944586	Keyboard	GKB-61
Yamaha	PSR-S700		Keyboard	GKB-61
Yamaha	PSR-S710	086792931784	Keyboard	GKB-61
Yamaha	PSR-S900		Keyboard	GKB-61
Yamaha	PSR-S910	086792931753	Keyboard	GKB-61
Yamaha	SY77		Keyboard	GKB-61
Yamaha	YPT-200		Keyboard	GKB-61
Yamaha	YPT-220	086792899558	Keyboard	GKB-61
Yamaha	YPT-310		Keyboard	GKB-61
Yamaha	YPT-400		Keyboard	GKB-61

This list is intended as a guide; not a substitute for testing the actual fit. All product information referenced above is based on the manufacturer's published specifications. These specifications may change over time and without notice. If you have questions on a specific case or product, or see that a correction is needed, please contact Gator Customer Service at info@gatorcases.com