

Strich Music BT-FP2 Bluetooth Page Turner


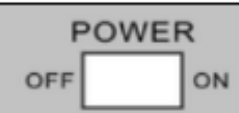




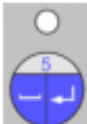
Product description:

A product available in MAC, Ipad, Iphone, Android, computer and other systems via Bluetooth 3.0 connection.

Functions:

Two foot pedal switches are located on the left and right side of the middle panel respectively. On the middle, there are five keys, which can be selected to perform different functions. In the following each key has a corresponding yellowing LED indicator to show the option you choose.

Panel:

Option	ON	OFF	Logo
REPEAT ON/ OFF	indicates that the switch is opened to send data repeatedly to host computer	indicates that the switch's repeat function is closed .it sends the data to host computer only once.	
POWER ON/ OFF	indicates that the power has been opened	indicates that the power has been turned off.	
Option	Pedal Left	Pedal Right	Logo
1	Page Up	Page Down	
2	Left Arrow	Right Arrow	
3	Up Arrow	Down Arrow	
4	Left Mouse Click	Right Mouse Click	
5	Space	Enter	

REPEAT ON/ OFF

ON: indicates that the switch is opened to send data repeatedly to host computer.

OFF: indicates that the switch's repeat function is closed. It sends the data to host computer only once.

For example:

1) If you choose option 2 and the REPEAT trigger-switch is "ON", while you press and hold down the left foot pedal switch, it will send "Left arrow" command continuously.

2) If you choose option 2 and the REPEAT trigger-switch is "OFF", while you press and hold down the left foot pedal switch, it will send "Left arrow" command only once.

POWER ON/ OFF

ON: indicates that the power has been opened.

OFF: indicates that the power has been turned off

Colors	Battery power
Green	Above 60%
Yellow	Above 30%
Red	Under 20%

RESET KEY

Press the key for 3 seconds, the memory is forgotten and the device has entered pairing again.