



- UHF receiver for free solo systems
- Storeable presets
- Adjustable squelch with threshold meter
- Frequency scan
- Adjustable AF out
- Infrared transmission of settings from receiver to transmitter
- Pilot reference
- 25 kHz grid
- 9.5" 1 RU housing with 2 × BNC antenna inputs
- XLR and 1/4" output
- Operation via DC 12 V $\overline{\overline{=}}$  0.5 A power adapter
- Frequency band: 823 - 832 MHz

A detailed operating manual for each whole set (item no. 296201, 296204, 296206) can be downloaded from [www.thomann.de](http://www.thomann.de).



Discover the entire t.bone range on our website:  
[tbone.audio](http://tbone.audio)



Visit us on Instagram and discover the full audio experience:  
[tbone.audio/instagram](https://www.instagram.com/tbone.audio/)



Visit our YouTube channel for product videos and interesting stories:  
[tbone.audio/youtube](https://www.youtube.com/tbone.audio/)

#### General information

This document contains important information. Read and follow the instructions given. Keep the document for future reference. If you pass on the product, please also include this document. The right to make changes is reserved. Please refer to the latest version of the documentation, which is ready for download under [www.thomann.de](http://www.thomann.de).

#### Intended use

This product is intended to be used for wireless audio transmission. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use. Do not operate or store the product in locations, where it is exposed to heat, precipitation, high humidity, pollution, or strong vibrations. Indoor use only! This product may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



#### Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such knobs) that children could play with.



#### Damage to the external power supply due to high voltages!

The device is powered by an external power supply. The external power supply can be damaged if it is operated with the incorrect voltage or if high voltage peaks occur. In the worst case, excess voltages can also cause a risk of injury and fires. Make sure that the voltage specification on the external power supply matches the local power grid before plugging in the power supply. Only operate the external power supply from professionally installed mains sockets that are protected by a residual current circuit breaker (FI). As a precaution, disconnect the power supply from the power grid when storms are approaching or if the device will not be used for a longer period.



#### Possible staining due to plasticiser in rubber feet!

The plasticiser contained in the rubber feet of this product may react with the coating of the floor and cause permanent dark stains after some time. If necessary, use a suitable mat or felt slide to prevent direct contact between the device's rubber feet and the floor.



#### Damage to the device if operated in unsuitable ambient conditions!

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments with direct sunlight, heavy dirt and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.



Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended. Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. When disposing of the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste management facility. Proper disposal protects the environment as well as the health of your fellow human beings. Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. You can return your old device to [Thomann GmbH](http://www.thomann.de) at no charge. Check the current conditions on [www.thomann.de](http://www.thomann.de).



Observe the disposal note regarding documentation in France.