



- ✓ Stereo Looper with effects 'Reverse playback' and 'Playback tempo and pitch control'
- ✓ Easy operating
- ✓ Records up to 10 minutes
- ✓ Unlimited overdubbing
- ✓ Windows software available from Thomann product website - no installation needed

Features

2 × controls:	Right / left level, playback tempo and pitch
2 × switches:	Swap channels / playback forwards / playback backwards Stop / FX
2 × foot switches:	Looper: record, play, undo / redo FX: stop loop, effects control
2 × LED:	Looper & FX
Connectors:	Separate 1/4" phone sockets for inputs R / L Separate 1/4" phone sockets for outputs R / L Micro USB connector for up and download (WAV audio, 48 kHz / 24 bit, incl. cable) Power supply (not supplied)
Supply:	external power supply (item number 108096), not supplied
Current draw:	90 mA
Dimensions:	108 (W) × 43 (H) × 90 (D) mm
Weight:	362 g

A detailed operating manual can be downloaded from www.thomann.de

This device is intended to record instrument signals and play them in endless loop. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke! Never let children use electrical devices unattended.



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose of your old device with your normal household waste. Dispose of this product through an approved waste disposal firm or through your local waste facility. Comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

Thomann GmbH
Hans-Thomann-Str. 1 • 96138 Burgebrach
Germany • www.thomann.de

Harley Benton