

Safety instructions

Intended use

This device has been designed for listening to sound recordings. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Keep the ear phones out of reach of children. They could swallow the pieces and choke! Never let children play unattended with the electrical devices.



CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment.

Starting up

- Open the charging cradle and remove the ear phones. Remove the two plastic strips protecting the charging contacts during shipment.
- Place the ear phones back in the charging cradle and charge the charging cradle with the USB cable supplied for 60 minutes before using for the first time.

Battery in %	LED indicator status (2)
0 – 24 %	Blue LED flashes 1 ×
25 – 49 %	Blue LED flashes 2 ×
50 – 74 %	Blue LED flashes 3 ×
75 – 100 %	Blue LED lights up

- Take the ear phones out of the charging cradle for use. They switch on automatically and connect to each other.
- If both ear phones flash blue rapidly, this means they are ready to connect to each other; if "L" flashes blue and red and "R" flashes blue, this means that they are connected to each other. You will find "Fun Generation Rock Buds" in the Bluetooth settings of your device and can now connect them. Refer to "Troubleshooting" if connection is not successful.
- The ear phones can also be used individually in all functions.

Troubleshooting

If you have problems with connecting, the ear phones are in discharge connecting mode, i.e. the LED flashes rapidly blue and red. Probably you have to reset both ear phones.

- Fully charge the ear phones in the charging cradle. Remove the protective film on the charging contacts if necessary.
- Take the ear phones out of the charging cradle
- Keep the button of the ear phone pressed until you hear the announcement "power off" to switch off the ear phone.
- Then keep the button pressed for about 10 seconds. The ear phone will be switched on and off for resetting.
- Place the ear phones back in the charging cradle. The charging process starts.
- Take the ear phones out of the charging cradle. One of the ear phones flashes red and blue at one-second intervals. The ear phones are now ready for connecting.
- Connect the Rock Buds to your smartphone.

If the problem cannot be remedied, please contact us at service@thomann.de.

Technical specifications

- Bluetooth 5.0
- Bluetooth-Profile: APTX, HFP, HSP, A2DP (SBC.AAC) AVRCP
- Range: 10 m
- Charging time: charging cradle: 60 minutes
ear phones: 15 minutes
- Operating time at full battery charge:
max. 5 Std. hours for playing music or listening to phone calls
- Built-in microphone
- Charging current: 5 V DC / 1 A

- Frequency range: 15 Hz ... 22 kHz
- Sensitivity at 100 Hz: 102 gB SPL / 1 mW
- 6.0 mm neodymium micro-driver
- Dimensions (W × H × D): ear phones: 24 mm × 22 mm × 26 mm
charging cradle: 65 mm × 30 mm × 38 mm
- Weight: ear phones: each 4.5 g
total: 40 g
- Colour: black (item no. 467512)
white (item no. 478176)
- Temperature range: -10 °C ... 50 °C



Operating

The volume is controlled via the Bluetooth device. The ear phones are operated via the buttons (1).

Play music

- Press button once: Start / Pause
- Press button twice in quick succession:
„L“: skip back
„R“: skip forwards

Accept calls

The sound is played back via both ear phones. The control is done from one of the two ear phones.

- Press button once: accept and end call
- Press button twice in quick succession: decline call

Voice control

Only possible if your smartphone supports voice control.

- Press button three times in quick succession: open voice assistant

Charging the ear phones

If the remaining capacity of the ear phones is very low, you hear the announcement "battery low" on both ear phones. It is possible to charge the ear phones 4 × until the charging cradle is empty.

- Place the ear phones in the charging cradle and ensure safe contact. The indicators of the ear phones lights up red.



UKFor the packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose these materials with your normal household waste, but make sure that they are fed to a recovery. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste. Dispose this device through an approved waste disposal firm or through your local waste facility. When discarding the unit, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.