

- Tom stand with two brackets
- Double-braced
- Single-stage extendable
- Ball joint
- Memory lock
- Three mounting options
- Additional receptacle for a cymbal arm
- Height: 75 cm - 110 cm (item no. 542615)
65 cm - 100 cm (item no. 542615)
- Chrome-plated
- Weight: 4.4 kg

Mounting



The three legs of the tom stand must be unfolded, lowered and locked with the wing nut.



Loosen the wing nut at the extension tube. Now you can pull out the extension tube to the desired height. The height depends on the seat height of the drummer. For fixing the position, tighten the wing nut at the extension tube.



The toms are put on the brackets. Adjust the position of the toms via the ball joints. To fix this position, tighten the wing nuts on the ball joints.



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!



The plasticiser contained in the rubber feet of this product may possibly react with the coating of your surface and after some time cause permanent dark stains. In case of doubt, do not put the rubber feet directly on the surface and use a suitable underlay if necessary, i.e. felt-pad floor protectors or similar.



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.