
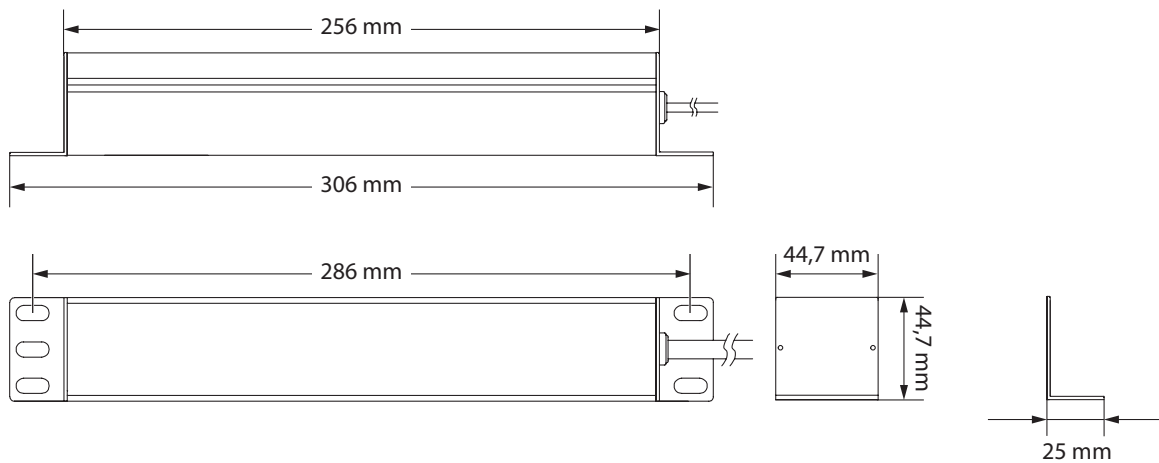


- Power strip / power distributor
- 4 × safety socket on the front
- Installation brackets can be turned over.
- Power cable length: 2 m
- Supply voltage: 230 V ~ 50 Hz
- Max. permitted load: 16 A, 3680 W
- Installation depth: 45 mm
- Colour: Black
- Dimensions (W × H × D): 306 mm × 44.7 mm × 44.7 mm
- Weight: 0.6 kg
- Ambient conditions:
 - Temperature range: 0° C...40° C
 - Relative humidity: 20%...80% (non-condensing)

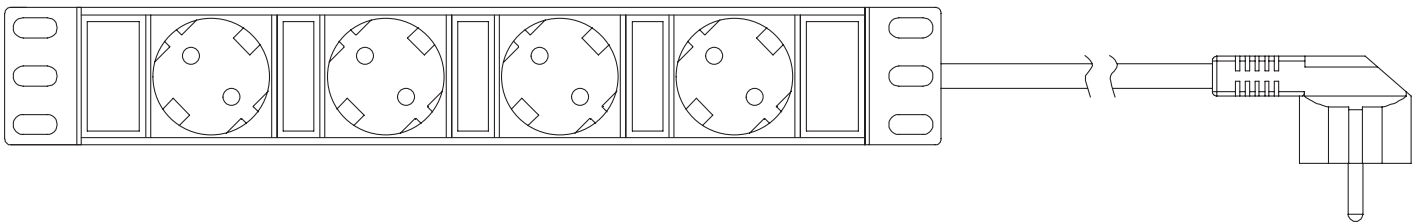

General information

This document contains important information. Read and follow the instructions. Keep the document for future reference. If you pass the product on to others, please include this document. Contents are subject to change. Please refer to the latest version of the documentation, which is available for download at www.thomann.de.

Intended use

This device is used to distribute electrical power to several connected consumers. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damage resulting from improper use. This device may be used only by persons with sufficient physical, sensory, and intellectual abilities and the necessary knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the product. Never allow children to play with the packaging material and the product. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the product without supervision. Keep small parts away from children and make sure that the product does not shed any small parts that children could play with.



Risk of death from electrical current!

A short circuit can cause fires and loss of life. Do not modify the mains cable or the power plug! If the insulation is damaged, immediately switch off the power supply and have it repaired. If in doubt, contact a qualified electrician.



Risk of death from electrical current!

The device contains parts where high voltage is present. Never remove any covers. There are no user-serviceable parts inside the device. Do not use the device if covers, safety equipment or optical components are missing or damaged.



Risk of death from electrical current!

Even in standby mode, mains voltage is present on the outputs of the device and on the connected loads. For this reason there is a risk of death and property damage when consumers are connected and disconnected. Disconnect the power plug from the mains socket before connecting and disconnecting consumers to make the device voltage-free.



Risk of injury and fire if a defective device is operated!

A defective device poses an increased safety risk. Operating a defective device can lead to fires and cause injuries. Never operate a defective device. Have a defective device repaired only by qualified service personnel. Do not try to repair it yourself.



Risk of fire due to covering the device!

The device can overheat and catch fire if operated while covered. Never leave the device covered when in use.



Risk of fire due to the connection of multiple power strips!

Connecting multiple power strips in series can lead to an overload of the circuit. This creates a risk of overheating and a fire. Never connect multiple power strips in a row.



Damage to the device if operated in unsuitable ambient conditions!

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments subject to direct sunlight, heavy pollution and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or fog): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.



Disposal of the packing material

Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner. Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



Disposal of your old device

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions at www.thomann.de.

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal. For example, use the Thomann GmbH classified ads.

If your old device contains personal data, delete those data before disposing of it.



Observe the disposal note regarding documentation in France.