

the t.bone - Free Solo Transmitter

EN



- ✓ UHF handheld transmitter for free solo systems
- ✓ Dynamic microphone
- ✓ Cardioid characteristic
- ✓ LCD, metal housing
- ✓ 2 × AA (rechargeable) batteries
- ✓ Frequency bands 596 - 620 MHz, 740 - 752 MHz
823 - 832 MHz, 863 - 865 MHz

A detailed operating manual for each whole set (item no. 296161, 296196, 296197, 296199) can be downloaded from www.thomann.de

This device is intended to be used for wireless audio transmission. Use the device only as described here. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use. Do not operate or store the unit in locations, where it is exposed to heat, precipitation, high humidity, pollution, or strong vibrations. Indoor use only!



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose of with your normal household waste. Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of the batteries according to national or local regulations regarding hazardous waste. To protect the environment, dispose of empty batteries at your retail store or at appropriate collection sites.

Thomann GmbH
Hans-Thomann-Str. 1 • 96138 Burgebrach
Germany • www.thomann.de

**the
t.bone**