

## Firmware update

To carry out a firmware update of the drum module, you can download the latest firmware from our homepage ([www.thomann.de](http://www.thomann.de)). The firmware is only suitable for a Microsoft Windows operating system.

The update can only be carried out with a USB stick formatted as FAT32.

The device has two firmware applications: Sounds and Trigger.

We recommend to save your settings and the user data before starting the update. For further information about data saving and data reset refer to the detailed user manual.

1. Download the firmware updates.
2. Format the USB stick with your computer as FAT32.
3. Create a new folder **update** on the USB stick and save there the update file(s) with the names **SOUNDS.DAT** and/or **TRIGGERS.DAT**.
4. Insert the USB stick into the USB port [USB MEMORY] of the drum module.
5. Hold the buttons [KIT] and [SONG] pressed and switch on the drum module.  
If there is no USB stick inserted, the display shows 'NO FILE'.  
→ The update menu opens.



6. Use [▲] or [▼] to select the update to be carried out.
7. Press [ENTER] to start the update.  
→ The LEDs of the [●] and [▶/■] buttons flash and indicate that the update is in progress.

Do not switch off the drum module and do not remove the USB stick.

8. After completion of the firmware update, the display shows again the update menu.  
→ You can now carry out another update.
9. After finishing the updates, switch off the device with the main switch [POWER] and restart the drum module.

We recommend to reset the drum module after the firmware update to the factory defaults.  
All user data will be lost.

Complete the following steps to reset:

1. Simultaneously press [>] and [<].
2. Press the main switch [POWER] until the display shows 'Factory Resetting...'  
→ After completion of the reset, the drum module returns to the 'KIT' menu.