


Firmware update


To carry out a firmware update of the drum module, you can download the latest firmware from the product page of our homepage (www.thomann.de). The firmware is only suitable for a Microsoft Windows® operating system.

1. Connect your computer via a USB cable to the USB-B port [MIDI] of the drum module.
NOTE:
When connecting your computer to the drum module for the first time, the driver is automatically installed on your computer. Wait until the installation is complete before proceeding.
2. Download the update software **Firmware Upgrade Tool**.
3. Unzip the compressed file with an unzipper.
4. Save both BIN files on an empty USB stick.
5. Insert the USB stick into the drum module.
6. Press and hold [+] and [-] and switch on the drum module.
→ The display shows the status of the installation of the firmware update in a progress bar.
After completion of the update, 'UPDATE MODE' appears on the display.

7. Open the update software **Firmware Upgrade Tool**.
8. Click the [Refresh] button in the dialogue window.
9. Select under [MIDI Input] and [MIDI Output] [E-DRUM] or [USB A].
10. Drag and drop the upgrade file XXX.hex in the window.
11. Click the [Start] button.
→ The [Warning] dialogue window opens:

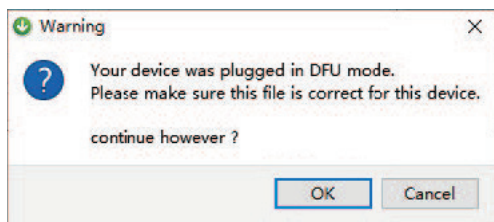

12. Click the [OK] button.
→ The status is shown in the progress bar in the middle of the dialogue window.
13. After completion of the upgrade, the [Info] dialogue window opens:

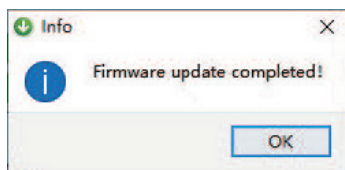

Click the [OK] button.

14. Switch off the drum module.

