

Firmware update

To carry out a firmware update of the drum module, you can download the latest firmware from our homepage (www.thomann.de). The firmware is only suitable for a Microsoft Windows® operating system.


1. Connect your computer via a USB cable (USB A or USB B) to the USB port [USB] of the drum module.
NOTE:
When connecting your computer to the drum module for the first time, the driver is automatically installed on your computer. Wait until the installation is complete before proceeding.
2. Hold [+] and [-] pressed and switch on the drum module.
→ The display shows 'UPG'.



3. Download the update software **Firmware Upgrade Tool 1.3**.
4. Unzip the compressed file with an unzipper.
5. Open the update software **Firmware Upgrade Tool 1.3**.
6. Click the [Refresh] button in the dialogue window.
7. Select [E-DRUM] or [USB A] under [Input device] and [Output device].
7. Drag and drop the upgrade file **750X_20200927v4.06.hex** in the window.
8. Click the [Update] button.
→ The dialogue window [DFU] opens.



9. Click [OK].
→ The status is shown in the progress bar in the middle of the dialogue window.
10. After completion of the upgrade, the dialogue window opens:

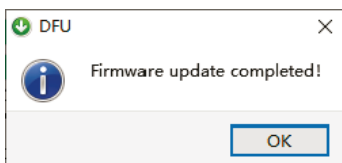

11. Switch off the e-drum module.

