




STAIRVILLE

Outdoor Stage PAR
12 × 8 QCL
LED PAR

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

15.02.2018, ID: 305314 (V4)

Table of contents

| | | |
|----------|--|-----------|
| 1 | General notes..... | 5 |
| 1.1 | Further information..... | 6 |
| 1.2 | Notational conventions..... | 7 |
| 1.3 | Symbols and signal words..... | 7 |
| 2 | Safety instructions..... | 10 |
| 3 | Features..... | 15 |
| 4 | Installation..... | 17 |
| 5 | Starting up..... | 21 |
| 6 | Connections and operating elements..... | 24 |
| 7 | Operating..... | 27 |
| 7.1 | Starting the device..... | 27 |
| 7.2 | Main menu..... | 27 |
| 7.3 | Menu overview..... | 35 |
| 7.4 | Functions in 1-channel DMX mode..... | 36 |
| 7.5 | Functions in 4-channel DMX mode..... | 37 |

| | | |
|-----------|---|-----------|
| 7.6 | Functions in 5-channel DMX mode..... | 38 |
| 7.7 | Functions in 7-channel DMX mode..... | 38 |
| 8 | Technical specifications..... | 41 |
| 9 | Plug and connection assignments..... | 42 |
| 10 | Troubleshooting..... | 43 |
| 11 | Cleaning..... | 45 |
| 12 | Protecting the environment..... | 46 |

1 General notes

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

| | |
|-----------------------|---|
| Download | This manual is also available as PDF file for you to download. |
| Keyword search | Use the search function in the electronic version to find the topics of interest for you quickly. |
| Online guides | Our online guides provide detailed information on technical basics and terms. |
| Personal consultation | For personal consultation please contact our technical hotline. |
| Service | If you have any problems with the device the customer service will gladly assist you. |

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.



Displays



Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

| Signal word | Meaning |
|---|--|
| DANGER! | This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided. |
| WARNING! | This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided. |
| NOTICE! | This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided. |
| Warning signs | Type of danger |
|  | Warning – high-voltage. |
|  | Warning – hot surface. |

| Warning signs | Type of danger |
|---|---------------------------|
|  | Warning – suspended load. |
|  | Warning – danger zone. |

2 Safety instructions

Intended use

This device is intended to be used as an electronic illumination effect using LED technics. The device is designed for professional use and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



DANGER!

Electric shock caused by short-circuit

Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.

Do not use the device if covers, protectors or optical components are missing or damaged.



WARNING!

Eye damage caused by high light intensity

Never look directly into the light source.



WARNING!

Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



WARNING!

Risk of burns

The surface of the device can become very hot during operation.

Do not touch the device with bare hands during operation, and after switching off wait for at least 15 minutes.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

3 Features

Due to its sturdy and weather-proof housing made of die-cast aluminum, the device is especially suitable for outdoor use. With the very bright four-colour LEDs, it is particularly suitable for professional lighting tasks.

Special features of the device:

- 12 × four-colour LEDs (8 W)
- Control via DMX (four different modes) and via buttons and display on the unit
- 11 preprogrammed automatic shows
- Master / Slave operation
- Rugged die-cast aluminium housing
- IP65 (suitable for outdoor use)
- Pressure equalisation element (prevents the development of condensation inside the device)
- Sturdy double bracket for secure attachment to trusses or firm footing on the ground
- Connectors for power supply and DMX control via splashproof screw-mountable plugs and couplings
- Mains power adapter with safety plug included

Information about protection class IP65

Equipment with protection class IP65 are dust-tight and completely protected against contact (first code number). They are also protected against splash water from any angle (second code digit). That is why this equipment can also be used outdoors. Event technology equipment is generally only designed for temporary use however (event lighting) and not for permanent use outdoors.

The specified protection class does not make a statement about the weather resistance of the equipment (resistance to changing ambient conditions as well as against the effects of sunlight and UV rays).

The seals and screw connections of the equipment must be checked regularly to ensure a fault-free operation. In cases of doubt, consult a specialist workshop in due time.

4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

**WARNING!****Risk of injury caused by falling objects**

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



NOTICE!

Risk of overheating

Always ensure sufficient ventilation.

The ambient temperature must not exceed the limits stated in the chapter Technical Specifications of the User Manual.



NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.

**NOTICE!****Possible data transmission errors**

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

**NOTICE!****Possible damage due to moisture**

Moisture entering into open connectors (plugs and couplers) of DMX or power cords can cause short circuits.

Close unused connectors with end caps intended for this purpose (www.thomann.de).

Mounting options

You can install the unit in hanging or standing position. When in use, the device must always be attached to a solid surface or an approved truss. Use the openings provided on the two-piece bracket for attaching.

Always work from a stable platform whenever installing, moving or servicing the unit. In doing so, the area underneath the unit must be cordoned off.

The safety-rope must be attached to the bracket.




Please note that this device must not be connected to a dimmer.

5 Starting up

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

Connections in DMX mode

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ($110\ \Omega$, $\frac{1}{4}\text{ W}$).

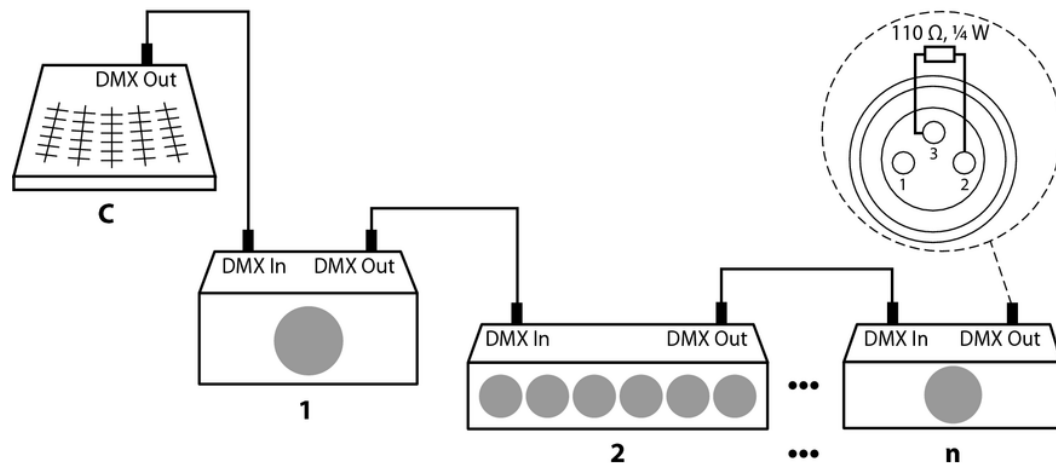


Connections in master/slave mode

When you configure a group of devices in master/slave mode, the first unit will control the other units for an automatic, sound-activated, synchronized show. This function is ideal when you want to start a show immediately. Connect the DMX output of the master device to the DMX input of the first slave device. Then connect the DMX output of the first slave device to the DMX input of the second slave device and so on.

6 Connections and operating elements

Rear panel

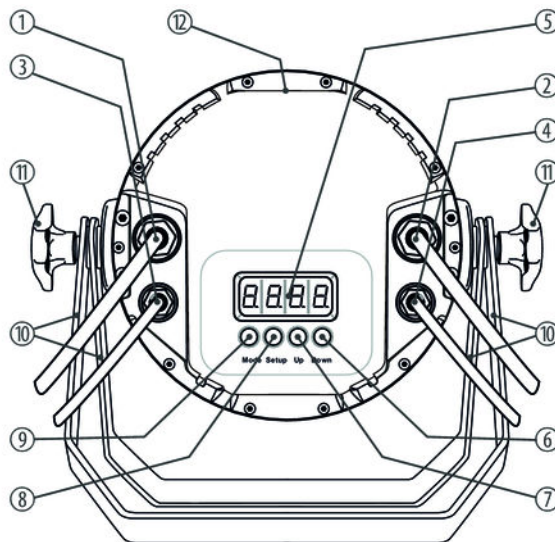

| | |
|---|---|
| 1 | Power cord for the voltage supply of the unit (with special plug, screw-mountable) |
| 2 | Power cord for the voltage supply of a connected device (special coupling, screw-mountable) |
| 3 | DMX input cable (IP65DMX plug, screw-mountable) |
| 4 | DMX output cable (IP65DMX coupling, screw-mountable) |
| 5 | Display |
| 6 | Button <i>[Down]</i> Decreases the displayed value by one. |
| 7 | Button <i>[Up]</i> Increases the displayed value by one. |
| 8 | Button <i>[Setup]</i> Selects an option of the respective operating mode. |
| 9 | Button <i>[Mode]</i> Activates the main menu and toggles between menu items. |

| | |
|----|-------------------------------|
| 10 | Hanging bracket/floor stand |
| 11 | Bracket adjustment knobs |
| 12 | Pressure equalisation element |

7 Operating

7.1 Starting the device

Connect the device to the power supply to start operation. After a few seconds, the display indicates that a reset is in progress. The device is then ready for use.

7.2 Main menu

Press *[Mode]* to activate the main menu and select an operating mode. Use the *[Up]* and *[Down]* buttons to change the respectively displayed value. When the display shows the desired value, press *[MODE]*.

If you don't press any button for about 20 seconds, the unit returns to the previously selected mode. The set values are retained even when the device is disconnected from the mains power supply.

DMX mode

Press *[Mode]* repeatedly until the display shows '*d.xxx*'. Now you can set the number of the first DMX channel to be used by the device (DMX address). Use the *[Up]* and *[Down]* buttons to select a value between 1 and 512 (display shows '*d.001*' ... '*d.512*').

Make sure that this number matches the configuration of your DMX controller. The following table shows the highest possible DMX address for the various DMX modes

| Mode | Highest possible DMX address |
|-----------|------------------------------|
| 1-channel | 512 |
| 4-channel | 509 |
| 5-channel | 508 |
| 7-channel | 506 |

Confirm with *[Setup]*. Now use the *[Up]* and *[Down]* buttons to select one of the following DMX operating modes:

- '*1-ch*' (one channel)
- '*4-ch*' (four channels)
- '*5-ch*' (five channels)

- '7-ch' (seven channels)

This setting is only relevant if the device is controlled via DMX. When the display shows the desired value, press *[Setup]* to confirm the selection and return to the parent menu.

Operating mode 'Show/Master'

Press *[Mode]* repeatedly until the display shows 'Pr.xx'. Now you can select one of the 11 pre-programmed automatic shows. Use the *[Up]* and *[Down]* buttons to select a value between 'Pr.01' and 'Pr.11'.

| Programme | Description |
|-----------|--|
| Pr.01 | Constant colour hue |
| Pr.02 | Slow transition type 1, red, green, blue and white |
| Pr.03 | Slow transition type 2, red, green, blue and white |
| Pr.04 | Fast transition, all colours |
| Pr.05 | Fast transition, red, green, blue and white |
| Pr.06 | Random programme 1 |
| Pr.07 | Random programme 2 |
| Pr.08 | Slow transition bright / dark, red |
| Pr.09 | Slow transition bright / dark, green |

| Programme | Description |
|-----------|--------------------------------------|
| Pr.10 | Slow transition bright / dark, blue |
| Pr.11 | Slow transition bright / dark, white |

The auto show can only be activated on the device that is configured as master.

This setting is only relevant if the device is not controlled via DMX. The device can operate in stand-alone mode or control connected devices of the same type, that must be configured as slaves.

Settings programme Pr.01

For the programme 'Pr.01', you can choose from 14 colours. Select programme 'Pr.01' first, then confirm with 'Setup'. Now you can use the [Up] and [Down] buttons to select one of the following options:

| Value | Description |
|---------|---|
| '1.--r' | Red |
| '2.-rg' | Red and green |
| '3.--g' | Green |
| '4.-gb' | Green and blue |
| '5.--b' | Blue |
| '6.-rb' | Red and blue |
| '7.rgb' | Red, green and blue |
| '8.--u' | White |
| '9.-FL' | Red, green, blue and white, each colour separately adjustable |
| '10.ru' | Red and white |

| Value | Description |
|---------|----------------------|
| '11.gu' | Green and white |
| '12.bu' | Blue and white |
| '13.gu' | Red, green and white |
| '14.Uu' | Red, blue and white |

If the colour value '9.-FL' is selected, you can press *[Setup]* to open the submenu for setting the colour. Use the *[Up]* and *[Down]* buttons to set the intensity of red, green, blue and white individually in a range from 0 to 255.

Confirm again with *[Setup]*. Now you can select the speed of the Strobe effect between 'off' or 'slow' and 'fast' (display shows 'FS00' ... 'FS99').

Settings programme Pr.02 ... Pr.11

For the programmes 'Pr.02' to 'Pr.11', you can additionally set the speed of the transition from one hue to the next and the blinking speed of the flash effect. Use the *[Up]* and *[Down]* buttons to select a value between 'slow' and 'fast' (display shows 'SP.01' ... 'SP.FL') for the transition speed.

Confirm again with *[Setup]*. Now you can select the speed of the Strobe effect between 'off' or 'slow' and 'fast' (display shows 'FS00' ... 'FS99').

Operating mode 'Auto'

In automatic mode, all programmed shows are played sequentially in an endless loop.

Press *[Mode]* repeatedly until the display shows 'Auto'. The automatic mode starts immediately.


This setting is only relevant if the device is not controlled via DMX.

Operating mode 'Slave'

Press *[Mode]* repeatedly until the display shows 'SLAV'. The device is instantly in 'slave' mode.

This setting is only relevant if the device is operating as Slave controlled by a Master, but not via DMX.

7.3 Menu overview

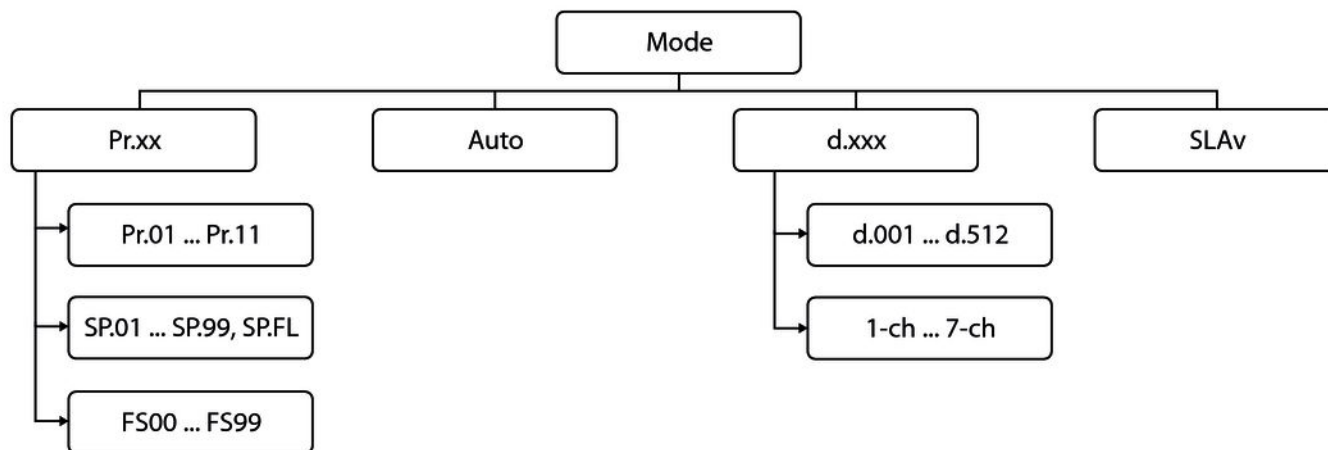

7.4 Functions in 1-channel DMX mode

| Channel | Value | Function |
|---------|-----------------|-----------|
| 1 | Constant colour | |
| | 0 | Dark |
| | 1...22 | Red |
| | 23...45 | Green |
| | 46...68 | Blue |
| | 69...91 | Cyan |
| | 92...114 | Yellow |
| | 115...137 | Orange |
| | 138...160 | Pink |
| | 161...183 | Purple |
| | 184...206 | Dark blue |

| Channel | Value | Function |
|---------|-----------|--------------|
| | 207...229 | Bright green |
| | 230...252 | White |
| | 253...255 | Warm white |

7.5 Functions in 4-channel DMX mode

| Channel | Value | Function |
|---------|---------|-------------------------------------|
| 1 | 0...255 | Intensity Red (0 % to 100 %) |
| 2 | 0...255 | Intensity Green (0 % to 100 %) |
| 3 | 0...255 | Intensity Blue (0 % to 100 %) |
| 4 | 0...255 | Intensity cold white (0 % to 100 %) |

7.6 Functions in 5-channel DMX mode

| Channel | Value | Function |
|---------|---------|-------------------------------------|
| 1 | 0...255 | Dimmer (0 % to 100 %) |
| 2 | 0...255 | Intensity Red (0 % to 100 %) |
| 3 | 0...255 | Intensity Green (0 % to 100 %) |
| 4 | 0...255 | Intensity Blue (0 % to 100 %) |
| 5 | 0...255 | Intensity cold white (0 % to 100 %) |

7.7 Functions in 7-channel DMX mode

| Channel | Value | Function |
|---------|---------|--|
| 1 | 0...255 | Dimmer (0 % to 100 %) |
| 2 | 0...255 | Intensity Red (0 % to 100 %), if channel 7 = 0 |

| Channel | Value | Function |
|---------|--|---|
| | Constant colour hue, if channel 7 = 1...22 | |
| | 0...6 | Colour 1 |
| | 7...12 | Colour 2 |
| | 13...18 | Colour 3 |
| | : | : |
| | 251...255 | Colour 43 |
| | Process speed, if channel 7 = 23...255 | |
| | 0...255 | Slow...fast |
| 3 | 0...255 | Intensity Green (0 % to 100 %), if channel 7 = 0, otherwise without function |
| 4 | 0...255 | Intensity Blue (0 % to 100 %), if channel 7 = 0, otherwise without function |
| 5 | 0...255 | Intensity cold white (0 % to 100 %), if channel 7 = 0, otherwise without function |
| 6 | 0...9 | Without function |
| | 10...255 | Strobe effect, speed slow...fast |

| Channel | Value | Function | |
|---------|-----------|---|---|
| 7 | 0 | Constant mix of RGB, depending on channel 2, 3, 4 and 5 | |
| | 1...22 | Constant colour, depending on channel 2 | |
| | 23...45 | Pr.02 | Slow transition, 14 colours in succession |
| | 46...68 | Pr.03 | Slow transition, red, green, blue, cold white in succession |
| | 69...91 | Pr.04 | Fast transition, 14 colours in succession |
| | 92...114 | Pr.05 | Fast transition, red, green, blue, cold white in succession |
| | 115...137 | Pr.06 | Random programme 1 |
| | 138...160 | Pr.07 | Random programme 2 |
| | 161...183 | Pr.08 | Slow transition bright / dark, red |
| | 184...206 | Pr.09 | Slow transition bright / dark, green |
| | 207...229 | Pr.10 | Slow transition bright / dark, blue |
| | 230...255 | Pr.11 | Slow transition bright / dark, cold white |

8 Technical specifications

| | |
|--------------------------|----------------------------|
| LEDs | 12 × four-colour LEDs, 8 W |
| Beam angle | 25 ° |
| Number of DMX channels | 1, 4, 5 or 7 |
| Operating supply voltage | AC 110...230 V ~ 50/60 Hz |
| Power consumption | 81 W |
| Protection class | IP65 |
| Temperature range | –20 °C ... +45 °C |
| Dimensions (W × H × D) | 215 mm × 285 mm × 330 mm |
| Weight | 5.4 kg |

9 Plug and connection assignments

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

DMX connections



The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.

| Pin | Configuration |
|-----|---------------------------------------|
| 1 | Ground, shielding |
| 2 | Signal inverted (DMX-, 'cold signal') |
| 3 | Signal (DMX+, 'hot signal') |

10 Troubleshooting

**NOTICE!****Possible data transmission errors**

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

| Symptom | Remedy |
|------------------------------------|---|
| The unit does not work, no light. | Check the mains connection and the fuse. |
| No response to the DMX controller. | 1. Check the DMX ports and cables for proper connection. |
| | 2. Check the address settings and the DMX polarity. |
| | 3. Try using another DMX controller. |
| | 4. Check to see if the DMX cables run near or alongside to high voltage cables that may cause damage or interference to DMX interface circuits. |

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at www.thomann.de.

11 Cleaning

Optical lenses

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

Fan grids

The fan grids of the device must be cleaned on a regular basis to remove dust and dirt. Before cleaning, switch off the device and disconnect AC-powered devices from the mains. Use a lint-free damp cloth for cleaning. Never use solvents or alcohol for cleaning.

12 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



