

TRONICALTUNE PLUS

auto - tunes your guitar in seconds









You play - we tune!

TronicalTune





PACKAGE CONTENT

-  **6 x** ROBOHEAD
-  **1 x** CONTACTING PCB
-  **1 x** LiPo BATTERY
-  **1 x** CHARGER INCL. WALL-PLUG
-  **7 x** LOCK NUT & RING WASHER
-  **1 x** WRENCH

TronicalTune PLUS

Index



GETTING STARTED

INSERT BATTERY	6
CHARGE BATTERY	8
REPLACE BATTERY	9
INSTALL THE SYSTEM ON THE GUITAR	10
STRING GUITAR	12
TREBLE STRINGS	14
BASS STRINGS	16

BASIC FUNCTIONS

OVERVIEW	18
DEFAULT TUNINGS	20
LOW TUNINGS	22

ADVANCED FUNCTIONS	
OVERVIEW	24
TUNING FUNCTIONS	
STRING UP/DOWN	27
CUSTOM TUNING	27
REFERENCE TUNING	28
FIRMWARE VERSION	28
BATTERY LEVEL	29
TUNING OFFSET TEMP./ GLOBAL	29
RESET FUNCTION	30
HARDWARE FUNCTIONS	
CALIBRATION MODE	33
ACCURACY	35
ROBOHEAD DELAY	35
ROBOHEAD SPEED	35
INTERFERENCE FILTER	35
SOFTWARE FUNCTIONS	
GAIN	37
GUITAR TYPE	37
PITCH WINDOW	37
ACTIVATE LOW TUNINGS	39
TUNING OFFSET MODE	39
PER-STRING PITCH CORRECTION	40
UNBLOCK BANKS FOR CUSTOM TUNINGS	42
CAPO MODE	44
LEGAL INFORMATION	46

Getting started




Insert Battery





ATTENTION: BE CAREFUL INSERTING THE BATTERY. PAY ATTENTION TO THE SLOTTED DESIGN TO GUARANTEE PROPER ORIENTATION. SLIDE IN THE BATTERY WITH THE TIP SIDE ONLY.

DO NOT APPLY ANY FORCE AS YOU MAY CAUSE DAMAGE TO THE ELECTRONICS.

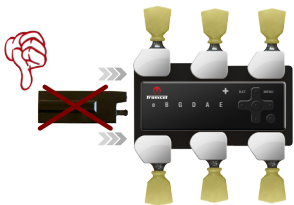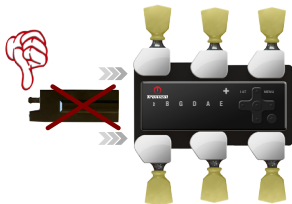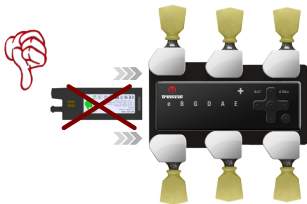



BATTERY PACK

3.7v 340mah 1258mwh Li-polymer

The capacity of the battery could be reduced if it is used infrequently. You may need to recharge it a number of times. When the battery level is low, the **LED** flashes red.

CAUTION:

1. Do not connect improperly.
2. Do not dispose of in fire or expose to excess heat.
3. Do not crush, puncture, incinerate or short-circuit external contacts.

CHARGING:
Charge the battery if
BAT led switches red.



Battery is **CHARGING**



Battery is **CHARGED**



Getting started

Charging Battery




ATTENTION: Be careful inserting the battery. Pay attention to the slotted design to guarantee proper orientation. Slide in the battery with the tip side only.

Do not apply any force as you may cause damage to the electronics.

Getting started

Replace Battery

1. PUSH THE BATTERY FOR RELEASE.

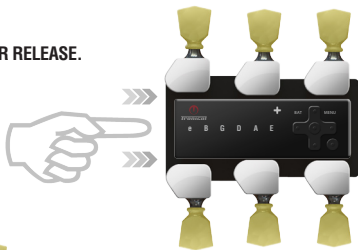

2. SLIDE OUT THE BATTERY



Getting started

Install the system on the guitar



NOTE: do not use any tools on the Lock Nut and do not over tighten. Instead use a **1 CENT COIN** to tighten the locknut, otherwise you may damage the gear wheels by applying too much force.



Use only supplied wrench or torque wrench to tighten the Hex Nuts (*the recommended torque for the Hex Nuts of the RoboHeads is 1.5 Nm - 1.65 Nm (13.27 in.lbs - 14.6 in-lbs)*)

It is recommended to use a contact cleaning liquid (such as ethyl alcohol) before installing the RoboHeads to the contacting PCB. Ensure that all contacts have a good connection before tightening the Hex Nuts entirely.

Use caution when inserting the battery. Pay attention to the slotted design to guarantee proper orientation!

1



Remove all original tuners from the headstock.

2



Place the contacting PCB onto the backside of the headstock. Verify that the Tronical logo appears the right way up.



Make sure that all PCB drill holes line up with the headstock's tuner holes. Insert the RoboHeads through the Tuner holes.



Apply the Washers and mount the Hex Nuts.



Use the wrench that comes with the set to tighten the Hex Nuts onto the RoboHeads.

The recommended torque for the Hex Nuts of the RoboHeads is 1.5 nm - 1.65 nm (13.27 in.lbs - 14.6 in.lbs)



Now the TronicalTune PLUS is ready for string up.

Getting started
String your guitar






NOTE: do not use any tools on the Lock Nut and do not over tighten. Instead use a **1 CENT COIN** to tighten the locknut, otherwise you may damage the ROBOHEAD by applying too much force.



Use only supplied wrench or torque wrench to tighten the Hex Nuts (the recommended torque for the Hex Nuts of the RoboHeads is 1.5 Nm - 1.65 Nm (13.27 in.lbs - 14.6 in.lbs))

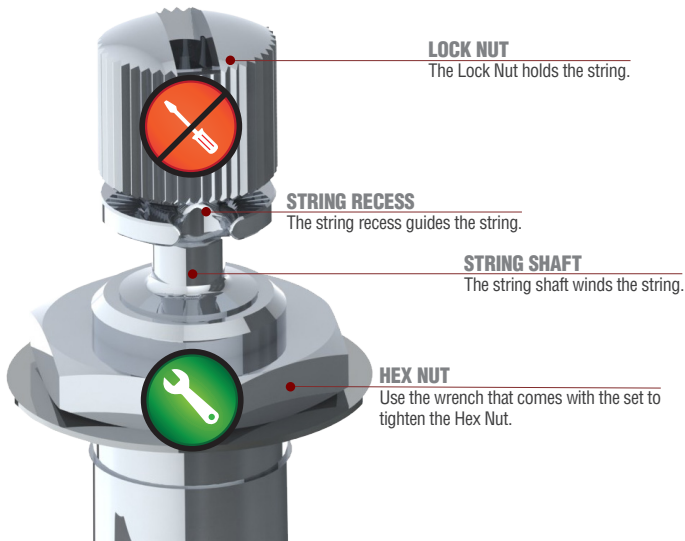

LOCK NUT

The Lock Nut holds the string.

STRING RECESS

The string recess guides the string.

STRING SHAFT

The string shaft winds the string.

HEX NUT

Use the wrench that comes with the set to tighten the Hex Nut.

Getting started

String up your guitar (bass strings)

1



Take off the LockNut and make sure the recess is turned horizontal to the neck. (90 degree angle).

You can turn the key manually or use the string-up mode.


Wind the string around the string shaft under the recess and bring it up through the recess.

2




Wind up the string **CLOCKWISE** around the string shaft once above the recess.

3

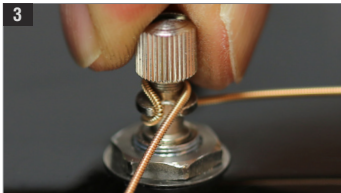

Hold the string tight and apply the Lock Nut.


NOTE: The TronicalTune PLUS systems Type C (six-in-a-row tuner headstocks) do work with “bass” RoboHeads only.

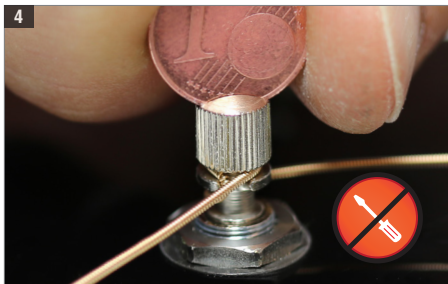


Tighten the Lock Nut with a small coin easily by hand.

NOTE: Do not use any tool to fix the Lock Nut and **DO NOT OVERTIGHTEN!** Use a **1 CENT COIN** to tighten the Lock Nut, otherwise you may damage the RoboHeads!

Recommended max. torque is 1.0 Nm (8.85 in-lbs)

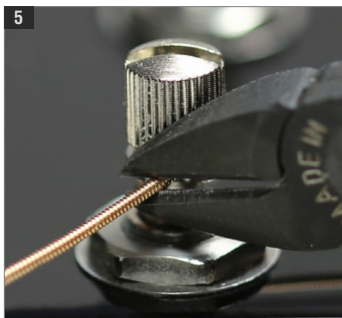


Cut the end of the string close to the string shaft.

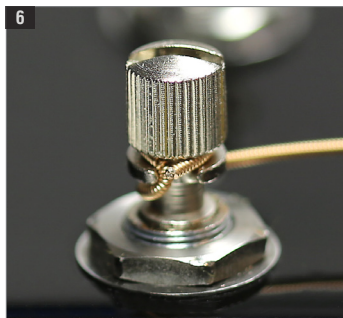

Done!

Getting started


String up your guitar (treble strings)

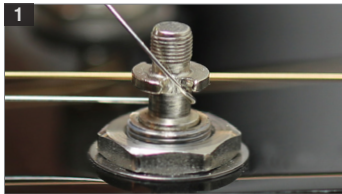


Take off the LockNut and make sure the recess is turned horizontal to the neck. (90 degree angle).

You can turn the key manually or use the string-up mode.

Wind the string around the string shaft under the recess and bring it up through the recess.

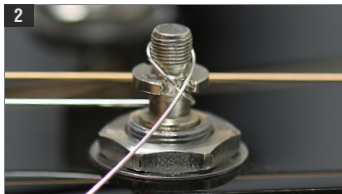


Wind the string around the shaft once above the recess.

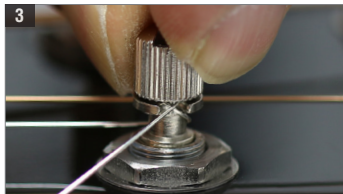

Hold the string tight and apply the Lock Nut.


NOTE: To ensure that the 1st (e) and 2nd (B) string are securely locked, we recommend to perform **TWO WINDINGS** around the string shaft before tightening the Lock Nut.

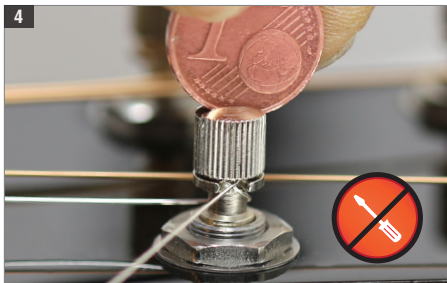

Tighten the Lock Nut with a small coin easily by hand.

NOTE: Do not use any tool to fix the Lock Nut and **DO NOT OVERTIGHTEN!** Use a **1 CENT COIN** to tighten the Lock Nut, otherwise you may damage the RoboHead!


Recommended max. torque is 1.0 Nm (8.85 in-lbs)

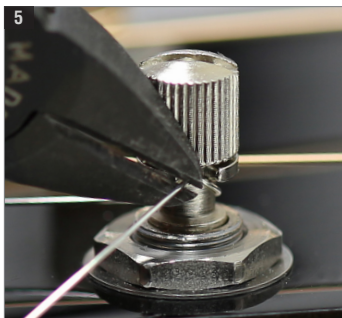





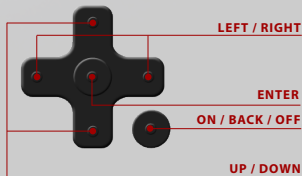

Cut the end of the string close to the string shaft.



Done!



-  NOT IN TUNE
-  IN TUNE
-  ROBOHEAD MOVING
-  OUT OF SNAP
-  CALCULATING
-  INTERFERENCE

Basic Functions:
Start Here

PERFORM STANDARD TUNING

- Press the **ON** button. Strum all strings once.
- When all LEDs are **GREEN**, all six strings are in tune. The TronicalTune PLUS turns off automatically.

SINGLE STRING OPERATION

- Press and hold the **ON** button until the **RED E** LED lights.
- Pluck the string with the **RED** LED. Pluck each string individually until its LED is **GREEN**, and the TronicalTune PLUS automatically switches to the next string.
- When all LEDs are **GREEN**, all six strings are in tune. The TronicalTune PLUS turns off.

HERE'S THE REALLY GREAT PART!!! PLAY IN A DIFFERENT TUNING

- Press the **ON** button twice.
- Press **UP/DOWN** to navigate through tuning preset banks (**RED**, **GREEN**, **BLUE**)
- Press **LEFT/RIGHT** to get to individual tunings.
- Press **ENTER** briefly - wait until all LEDs are **RED** - strum once (the tuners start working when you press **ENTER**).
- When all LEDs are **GREEN**, all six strings are in tune. The TronicalTune PLUS turns off.
- The latest tuning is now your default.

RETURN TO STANDARD TUNING

- Press the **ON** button twice (**2X**).
- Press **UP/DOWN** for the **RED** tuning bank, then press **LEFT/RIGHT** until the **RED E** LED is on. Press **ENTER**, strum once. Standard tuning is now set as default again.

YOU CAN TURN THE TRONICALTUNE PLUS OFF BY PRESSING AND HOLDING THE ON BUTTON

DO's AND DON'Ts

- Do not use string winding tools. The string up/string down function works better.
- Do not tune manually while the TronicalTune PLUS is active.
- Do check the BAT LED periodically. **GREEN** = charged, **YELLOW** = acceptable, **RED** = time to recharge.
- Do charge the battery before using it for the first time.
- Do read the rest of the manual to take advantage of the advanced Functions.
- Do visit www.tronical.com for news and updates about the system.



Main Tuning Preset Bank
Default Tunings

RED MAIN TUNING PRESET BANK

LED	STRING	E	A	D	G	B	e
E	Standard	E	A	D	G	B	E
A	DADGAD	D	A	D	G	A	D
D	Whole step	D	G	C	F	A	D
G	Drop D	D	A	D	G	B	E
B	E flat	E ^b	A ^b	D ^b	G ^b	B ^b	E ^b
e	Double drop D	D	A	D	G	B	D

GREEN MAIN TUNING PRESET BANK

LED	STRING	E	A	D	G	B	e
E	Open E	E	B	E	G [#]	B	E
A	Open A	E	A	E	A	C [#]	E
D	Open D	D	A	D	F [#]	A	D
G	Open G	D	G	D	G	B	D
B	Dobro	G	B	D	G	B	D
e	All 4ths	E	A	D	G	C	F

BLUE MAIN TUNING PRESET BANK

LED	STRING	E	A	D	G	B	e
E							
A							
D							
G							
B							
e							

The **BLUE** USER TUNING PRESET BANK defaults to standard tuning (E, A, D, G, B, e). Use the chart to note your custom tuning names and tunings.



Low Tuning Preset Bank
Default Tunings

WHITE (Low Tuning Preset Banks)

LED	STRING	E	A	D	G	B	e
E	C tuning	C	F	A [#]	D [#]	G	C
A	Low C	C	G	D	G	A	D
D	C sharp	C [#]	F [#]	B	E	G [#]	C [#]
G	B tuning	B	E	A	D	F [#]	B
B	Dropped C	C	G	C	F	A	D
e	Dropped B	B	F [#]	B	E	G [#]	C [#]

YELLOW (Low Tuning Preset Banks)

LED	STRING	E	A	D	G	B	e
E	Open C	C	G	C	G	C	E
A	Open C6	C	A	C	G	C	E
D	Open B	B	F [#]	B	F [#]	B	D [#]
G	Double drop C [#]	C [#]	G [#]	C [#]	F [#]	A [#]	C [#]
B	Double drop C	C	G	C	F	A	C
e	Double drop B	B	F [#]	B	E	G [#]	B

MAGENTA USER TUNING PRESET BANK

LED	STRING	E	A	D	G	B	e
E							
A							
D							
G							
B							
e							

The **MAGENTA USER TUNING PRESET BANK** defaults to standard C tuning (C, F, A[#], D[#], G, C). Use the chart to note your custom tuning names and tunings.

6 ROBOHEADS

with string locking mechanism

LED-DISPLAY

(6 string LEDs, 1 menu LED, 1 charge level LED)

BATTERY


Exchangeable, rechargeable 3.7V, Li-Polymer, approx. 300 tunings



NECK CPU INCL. CONTACTING PCB

black printed circuit board to fit in RoboHeads

Overview: how to choose, access, and edit advanced functions

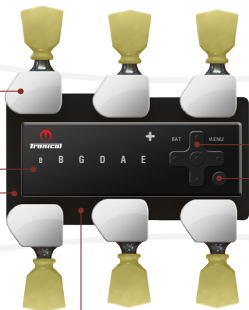







NAVIGATION UNIT

(up, down, left, right, enter)

ON/OFF/BACK

AVAILABLE SPARE PARTS

-  Li-Po Battery
-  Charger with wall-plug
-  RoboHeads in different Designs
-  Neck CPU incl. Contacting PCB
-  Wrench
-  Lock Nuts & Ring Washers

TRONICALTUNE PLUS is easy to use. The most common function is tuning a guitar to standard and alternate tunings with just a few button presses. The string LEDs (from “E” for the 6th, lowest-pitched string to “e” for the 1st, highest-pitched string) show the system status. The TronicalTune PLUS stores standard, alternate, and custom tunings in presets. Each preset contains a tuning. This can be a factory default tuning, or a custom tuning you create and store.

In addition to all of the basic functions you can access the advanced tuning functions to increase performance if necessary. Here’s an overview of how to choose, access, and edit the advanced tuning functions.

CATEGORIES:

The advanced function menu consists of six main categories.

- After pressing the **ON** button three times (*don't press too fast*), press the **LEFT/RIGHT** buttons to select a **CATEGORY**, and then press **ENTER**.

- Each category is associated to a color.

Examples: The **YELLOW** category is associated with advanced software functions. The **MAGENTA** category handles string pitch offsets.

- When choosing a category, the Menu LED *flashes* in the category’s color.

FUNCTIONS.

Each category offers various functions.

- After selecting a **CATEGORY**, press the **LEFT/RIGHT** button to select a **FUNCTION** within the **CATEGORY**, and then press **ENTER** to access the function.

- When the menu LED lights up in the color of the category, you can edit the **FUNCTION** with the **UP/DOWN/LEFT/RIGHT** and **ENTER** buttons.

ON/BACK/OFF button. The **ON** button becomes a **BACK** button when editing. It can also turn the TronicalTune PLUS **OFF**.

- If the TronicalTune PLUS is in a **FUNCTION**, press the **ON** (Back) button to return to the function’s **CATEGORY**.

- Press the **BACK** button again, and the TronicalTune PLUS is in **TUNING SELECTION** mode.

- Press and hold the **ON** (Off) button to turn off the TronicalTune PLUS (if the tuner doesn’t turn off, release the button then press and hold again).

After pressing **ENTER** to complete a function, the TronicalTune PLUS usually returns to the function selection to allow you to select another function quickly. Or if you’re done, press and hold the **ON** (Off) button to turn off the TronicalTune PLUS.

Tuning Functions

White Category

- E** String Up/Down
- A** Custom Tuning Mode
- D** Reference Tuning
- G** Firmware Version
- B** Battery Level
- E** Global Tuning Offset

1. ENTER CATEGORY

Press **ON** three times. Press **ENTER**.



2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** buttons to select a subcategory (**E-e**). Press **ENTER**.



E STRING UP/DOWN.

Wind or unwind strings automatically

- When the TronicalTune PLUS is switched off, press **ON** three times. Then press **ENTER** twice.
- The LED for the string to wind or unwind flashes **RED**. The **LEFT/RIGHT** buttons select a string.
- Press and hold **DOWN** to wind down, **UP** to wind up.

NOTE: During String Up/Down, Single-String Tuning Mode (tunes each string individually) is active. When approaching the correct pitch during string wind up, release the Up button and pluck the string. A flashing **YELLOW** string LED indicates that the string is close to the pitch defined by the last completed tuning. The TronicalTune PLUS takes over, tunes the string to correct pitch and moves automatically to the next string. (Pluck the string until the LED switches to **GREEN**.)

A CUSTOM TUNING

Create a custom tuning and store it as a user tuning preset in the **blue** tuning preset bank.

- When the TronicalTune PLUS is switched off, tune your guitar to a custom tuning.
- Press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE A** LED, then press **ENTER**.
- When a string flashes **RED**, pluck it.

(*HINT: Mute a string after its string LED turns green to speed up the process.*)

- When a string LED flashes **BLUE**, use the **LEFT/RIGHT** buttons to select a preset slot from the **BLUE** bank. Press **ENTER** = stores the tuning in the selected preset slot.

A CUSTOM TUNING WITH “PITCH ASSISTANCE” MODE

Create a custom tuning and store it as a pitch-corrected user preset in the **blue** tuning preset bank.

Enabling **PITCH ASSISTANCE MODE** before saving a custom tuning automatically pitch-corrects notes that are within 40 cents of correct pitch.

- When the TronicalTune PLUS is switched off tune your guitar to a custom tuning manually.
- Press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE A** LED, then press and hold **ENTER** for more than 3 seconds to engage Pitch Assistance.
- When a string flashes **RED**, pluck it. (*HINT: Mute a string after its string LED turns green to speed up the process.*)
- When a string LED flashes **BLUE**, use the **LEFT/RIGHT** button to select a preset from the **BLUE** bank. Press **ENTER** = stores pitch-corrected tuning in the selected preset slot.

Tuning Functions

White Category

D REFERENCE TUNING

Tune the guitar with respect to one manually tuned string as reference

EXAMPLE: A piano is in tune with itself, but slightly flat. Tune one string with respect to the piano and make this string the reference pitch so the guitar will be in tune with the piano.

NOTE: Loading any other tuning will erase the reference tuning. To save this tuning as a user tuning preset, treat it as a Custom Tuning and follow the steps in **A CUSTOM TUNING** above. Do not use Pitch Assistance!

- When the TronicalTune PLUS is switched off, tune one string to the new reference pitch.
- Press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE D** string LED. Press **ENTER**.

- **E** string flashes **RED**. Use the **LEFT/RIGHT** button to select the string you tuned as reference pitch.

- Pluck the string. When the string LED lights up **GREEN** and all others are **RED**, strum to tune the guitar.

- LEDs turn off = reference tuning is complete.

G FIRMWARE VERSION

Display the TronicalTune PLUS's firmware version

- When the TronicalTune PLUS is switched off, press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE G** string LED. Press **ENTER**.
- You'll see three sequences of LEDs. The number of **GREEN** LEDs is the version number's

first digit, the number of **BLUE** LEDs is the second digit, and the number of **RED** LEDs is the third digit. All **WHITE** LEDs = zero.

EXAMPLE: 2 **GREEN** LEDs + 3 **BLUE** LEDs + 1 **RED** LED = version 2.3.1

- This is a fast sequence. If you need to see it again, press **ENTER AGAIN**.

B BATTERY LEVEL

Indicates the charge level of the battery

- When the TronicalTune PLUS is switched off, press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE B** string LED. Press **ENTER**. More LEDs = stronger charge. If only one or two **RED** LEDs are lit, recharge the battery.
- This is a fast sequence. If you need to see it again, press **ENTER**.

e TEMPORARY GLOBAL TUNING OFFSET

Change reference from A=440 Hz to between 434 Hz and 446 Hz

A = 440 Hz is an international tuning standard. However, some orchestras tune to A = 442 Hz or 443 Hz, and some musicians tune to a higher pitch for a “brighter” sound.

- When the TronicalTune PLUS is switched off, press **ON** three times. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select the **WHITE e** string LED. Press **ENTER**.
- All string LEDs flash **WHITE** (if an offset is already active, the TronicalTune PLUS displays the offset amount with **GREEN** or **RED** LEDs - explanation below.)
- Each **LEFT** button-press raises the pitch by 1 Hz and lights a **GREEN** LED. Each **RIGHT** button press lowers pitch by 1 Hz and lights a **RED** LED. (**PLEASE NOTE:** if you have a left-hand or reverse system the navigation steps will be vice versa).
- Press **ENTER** to store the offset temporarily.

NOTE: The TronicalTune PLUS applies this offset when you tune using the current tuning preset. Loading a new tuning preset reverts to the 440 Hz standard. To retain the offset until you change it, refer to the **YELLOW** category, **B** Tuning Offset Mode (Permanent or Temporary) on page 39.


Reset Function

Red Category

- E** Reset **RED** Tuning preset bank
- A** Reset **GREEN** Tuning preset bank
- D** Reset **BLUE** Tuning preset bank
- G** Reset **WHITE** Tuning preset bank
- B** Reset **YELLOW** Tuning preset bank
- e** Reset **MAGENTA** Tuning preset bank
- E** Reset to original **FACTORY SETTINGS**

1. ENTER CATEGORY

Press **ON** three times. Use **LEFT/RIGHT** button to select the category (**E**). Press **ENTER**.

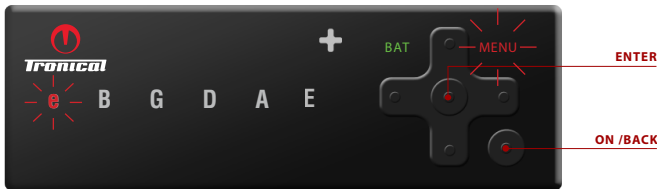

2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** button to select a subcategory (**E, A, D, G, B, e, E**). Press **ENTER**.



RESTORE FACTORY DEFAULT TUNING PRESETS FOR THE SELECTED TUNING PRESET BANK

1. When the TronicalTune PLUS is switched off, press **ON** three times.
2. Press the **LEFT/RIGHT** button to select **RED e** string LED. Press **ENTER**.
3. Use the **LEFT/RIGHT** button to select the string LED associated with the function. The remaining procedure is the same for each reset function.
4. Press and hold the **ENTER** and **UP** buttons simultaneously.
5. LEDs flash sequentially in the same color as the bank = reset confirmed.
6. To reset additional banks, repeat steps 3-5.

NOTE: After a reset, use **CALIBRATION MODE** to re-calibrate the guitar (P. 33)

RESTORE TO ORIGINAL FACTORY SETTINGS

(also highly recommended when changing string gauges)

- When the TronicalTune PLUS is switched off, press **ON** three times.
- Press the **LEFT/RIGHT** button to select **RED e** string LED. Press **ENTER**.
- Press the **LEFT/RIGHT** button to select **E** LED lights **CYAN**.
- Press and hold the **ENTER** and **UP** buttons simultaneously.
- **CYAN** LEDs light sequentially = reset confirmed.
- After a reset, use **CALIBRATION MODE** to re-calibrate the guitar (Page 33).

NOTE: This procedure erases all custom tunings.

Advanced Hardware Functions

Cyan Category

1. ENTER CATEGORY

Press **ON** three times. Use **LEFT/RIGHT** button to select **CYAN** category (**A**). Press **ENTER**.



2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** button to select a subcategory (**E-B**). Press **ENTER**.





CATEGORY FUNCTIONS

- E** Calibration Mode
- A** Accuracy Level
- D** RoboHead Delay
- G** RoboHead Speed
- B** Interference Level

E CALIBRATION MODE

Before calibration tune the guitar to standard pitch! (red tuning bank **E** LED).

1. When the TronicalTune PLUS is switched off, press the **ON** button.
2. Strum the open strings once.
3. When all LEDs are **GREEN**, all six strings are tuned. The TronicalTune PLUS turns off automatically (*if any LEDs are not green, pluck those strings individually*).

NOTE: You must calibrate the TronicalTune PLUS:

- after installing for the first time
- if you change your strings' gauge, type, or brand
- if you perform a master system reset or firmware update
- if you are facing issues like erratic ROBOHEAD movements, strings not tuning properly, etc.

CALIBRATION:

1. Press **ON** three times. Press the **LEFT/RIGHT** button to select **CYAN A**.
2. Press **ENTER** twice. The string LEDs blink **RED**.
3. Strum all strings once. All lights should shine **GREEN** briefly then turn off. If the LEDs continue to flash **RED**, mute all strings and then strum again.
4. Once the strings have turned off from being **GREEN**, or show a combination of **BLUE** and **RED** LEDs, mute all strings. Then all string LEDs blink **RED**.
5. Repeat steps 3 and 4 until the LEDs light **SEQUENTIALLY** and one string LED is lit.

Advanced Hardware Functions

Cyan Category



A ACCURACY

Balance tuning accuracy vs. speed

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **CYAN A**. Press **ENTER**.
2. Again, press the **LEFT/RIGHT** button to select **CYAN A**. Press **ENTER**.
3. The **LEFT/RIGHT** button selects the accuracy. More lit LEDs = higher accuracy/tuning takes a little longer. Fewer lit LEDs = accuracy is a little lower/faster tuning speed.
4. Press **ENTER** = accuracy setting stored.

D ROBOHEAD DELAY

Set a delay before the ROBOHEADS start turning after initiating a function

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **CYAN A**. Press **ENTER**.
2. Press the **LEFT/RIGHT** button to select the **CYAN D** LED. Press **ENTER**.
3. The **LEFT/RIGHT** button selects the delay. Each unlit LED increases the delay by 0.5 seconds.
4. Press **ENTER** = delay setting stored.

G ROBOHEAD SPEED

Slow down the ROBOHEAD speed to accommodate guitars whose neck relief or neck stability degrades tuning accuracy.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **CYAN A**. Press **ENTER**.
2. Press the **LEFT/RIGHT** button to select the **CYAN G**. Press **ENTER**.
3. Use the **LEFT/RIGHT** button to select the speed. Each unlit LED decreases the speed.
4. Press **ENTER** = speed setting stored.

B INTERFERENCE FILTER

Reduce the interference among the strings if a wrong ROBOHEAD is turning instead of the one that you are plucking the string for.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **CYAN A**. Press **ENTER**.
2. Press the **LEFT/RIGHT** button to select the **CYAN B** LED. Press **ENTER**.
3. Use the **LEFT/RIGHT** button to select the degree of filtering. Each unlit LED increases the filtering degree to reduce interference.
4. Press **ENTER** = interference filter setting stored.

NOTE: Raising this setting to six lit LEDs may increase performance but increases also the vulnerability of the e and B strings to incorrect tuning, even if the TronicalTune PLUS indicates they are in tune. If this occurs, lower the Interference Filter setting to three or four lit LEDs.

Advanced Software Functions

Yellow Category

1. ENTER CATEGORY

Press **ON** three times. Use **LEFT/RIGHT** button to select **YELLOW** category (**D**). Press **ENTER**.



2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** button to select a subcategory (**E-B**). Press **ENTER**.



CATEGORY FUNCTIONS

- E** Gain
- A** Guitar Type
- D** Pitch Window
- G** Low Tunings
- B** Tuning Offset

E GAIN

Increase gain if string LEDs don't turn yellow when first plucked; decrease gain in environments with high ambient noise. The default is recommended.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **YELLOW D**.
2. Press **ENTER** twice. The **LEFT/RIGHT** button selects the gain amount. More lit LEDs = higher gain/increased system sensitivity.
3. Press **ENTER** = gain setting stored.

NOTE: The calibration process (page 33) optimizes gain. We strongly recommend keeping the default gain setting. However when you are tuning in loud environments, decreasing the gain temporarily and/or tuning in Single-String Tuning mode can improve performance.

A GUITAR TYPE

Set up the TronicalTune PLUS for electric or acoustic guitar

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **YELLOW D**.
2. Press **ENTER**. Press the **LEFT/RIGHT** button to select the **YELLOW A** string LED. Press **ENTER**.
3. The **LEFT/RIGHT** button selects **E** for electric, **A E** for acoustic, or **D A E** for short scale guitars.
4. Press **ENTER** = guitar type setting stored.

D PITCH WINDOW

If you try to use Multi-String Tuning mode but a string is considerably out of tune, the TronicalTune PLUS switches to Single-String Tuning mode automatically. This function sets how far off-pitch a string must be before the TronicalTune PLUS switches to Single-String Tuning mode.

1. When the TronicalTune PLUS is switched off, press **ON** three times.
 2. Press the **LEFT/RIGHT** button to select **YELLOW D**. Press **ENTER**.
 3. Press the **LEFT/RIGHT** button to select **YELLOW D**. Press **ENTER**.
 4. The **LEFT/RIGHT** button selects the pitch window.
- | | | |
|--------------|---|-----------|
| 1 lit LED | = | 150 cents |
| 2 lit LEDs | = | 100 cents |
| 3 lit LEDs | = | 75 cents |
| 4 lit LEDs | = | 50 cents |
| 5 lit LEDs | = | 35 cents |
| all LEDs lit | = | 25 cents |
5. Press **ENTER** = pitch window setting stored.



Advanced Software Functions

Yellow Category

G ACTIVATE LOW TUNINGS AND/OR ADDITIONAL USER TUNING PRESET BANKS

Unlocks three additional tuning preset banks (White, Yellow, and Magenta).

This function activates three additional tuning preset banks. The **WHITE** and **YELLOW** banks default to write-protected presets for music with low tunings (heavier gauge strings are necessary for low tunings). The **MAGENTA** bank, like the **BLUE** bank, defaults to be write-enabled for storing user tuning presets.

However, you can also convert any of these tuning preset banks to store presets. See Block/Unblock Banks for Custom Tunings (**BLUE** category) on page 42 for details.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **YELLOW D**.
2. Press **ENTER**. Press the **LEFT/RIGHT** button to select the **YELLOW G** LED. Press **ENTER**.
3. Use **LEFT/RIGHT** button to activate low tunings and additional preset banks (**e B G** LEDs flash **GREEN**) or to deactivate low tunings and additional preset banks (**D A E** LEDs flash **RED**).
4. Press **ENTER** = low tuning/additional banks settings stored.

B TUNING OFFSET MODE

(Permanent or Temporary)

The Global Tuning Offset (**WHITE CATEGORY**) is temporary and applies only until loading a new tuning preset. This function retains offset when changing tuning presets.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **YELLOW D**.
2. Press **ENTER**. Press the **LEFT/RIGHT** button to select the **YELLOW B** LED. Press **ENTER**.
3. The **LEFT/RIGHT** button selects the permanent tuning offset (**e B G** LEDs flash **GREEN**) or the temporary tuning offset (**D A E** LEDs flash **RED**).
4. Press **ENTER** = tuning offset mode setting stored.

Per-String Pitch Offset

Magenta Category

1. ENTER CATEGORY

Press **ON** three times. Use **LEFT/RIGHT** button to select **MAGENTA** category (**G**). Press **ENTER**.



2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** button to select a subcategory (**E-e**). Press **ENTER**.



Apply an offset to any string with individual pitch up/down to ± 12 cents (a cent is 1/100th of a semitone)

NOTE: Pitch Offset applies to the last completed tuning. Please choose, select and tune to a tuning preset before applying the per-string pitch offset. Pitch offset will remain applied to this tuning until you change its pitch offset, reset the bank or reset the system.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **MAGENTA G**. Press **ENTER**.
2. The **LEFT/RIGHT** button choose the **MAGENTA** LED for the string you want to offset. Press **ENTER**.
3. Press the **LEFT/RIGHT** button to change the string's pitch offset:
 - If no previous offset exists, all string LEDs flash **WHITE**. Each **LEFT** button press lights a **GREEN** LED and offsets the pitch by +1 cent (up to +6 cents). Continuing to press the **LEFT** button lights **YELLOW** LEDs. Each lit **YELLOW** LED offsets the pitch by another +1 cent (+7 to +12 cents maximum).
 - Each **RIGHT** button press lights a **RED** LED and offsets the pitch by -1 cent (up to -6 cents). Continuing to press the **RIGHT** button lights **MAGENTA** LEDs. Each lit **MAGENTA** LED offsets the pitch by another -1 cent (-7 to -12 cents maximum).
 - If an offset already exists, the TronicalTune PLUS displays the offset amount as described above. In this case **RIGHT** or **LEFT** button presses continue on from the existing offset. Example: If 12 **MAGENTA** LEDs are lit to indicate -12 cents of offset, pressing the **LEFT** button will turn off successive **MAGENTA** LEDs, then turn off successive **RED** LEDs, then start lighting **GREEN** LEDs.
4. Press **ENTER**. To offset additional strings, repeat steps 2- 4. Otherwise, press and hold the **ON/BACK/OFF** button to turn off the TronicalTune PLUS.

PLEASE NOTE: if you have a left-hand or reverse system the navigation step 3 will be vice versa.

Unlock Banks for Custom Tunings

Blue Category

1. ENTER CATEGORY

Press **ON** three times. Use **LEFT/RIGHT** button to select **BLUE** category (**B**). Press **ENTER**.



2. SELECT SUBCATEGORY

Use **LEFT/RIGHT** button to select a subcategory (**E-e**). Press **ENTER**.



CATEGORY FUNCTIONS

- E RED** Bank Activation
- A GREEN** Bank Activation
- D BLUE** Bank Activation
- G WHITE** Bank Activation
- B YELLOW** Bank Activation
- e MAGENTA** Bank Activation

TURN WRITE PROTECTION ON/OFF FOR ANY TUNING PRESET BANK

The **BLUE** bank defaults to a user tuning preset bank for custom tuning presets.

For low tunings, the **MAGENTA** bank (see **G ACTIVATE LOW TUNINGS** and/or **ADDITIONAL USER TUNING PRESET BANKS**) defaults to a user tuning preset bank for custom tunings (low tunings or otherwise).

The remaining banks contain factory tuning presets and are write-protected. However, any of the six banks can have the write protection turned off to store custom tunings, or turned on to prevent overwriting custom tunings.

1. When the TronicalTune PLUS is switched off, press **ON** three times. Press the **LEFT/RIGHT** button to select **BLUE B**.
2. Press **ENTER**. The **LEFT/RIGHT** button selects the **COLOR** of the bank to write-enable or write-protect. Press **ENTER**.
3. The **LEFT/RIGHT** button enables writing to the selected bank (**E B G** LEDs flash **GREEN**). Or write-protects the selected bank (**D A E** LEDs flash **RED**).
4. Press **ENTER**. **GREEN** or **RED** LEDs light sequentially to confirm your choice.
5. You can now save a custom tuning to any write-enabled bank.

NOTE: If a bank is blocked you will not be able to access it with the **UP/DOWN** buttons when saving a custom tuning (see page 27). However, the **BLUE** bank is a special case. When you create a custom tuning you are first given a chance to save it to the **BLUE** bank, regardless of whether it's blocked, so that even if all the other banks are blocked you can still save your tuning. However, as soon as you use the **UP/DOWN** buttons to select a different bank to save a custom tuning, the **BLUE** bank will no longer be available if it's blocked.

Capo Mode





Adding a capo often requires retuning a guitar. The TronicalTune PLUS can detect a **CAPO** in the range of the 1st to 6th fret, then tune while taking the capo position into account. Yes, this is amazing.

ENTER CAPO MODE

1. Capo Mode applies to the last completed tuning. Select and tune to a tuning preset before entering Capo Mode.
2. Once the TronicalTune PLUS has turned off attach your capo on the 1st to 6th fret.
3. Press **ON** twice. Press and hold the **LEFT** button. **GREEN** LEDs light sequentially = capo mode is active.
4. Press **ENTER** and strum to tune your guitar. The TronicalTune PLUS briefly indicates capo detection; the number of lit **YELLOW** LEDs indicates the capo's location. Example: Two lit **YELLOW** LEDs = capo is at second fret. Then tuning proceeds as usual.

NOTE: Whenever you tune in capo mode the TronicalTune PLUS first indicates **CAPO** location by the number of lit **YELLOW** LEDs.

5. If any string LEDs aren't **GREEN**, pluck those strings. The TronicalTune PLUS turns off automatically once tuning is complete.

EXIT CAPO MODE: TWO OPTIONS

- Remove the capo. Next time you tune, as soon as you strum the TronicalTune PLUS will detect that there is no capo, **RED** LEDs will flash sequentially to turn off Capo Mode, and the TronicalTune PLUS will confirm that there is no capo by flashing shortly all **BLUE** LEDs. Continue with tuning.
- If you don't want to re-tune after removing the capo, make sure the TronicalTune PLUS is off and follow steps 3 and 4 above. **RED** LEDs will light sequentially instead of **GREEN** ones to indicate that Capo Mode is no longer active. Press and hold **ON** to turn off. Remove the capo.

Legal Information

GUIDELINES FOR SAFETY AND EFFICIENT USE

Read this information before using the TronicalTune PLUS.

PRODUCT CARE:

DO NOT expose your product to liquid or moisture or to humidity.

DO NOT expose your product to extreme high or low temperatures.

DO NOT expose your product to lit candles, cigarettes, or cigars, or to open flames etc.

DO NOT drop, throw or try to bend the product as rough treatment could damage it.

DO NOT attempt to disassemble your product. The product does not contain consumer serviceable or replaceable components. Only Tronical GmbH should perform service.

If you will not be using the product for a while, store it in a place that is dry, free from damp, dust and extreme temperatures.

DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT:



This symbol on the product indicates that the product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. Recycling will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

POWER SUPPLY

Connect the AC power adapter only to designated power sources as marked on the product. To reduce risk of damage to electric cord remove it from the outlet by holding onto the AC adapter rather than the cord.

To reduce risk of electric shock unplug the unit from any power source before attempting to clean it.

The AC power adapter must not be used outdoors or in damp areas. **DANGER** - Never alter the AC cord or plug. If the plug will not fit into the outlet or has a proper outlet installed by a qualified electrician contact your reseller. Improper connection can result in risk of electric shock.

CHILDREN:

DO NOT allow children to play with Tronical Tune since it contains small parts that could be detached by improper handling and create a choking hazard.

BATTERY INFORMATION:

A rechargeable battery has long service life if treated properly. A new battery or one that has not been used for a long period of time could have reduced capacity the first few times it is used. Do not expose the battery to extreme temperatures, never above +55° C (+131° F). For maximum battery capacity use the battery in room temperature. If the battery is used in low temperatures, the battery capacity will be reduced. The battery can only be charged in temperatures between +10°C (+50° F) and +45° C (+113° F).

RECYCLING THE BATTERY:

The battery in your Tronical Tune must be disposed of properly and should never be placed in municipal waste.

BATTERY CAUTION:

- 1. DO NOT CONNECT IMPROPERLY.**
- 2. DO NOT DISPOSE OF IN FIRE OR EXPOSE TO HEAT.**
- 3. DO NOT CRUSH, PUNCTURE, INCINERATE OR SHORT CIRCUIT EXTERNAL CONTACTS.**





Tronical
COMPONENTS

Tronical Components GmbH • Heselstuecken 18 • 22453 Hamburg • Germany
info@tronical.com • www.tronical.com

© Copyright 2014 Tronical-Components GmbH
All rights reserved.