




STAIRVILLE

Crown FX PAR 77
LED spotlight

Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
Internet: www.thomann.de

15.02.2022, ID: 416120 (V2)

Table of contents

1	General information	5
	1.1 Further information.....	6
	1.2 Notational conventions.....	7
	1.3 Symbols and signal words.....	7
2	Safety instructions	10
3	Features	14
4	Installation	15
5	Connections and operating elements	20
6	Operating	23
	6.1 Operating on the unit.....	23
	6.2 Remote control functions.....	28
	6.3 Menu overview.....	31
	6.4 Functions in 2-channel DMX mode.....	32
	6.5 Functions in 6-channel DMX mode.....	35
	6.6 Functions in 9-channel DMX mode.....	36

	6.7 Functions in 22-channel DMX mode.....	38
7	Technical specifications.....	44
8	Cleaning.....	47
9	Protecting the environment.....	48

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under www.thomann.de.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – dangerous optical radiation.

Warning signs	Type of danger
	<p>Warning – suspended load.</p>
	<p>Warning – danger zone.</p>

2 Safety instructions

Intended use

This device is intended for use as an electronic lighting effect by means of LED technology. The device is designed for professional use only and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Extend the operating life of the device by regular breaks and by avoiding frequent switching on and off. The device is not suitable for continuous operation.

Safety**DANGER!****Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.

**DANGER!****Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device if covers, protectors or optical components are missing or damaged.

**DANGER!****Electric shock caused by short-circuit**

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.

**WARNING!****Eye damage caused by high light intensity**

Never look directly into the light source.



WARNING!

Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations. Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures). Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user. Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



NOTICE!

Fire hazard due to exceedance of the maximum current



The device can power other devices of identical construction. The current consumption of all other devices connected in series must not exceed the values indicated in the technical specifications. Otherwise you risk injuries and irreparable damages to the device. Only connect so many identical devices that the maximum current consumption is not exceeded. Ensure the sufficient dimensioning (wire cross section) of the power cables used for all devices connected in series.



NOTICE!

Possible damage due to installation of a wrong fuse



The use of different types of fuses can cause serious damage to the unit. Fire hazard! Only fuses of the same type may be used.

3 Features

LED spotlight with stroboscope and pixel effect ring.

- 9 × RGBUV LEDs (4 W), grouped into three zones
- 1 × RGB COB LED (30 W)
- 21 × stroboscope LEDs (0.5 W)
- Control via DMX (four modes), the supplied remote control and via buttons and display on the unit
- 17 preprogrammed automatic shows
- Sound control
- Master / Slave operation

For technological reasons, the light output of LEDs decreases over their lifetime. This effect increases with higher operating temperature. You can extend the service life of the illuminants by providing adequate ventilation and operating the LEDs with the lowest possible brightness.

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



WARNING!

Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



NOTICE!

Risk of overheating

The distance between light output and the illuminated surface must be more than 1.5 m (19.7in).

Provide sufficient ventilation.

The ambient temperature must always be below 40 °C (104 °F).



NOTICE!

Use of stands

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.

**NOTICE!****Possible data transmission errors**

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

Mounting options

You can install the unit in hanging or standing position. When in use, the device must always be attached to a solid surface or an approved truss. Use the openings provided on the two-piece bracket for attaching.


Always work from a stable platform whenever installing, moving or servicing the unit. In doing so, the area underneath the unit must be cordoned off.

The safety cable must be threaded through the safety eyelet.

Infrared sensor for the remote control

The infrared receiver is located near the main LED on the front panel of the device. Make sure it's not obstructed.

Inserting the battery into the remote control

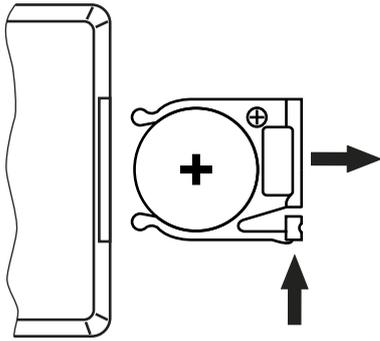

Press the lock of the battery holder to the centre of the housing and pull out the battery holder like a drawer. Insert the battery. The battery is correct if the positive pole points to the housing base of the remote control. Slide the battery holder back into the remote until it clicks into place.

When shipping, the battery is already installed in the remote and protected against discharge by a transparent plastic foil. Remove the plastic foil prior to first use.



NOTICE!

Possible damage by leaking batteries

Leaking batteries can cause permanent damage to the device.

Take batteries out of the device if it is not going to be used for a longer period.





NOTICE!

Risk of fire due to incorrect polarity

Incorrectly inserted batteries may destroy the device or the batteries.

Ensure that proper polarity is observed when inserting batteries.

5 Connections and operating elements

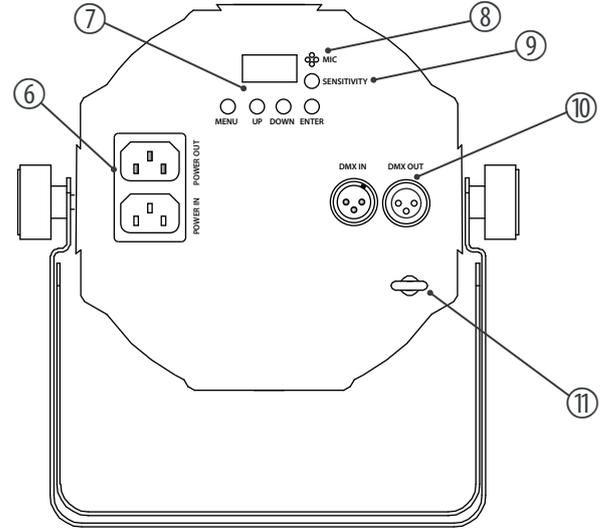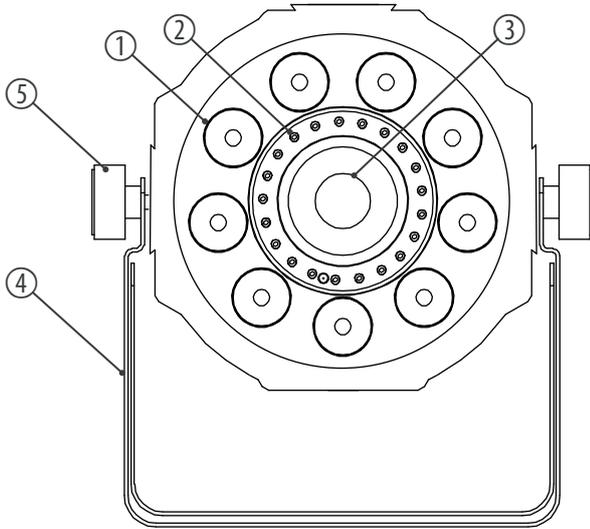

1	9 × RGBUV LEDs, grouped into three zones.
2	21 × stroboscope LEDs.
3	1 × RGB COB LED.
4	Mounting bracket.
5	Locking screws for the mounting bracket.
6	<p><i>[POWER OUT]</i> IEC chassis socket to power another device with mains voltage.</p> <p><i>[POWER IN]</i> IEC chassis plug for operating voltage supply, with fuse holder.</p>
7	<p>Display and control buttons:</p> <p><i>[MENU]</i>: Activates the main menu and toggles between menu items.</p> <p><i>[UP]</i>: Increases the displayed value by one.</p> <p><i>[DOWN]</i>: Decreases the displayed value by one.</p> <p><i>[ENTER]</i>: Selects an option of the respective operating mode.</p>

8	<i>[MIC]</i> Built-in microphone for sound-controlled operation.
9	<i>[SENSITIVITY]</i> Control to adjust the sensitivity of the built-in microphone.
10	<i>[DMX IN]</i> : DMX input socket <i>[DMX OUT]</i> : DMX output socket
11	Safety cable eyelet.

6 Operating

6.1 Operating on the unit

Connect the device to the power supply to start operation. All functions of the device are controlled via the buttons and display on the unit as well as the supplied remote control.

Press *[MENU]* to open the main menu. Use *[UP]* and *[DOWN]* to select a submenu or to change the respectively indicated value. When the display shows the desired value press *[ENTER]*.

Operating mode 'Automatic'

In automatic mode, you can call up one of 17 automatic shows. This setting is only relevant if the device is not controlled via DMX.

Press *[MENU]* repeatedly until the display shows 'Aut'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* one of 17 LED shows 'P01' ... 'P17'. Confirm with *[ENTER]*. The display shows 'Sxx'. Use *[UP]* or *[DOWN]* to set the programme speed in a range from 'S01' (slow) to 'S99' (fast). Confirm again with *[ENTER]* to apply the setting.

Operating mode 'Sound'

In sound-controlled mode, you have the option to select one of 13 colour LED shows. This setting is only relevant if the device is not controlled via DMX. The programme control is based on the signals received via the built-in microphone. The sensitivity of the built-in microphone is set manually via the controller on the device.

Press *[MENU]* repeatedly until the display shows 'Sou'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to select one of the colour LED shows 'S01' ... 'S12'. Confirm with *[ENTER]* to apply the setting.

Constant colour pattern

In this mode, you can manually set a constant colour pattern for all LEDs. This setting is only relevant if the device is not controlled via DMX.

Press *[MENU]* repeatedly until the display shows 'CoLo'.

Use *[UP]* or *[DOWN]* to select the submenu 'r.xxx'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to adjust the intensity of the colour red for all LEDs in a range from 'r.000' ... 'r.255'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the submenu 'G.xxx'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to adjust the intensity of the colour green for all LEDs in a range from 'G.000' ... 'G.255'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the submenu 'b.xxx'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to adjust the intensity of the colour blue for all LEDs in a range from 'b.000' ... 'b.255'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the submenu 'U.xxx'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to adjust the intensity of the colour white for all LEDs in a range from 'U.000' ... 'U.255'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the submenu 'S.xxx'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to set the flash frequency for the stroboscope effect in a range from 'S.001' (slow) to 'S.099' (fast). Confirm again with *[ENTER]* to apply the setting.

DMX mode

This setting is only relevant when the device is controlled via DMX.

Press *[MENU]* repeatedly until the display shows 'dMH'. Confirm with *[ENTER]* and use *[UP]* or *[DOWN]* to select the desired DMX mode.

Mode	Display	Highest possible DMX address
2-channel	'02Ch'	511
6-channel	'06Ch'	507
9-channel	'09Ch'	504
22-channel	'22Ch'	491

Confirm with *[ENTER]*. Now you can set the number of the first DMX channel to be used by the device (DMX address). Use *[UP]* and *[DOWN]* to select a value between 'd001' ... 'd511' and confirm with *[ENTER]*.

Operating mode 'Slave'

This setting is only relevant if the device is working as Slave in a Master / Slave configuration and is not controlled via DMX.

Press *[MENU]* repeatedly until the display shows 'SLA'. Press *[ENTER]* to enable the Slave mode.

Power saving mode

In this menu, you have the option to enable the power saving mode.

Press *[MENU]* repeatedly until the display shows 'SyS'. Use *[UP]* or *[DOWN]* to select the option 'LEds'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the option 'oN' to enable the power saving mode, or 'oFF' to disable the mode. Confirm with *[ENTER]* to apply the setting.

Inverting the Display by 180°

In this menu, you have the option to rotate the Display by 180°. This makes it easier to read the display when the unit is installed overhead.

Press *[MENU]* repeatedly until the display shows 'SyS'. Use *[UP]* or *[DOWN]* to select the option 'LEdr'. Confirm with *[ENTER]*.

Use *[UP]* or *[DOWN]* to select the option 'ON' to rotate the display by 180°, or 'OFF' for normal display. Confirm with *[ENTER]* to apply the setting.

Reset to factory defaults


Proceed as follows to reset the device to factory defaults:

Press *[MENU]* repeatedly until the display shows 'Sys'. Use *[UP]* or *[DOWN]* to select the option 'rEST'.

Confirm with *[ENTER]* to reset the device to the factory default settings.

6.2 Remote control functions


The unit functions can be controlled by the included remote control. To use the remote control, point its infrared diode at the infrared sensor on the unit and press the desired buttons.

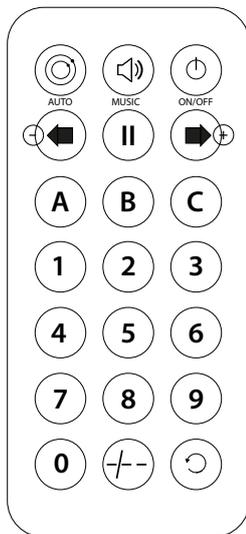

Button labelling:	Function
[AUTO]	Enable / disable the automatic mode, selecting programme P01 ... P17.
[MUSIC]	Enable / disable the sound-controlled mode, selecting S01 ... S13.
[ON/OFF]	Blackout
[-]	Selecting fixed colour C01 ... C23.
[II]	Pause button
[+]	Selecting fixed colour C01 ... C23.
[A]	No function.
[B]	No function.
[C]	No function.
[0] ... [9]	Selecting programme speed (0 = slow, 9 = fast)

Button labelling:	Function
<i>[-/--]</i>	No function.
Arrow button	Button to switch between auto and sound-controlled mode.

6.3 Menu overview

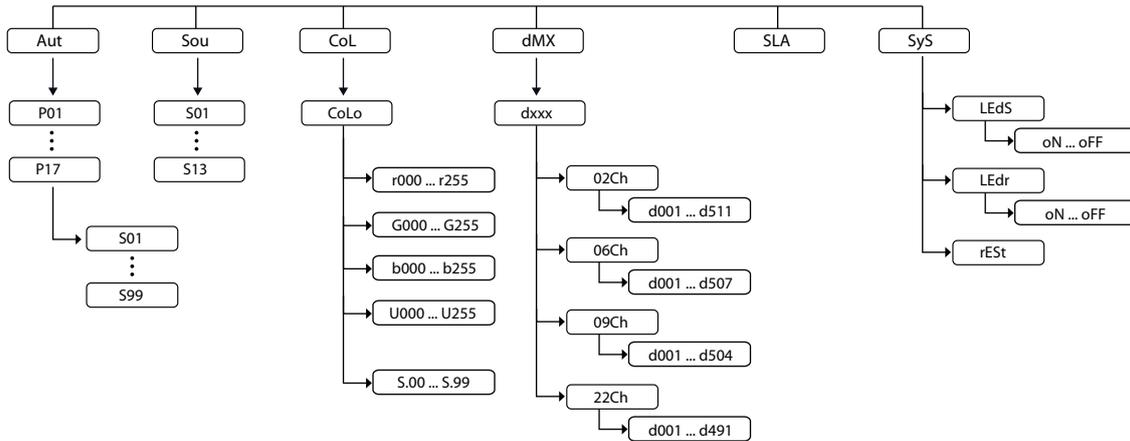

6.4 Functions in 2-channel DMX mode

Channel	Value	Function
1	0 ... 5	all LEDs off
	6 ... 19	Auto programme 1, if channel 2 = 0 ... 250 Sound programme 1, if channel 2 = 251 ... 255
	20 ... 34	Auto programme 2, if channel 2 = 0 ... 250 Sound programme 2, if channel 2 = 251 ... 255
	35 ... 48	Auto programme 3, if channel 2 = 0 ... 250 Sound programme 3, if channel 2 = 251 ... 255
	49 ... 63	Auto programme 4, if channel 2 = 0 ... 250 Sound programme 4, if channel 2 = 251 ... 255
	64 ... 77	Auto programme 5, if channel 2 = 0 ... 250 Sound programme 5, if channel 2 = 251 ... 255

Channel	Value	Function
	78 ... 92	Auto programme 6, if channel 2 = 0 ... 250 Sound programme 6, if channel 2 = 251 ... 255
	93 ... 106	Auto programme 7, if channel 2 = 0 ... 250 Sound programme 7, if channel 2 = 251 ... 255
	107 ... 121	Auto programme 8, if channel 2 = 0 ... 250 Sound programme 8, if channel 2 = 251 ... 255
	122 ... 135	Auto programme 9, if channel 2 = 0 ... 250 Sound programme 9, if channel 2 = 251 ... 255
	136 ... 150	Auto programme 10, if channel 2 = 0 ... 250 Sound programme 10, if channel 2 = 251 ... 255
	151 ... 164	Auto programme 11, if channel 2 = 0 ... 250 Sound programme 11, if channel 2 = 251 ... 255

Channel	Value	Function
	165 ... 179	Auto programme 12, if channel 2 = 0 ... 250 Sound programme 12, if channel 2 = 251 ... 255
	180 ... 193	Auto programme 13, if channel 2 = 0 ... 250 Sound programme 13, if channel 2 = 251 ... 255
	194 ... 208	Auto programme 14, if channel 2 = 0 ... 250 Sound programme 13, if channel 2 = 251 ... 255
	209 ... 222	Auto programme 15, if channel 2 = 0 ... 250 Sound programme 13, if channel 2 = 251 ... 255
	223 ... 237	Auto programme 16, if channel 2 = 0 ... 250 Sound programme 13, if channel 2 = 251 ... 255
	238 ... 255	Auto programme 17, if channel 2 = 0 ... 250 Sound programme 13, if channel 2 = 251 ... 255

Channel	Value	Function
2	0 ... 250	Programme speed increasing
	251 ... 255	Sound-controlled mode, specifies the auto programme / sound programme setting for channel 1.

6.5 Functions in 6-channel DMX mode

Channel	Value	Function
1	0 ... 255	Intensity red (0 % to 100 %), PAR and COB LEDs
2	0 ... 255	Intensity green (0 % to 100 %), PAR and COB LEDs
3	0 ... 255	Intensity blue (0 % to 100 %), PAR and COB LEDs
4	0 ... 255	Intensity UV (0 % to 100 %), PAR and COB LEDs
5	0 ... 5	Strobe effect off
	6 ... 250	Strobe effect, increasing speed, all colour LEDs

Channel	Value	Function
	251 ... 255	Strobe effect sound mode, all colour LEDs
6	0 ... 5	No function
	6 ... 20	Strobe LED ring constantly on
	21 ... 250	Strobe effect, increasing speed, strobe LED ring
	251 ... 255	Strobe effect sound mode, strobe LED ring

6.6 Functions in 9-channel DMX mode

Channel	Value	Function
1	0 ... 255	Intensity red (0 % to 100 %), PAR LEDs
2	0 ... 255	Intensity green (0 % to 100 %), PAR LEDs
3	0 ... 255	Intensity blue (0 % to 100 %), PAR LEDs

Channel	Value	Function
4	0 ... 255	Intensity UV (0 % to 100 %), PAR LEDs
5	0 ... 255	Intensity red (0 % to 100 %), COB LED
6	0 ... 255	Intensity green (0 % to 100 %), COB LED
7	0 ... 255	Intensity blue (0 % to 100 %), COB LED
8	0 ... 5	Strobe effect off
	6 ... 250	Strobe effect, increasing speed, all colour LEDs
	251 ... 255	Strobe effect sound mode, all colour LEDs
9	0 ... 5	No function
	6 ... 20	Strobe LED ring constantly on
	21 ... 250	Strobe effect, increasing speed, strobe LED ring
	251 ... 255	Strobe effect sound mode, strobe LED ring

6.7 Functions in 22-channel DMX mode

Channel	Value	Function
1	0 ... 255	Intensity red (0 % to 100 %), PAR LEDs zone 1
2	0 ... 255	Intensity green (0 % to 100 %), PAR LEDs zone 1
3	0 ... 255	Intensity blue (0 % to 100 %), PAR LEDs zone 1
4	0 ... 255	Intensity UV (0 % to 100 %), PAR LEDs zone 1
5	0 ... 5	Strobe effect off, zone 1
	6 ... 250	Strobe effect, increasing speed, zone 1
	251 ... 255	Strobe effect sound mode, zone 1
6	0 ... 255	Intensity red (0 % to 100 %), PAR LEDs zone 2
7	0 ... 255	Intensity green (0 % to 100 %), PAR LEDs zone 2
8	0 ... 255	Intensity blue (0 % to 100 %), PAR LEDs zone 2
9	0 ... 255	Intensity UV (0 % to 100 %), PAR LEDs zone 2

Channel	Value	Function
10	0 ... 5	Strobe effect off, zone 2
	6 ... 250	Strobe effect, increasing speed, zone 2
	251 ... 255	Strobe effect sound mode, zone 2
11	0 ... 255	Intensity red (0 % to 100 %), PAR LEDs zone 3
12	0 ... 255	Intensity green (0 % to 100 %), PAR LEDs zone 3
13	0 ... 255	Intensity blue (0 % to 100 %), PAR LEDs zone 3
14	0 ... 255	Intensity UV (0 % to 100 %), PAR LEDs zone 3
15	0 ... 5	Strobe effect off, zone 3
	6 ... 250	Strobe effect, increasing speed, zone 3
	251 ... 255	Strobe effect sound mode, zone 3
16	0 ... 255	Intensity red (0 % to 100 %), COB LED
17	0 ... 255	Intensity green (0 % to 100 %), COB LED
18	0 ... 255	Intensity blue (0 % to 100 %), COB LED



Channel	Value	Function
19	0 ... 5	Strobe effect off
	6 ... 250	Strobe effect, increasing speed, COB LED
	251 ... 255	Strobe effect sound mode, COB LED
20	0 ... 5	No function
	6 ... 20	Strobe LED ring constantly on
	21 ... 250	Strobe effect, increasing speed, strobe LED ring
	251 ... 255	Strobe effect sound mode, strobe LED ring
21	0 ... 5	all LEDs off
	6 ... 19	Auto programme 1, if channel 22 = 0 ... 250 Sound programme 1, if channel 22 = 251 ... 255
	20 ... 34	Auto programme 2, if channel 22 = 0 ... 250 Sound programme 2, if channel 22 = 251 ... 255

Channel	Value	Function
	35 ... 48	Auto programme 3, if channel 22 = 0 ... 250 Sound programme 3, if channel 22 = 251 ... 255
	49 ... 63	Auto programme 4, if channel 22 = 0 ... 250 Sound programme 4, if channel 22 = 251 ... 255
	64 ... 77	Auto programme 5, if channel 22 = 0 ... 250 Sound programme 5, if channel 22 = 251 ... 255
	78 ... 92	Auto programme 6, if channel 22 = 0 ... 250 Sound programme 6, if channel 22 = 251 ... 255
	93 ... 106	Auto programme 7, if channel 22 = 0 ... 250 Sound programme 7, if channel 22 = 251 ... 255
	107 ... 121	Auto programme 8, if channel 22 = 0 ... 250 Sound programme 8, if channel 22 = 251 ... 255

Channel	Value	Function
	122 ... 135	Auto programme 9, if channel 22 = 0 ... 250 Sound programme 9, if channel 22 = 251 ... 255
	136 ... 150	Auto programme 10, if channel 22 = 0 ... 250 Sound programme 10, if channel 22 = 251 ... 255
	151 ... 164	Auto programme 11, if channel 22 = 0 ... 250 Sound programme 11, if channel 22 = 251 ... 255
	165 ... 179	Auto programme 12, if channel 22 = 0 ... 250 Sound programme 12, if channel 22 = 251 ... 255
	180 ... 193	Auto programme 13, if channel 22 = 0 ... 250 Sound programme 13, if channel 22 = 251 ... 255
	194 ... 208	Auto programme 14, if channel 22 = 0 ... 250 Sound programme 13, if channel 22 = 251 ... 255

Channel	Value	Function
	209 ... 222	Auto programme 15, if channel 22 = 0 ... 250 Sound programme 13, if channel 22 = 251 ... 255
	223 ... 237	Auto programme 16, if channel 22 = 0 ... 250 Sound programme 13, if channel 22 = 251 ... 255
	238 ... 255	Auto programme 17, if channel 22 = 0 ... 250 Sound programme 13, if channel 22 = 251 ... 255
22	0 ... 250	Programme speed increasing
	251 ... 255	Sound-controlled mode, specifies the auto programme / sound programme setting for channel 21.

7 Technical specifications

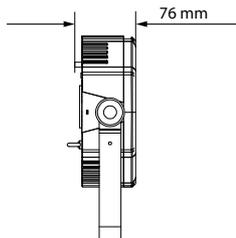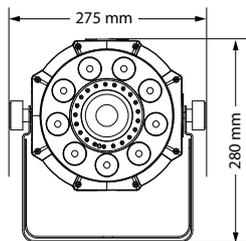

Light source	9 × RGBUV LEDs (4 W), grouped into three zones 1 × RGB COB LED (30 W) 21 × stroboscope LEDs (0.5 W)	
Optical properties	Beam angle	40°
Control	DMX, infrared remote control, buttons and display on the device	
Number of DMX channels	2, 6, 9 or 22	
Input connections	Power supply	IEC chassis plug C14
	DMX control	XLR chassis socket, 3-pin
Output connections	Power supply of further devices	IEC chassis plug C13
	DMX control	XLR chassis socket, 3-pin
Power consumption	78 W	

Supply voltage	100 - 240 V ~ 50/60 Hz	
Battery remote control	Lithium-ions button cell CR2025, 3 V	
Fuse	5 mm × 20 mm, 1,6 A, 250 V, slow-blow	
Degree of protection	IP20	
Mounting options	Hanging, standing	
Dimensions (W × H × D)	275 mm × 280 mm × 76 mm	
Weight	Approx. 1.7 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20 %...80 % (non-condensing)

Further information

Similar design	Combined device
DMX control	Yes
Master/Slave	Yes
Remote control	included
Sound control	Yes
Display	Yes

8 Cleaning

Device components

Clean the device components that are accessible from the outside regularly. The cleaning frequency depends on the operating environment: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the device components.

- Clean with a dry soft cloth.
- Stubborn dirt can be removed with a slightly dampened cloth.
- Never use solvents or alcohol for cleaning.

9 Protecting the environment

Disposal of the packaging material



For the packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of batteries



Batteries must not be thrown away or incinerated; they must be disposed of in accordance with local regulations for the disposal of hazardous waste. Use the existing collection points for this.

Only dispose of lithium batteries when they are discharged. Remove replaceable lithium batteries from the device before disposal. Protect used lithium batteries against short circuits, for example by covering the poles with adhesive tape. Permanently built-in lithium batteries must be disposed of together with the device. Please inquire about an appropriate collection point.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · www.thomann.de