


# LiveWedge


Full HD Video Switcher  
with LiveStreaming & Apps

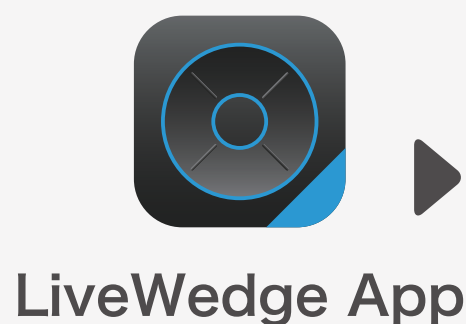

wedge.cerevo.com/app



“LiveWedge App”をご使用になるタブレットへ  
事前にインストールしてください。  
Download and install “LiveWedge App”  
into your tablet.

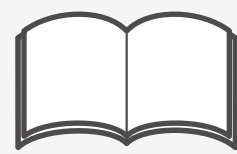

Online  
Manual

wedge.cerevo.com/doc





詳細な取扱説明書はオンラインマニュアルを  
参照ください。  
Detailed instructions are  
available online.

## Quick Setup Guide


### 1 Equipment setup

Connect your equipment as the image below.

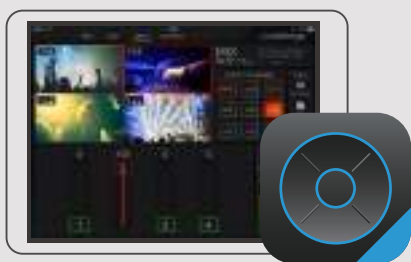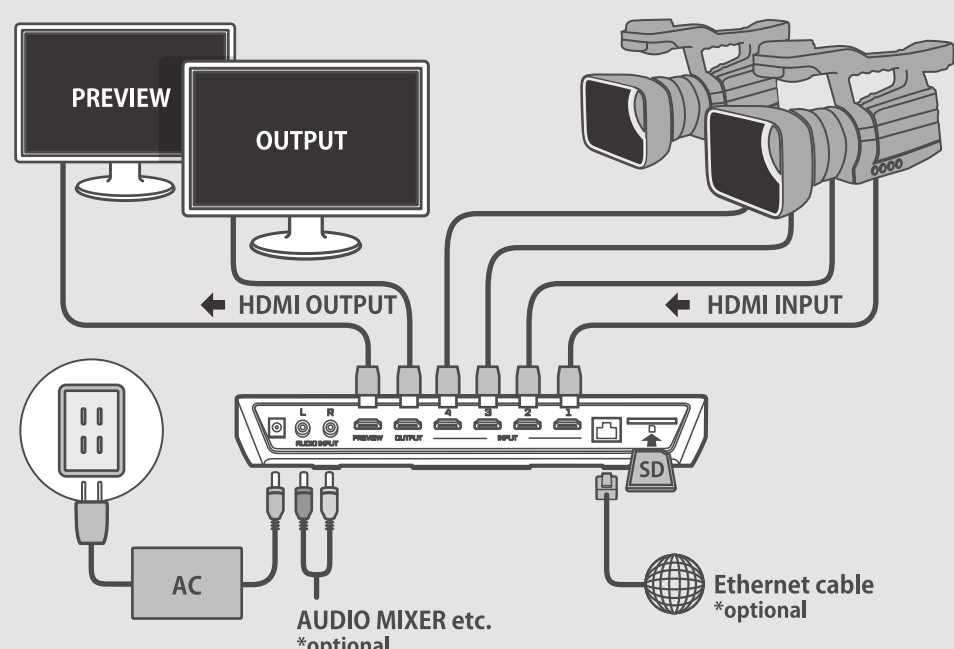

Install LiveWedge App into your tablet  
before initial setting.  
wedge.cerevo.com/app

### 2 Initial setting

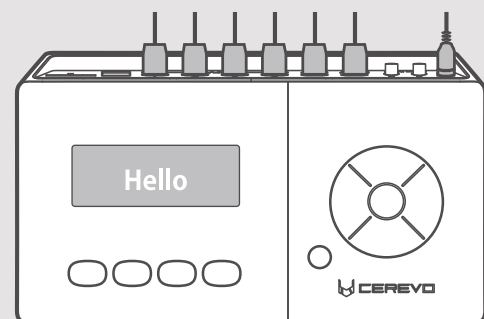

LiveWedge will turn on automatically  
when the ac adaptor is plugged.  
Follow the instructions on display  
and initialize it.

#### 1. Setting language



Turn the control wheel, choose your  
language and press OK button.

#### 2. Start or skip Wi-Fi AP setting





Configuration with a tablet

→Choose “Yes”, and proceed next step.

Configuration without a tablet

→Choose “no” and setup is completed.

#### 3. Setting AP

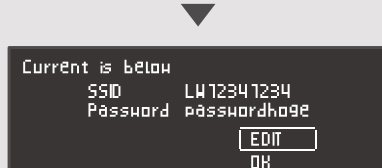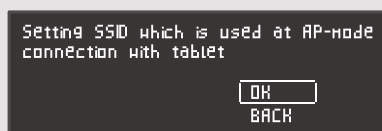

#### 4. Edit AP name and password



Setting SSID which is used at AP-mode  
connection between the tablet and LiveWedge.


If no change is required and you want to use  
the default configuration choose “Ok” and  
proceed to “5. Wi-Fi setting on Tablet”.

To change SSID and password, choose “EDIT”  
and proceed to “4. Edit text”.


Enter new SSID or password, press  
“CONFIRM (button 4)”.

#### How to enter text

When turn into text edit mode, the display show  
as above “4.”. To enter text, move focus to  
any character then press OK button.  
Transition button's functions turn into another.  
Button1: change character type  
Button2: delete  
Button4: confirm

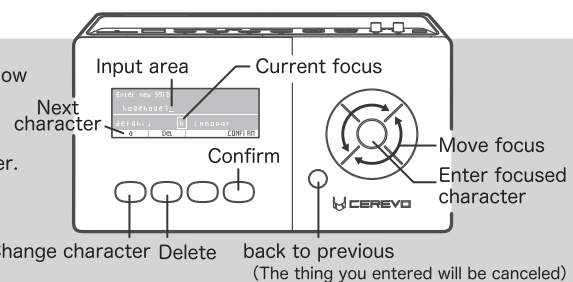

#### 5. WiFi setting on tablet

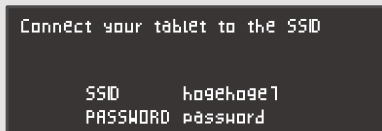


Connect your tablet to the SSID. Enter your  
tablet's Wi-Fi setting, and choose the SSID  
shown in display.



Choose the SSID shown in LiveWedge's display. Then enter  
the password that also shown in LiveWedge's display.


#### 6. Setting LiveWedge App

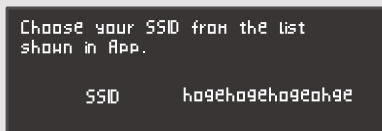

Start LiveWedge App. Choose  
your SSID when the App show  
a list of SSID.



#### 7. Setup is completed


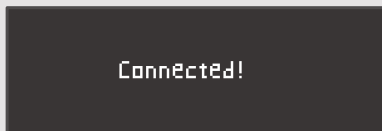


Setup is complete when you see  
the “Connected!” message on the screen.


日本語は裏面をご覧ください

### Overview of pictograms

#### Setting icons

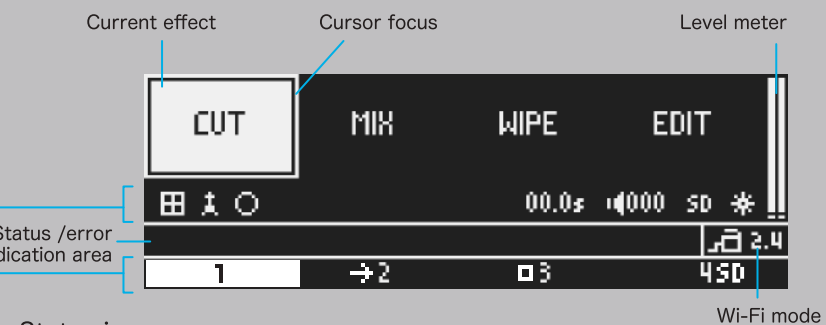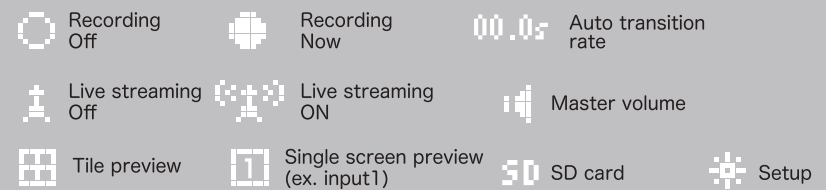


#### Status icons




### Overview of swicthing buttons


#### Press transition button once




#### Press same transition button twice (Press stand by input again)



#### Press transition button once, then move control wheel



#### Press transition button and OK button at the same time



#### Effects on iPad and LiveWedge body.

**CUT** : Switch to stand by input immediately

**MIX** : Switch to stand by input by fading

**WIPE** : Switch to stand by input via pattern

#### Effects on iPad only

**DIP** : Once turn into set input, then switch to stand by input by fading

**PinP** : Insert key input to current program out.  
While PinP, you can switch key input by cut or mix

**CHR** :Compose key input to current program out by chroma.  
While CHR, you can switch program out by cut or mix

**FTB** : Fade out

## Warranty

Cerevo LiveWedge's warranty obligations for this hardware product are limited to the terms set forth herein. Cerevo, as defined below, warrants this Cerevo-branded hardware product against defects in materials and workmanship under normal use for a period of ONE YEAR from the date of retail purchase by the original end-user purchaser (“Warranty Period”). However, this warranty does not apply:

- if there is no purchase date, name or signature from the agent on the warranty, or the contents specified on the warranty are altered. The purchase date can be verified by a valid receipt.
- to damage during transportation after the purchase.
- to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external causes.
- to damage caused by connection with other equipment.
- to consumable parts, such as batteries.
- to damage or trouble caused by use with non-Cerevo products.
- to damage caused by operating the product outside the permitted or intended uses described by Cerevo.
- to damage caused by service (including repairs and modifications) performed by anyone who is not a representative of Cerevo.
- to damage caused by exposing the product outside of the recommended environment.
- if the product is taken apart.

If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Cerevo will either:

- repair the hardware defect at no charge, using new or refurbished parts that are equivalent to new in performance and reliability
- exchange the product with a product that is new or refurbished that is equivalent to new in performance and reliability and is at least functionally equivalent to the original product
- refund the purchase price of the product.

To the extent permitted by law, this warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. As permitted by applicable law, Cerevo specifically disclaims any and all statutory or implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects. A replacement product or part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Cerevo's property. When a refund is given, the product for which the refund is provided must be returned to Cerevo and becomes Cerevo's property.

Cerevo does not warrant that the operation of the product will be uninterrupted or error-free. Cerevo is not responsible for damage arising from failure to follow instructions relating to the product's use.

**Important: Please do not open this hardware. Doing so voids your warranty.**

Except as provided in this warranty and to the extent permitted by law, Cerevo is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory.

If you would like to request warranty service, please contact us.

## Hardware Precautions

Use this product in an environment that has a temperature between 32°~ 104°F (0°~40°C) and a humidity between 10% ~90%. Do not use any other electrical adapters other than the provided. Doing so could damage the product or result in a fire. Use the adapter with surge protection only in electrical outlets supplying the electric currents specified on the adapter. Do not use this product in any location that is subjected to direct sunlight, water, humidity, fire, or high temperatures. Doing so could damage the product or result in electric shock.

FCC CAUTION Wi-Fi adapter's FCC ID: RYK-WUBR507N SparkLAN Communications, Inc. Model No. : WUBR507N

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

## Contact Information

Please review the online manual( <http://wedge.cerevo.com/doc> ) and FAQ( <http://wedge.cerevo.com/faq> ) before contacting us. We are only available through email. When you contact us, please provide 1. your name, 2. product name. Please note that we are not available weekend and japanese holidays.

Please contact our support team at [support-usa@cerevo.com](mailto:support-usa@cerevo.com)



# ！ Notice

本ガイドは、LiveWedgeとタブレットをAPモードにて接続するネットワーク環境についてのみ記載します。CLIENTモードでの接続、固定IP環境やライブ配信を行う場合等の利用についてはオンラインマニュアルを参照ください。

セットアップにはタブレット（※）が必要です。セットアップを開始するには、「LiveWedge App」をインストールして起動してください。

- ※対応しているタブレットは以下の条件を満たしている必要があります。（Android端末については対応予定）
- ・iOS 7.1.1以降のバージョンであること
  - ・iPad2以降の世代の製品であること

The Quick Setup Guide only covers network environment where LiveWedge and iPad are connected as AP-mode network. For CLIENT-mode connection, fixed IP network and Live Broadcasting, see online manual.


Tablet\* is required when setting up. To start setup, please install “LiveWedge App” into your tablet.

- \* Tablet requirements are below (Android OS will be supported in the future.)
- ・iOS 7.1.1 or later
  - ・iPad2 or later

## クイックセットアップガイド


### 1 機材のセッティング

以下の図を例に使用する機材を接続してください。

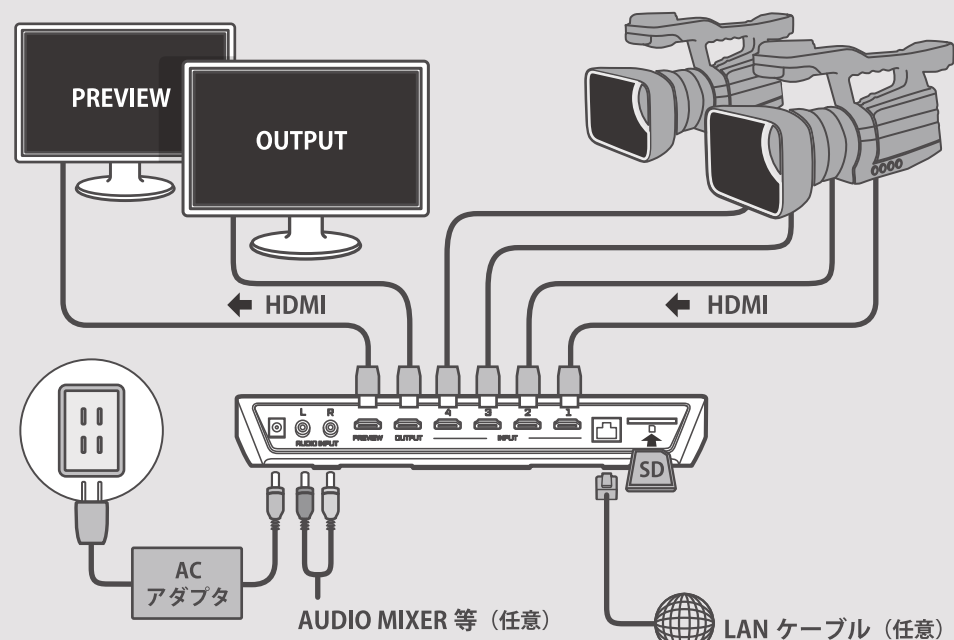

LiveWedge Appを使用する場合、事前にタブレットにアプリをインストールしてください。  
wedge.cerevo.com/app

### 2 本体の設定

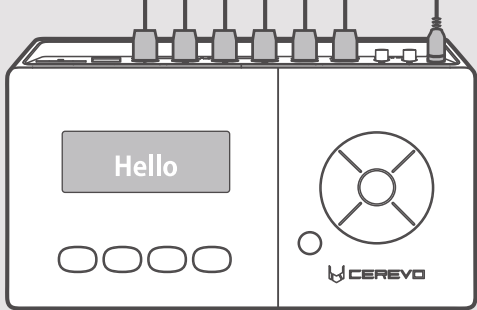


ACアダプタを接続すると電源が入ります。液晶画面の表示に従って初期設定を行ってください。

#### 1. 言語の設定



操作ホイールを回し、ご使用になる言語にカーソルを合わせ決定ボタンを押してください。


#### 2. アプリの使用

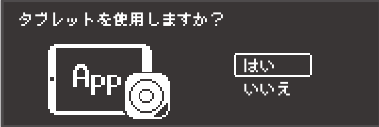

タブレットを使用してアプリから操作する  
→ 「はい」を選び設定へ進んでください。

タブレットを使用しない  
→ 「いいえ」を選ぶと本体の設定は終了です。

#### 3. AP接続の設定

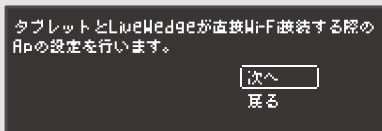


#### 4. AP名/パスワードの編集




#### 文字の入力方法について

文字編集モードへ入ると上記4.のような画面が表示されます。文字を入力するには操作ホイールを回して文字選択し、決定ボタンで選択した文字を入力します。文字編集時は切替ボタンが、それぞれ切替ボタン1:文字種切替、切替ボタン2:一文字削除、切替ボタン4:入力完了となります。

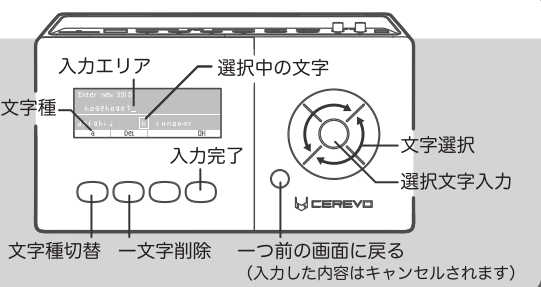

#### 5. タブレットのWi-Fi設定

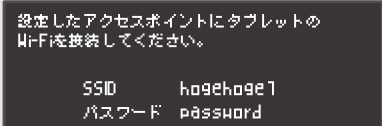


ご使用になるタブレットを設定したアクセスポイントに接続します。タブレットの設定項目からWi-Fi設定を開き、本機液晶画面に表示されているSSIDを選択してください。



本機液晶画面に表示されているSSIDと同じ名前のネットワークを選択します。パスワード入力欄には本機液晶画面に表示されているパスワードを入力してください。

#### 6. LiveWedge Appの設定

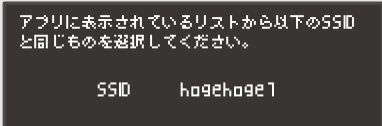


LiveWedge Appを起動します。アプリ画面中央にリストが表示されますので本機液晶画面に表示されているSSIDを選択してください



#### 7. 接続完了



左の画面に遷移すれば接続は成功です。本体の設定は以上で完了です。アプリに従ってチュートリアルを進めてください。

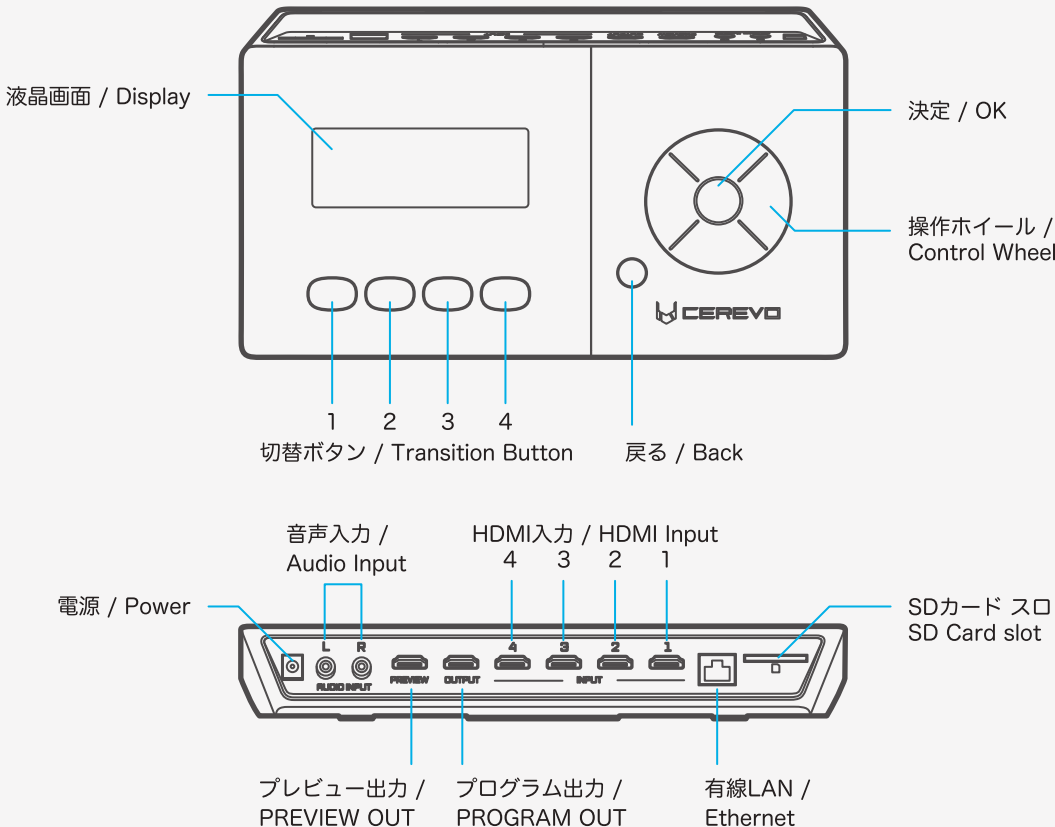


#### 箱に入っているもの

- ・LiveWedge 本体 x 1
- ・AC アダプタ x1
- ・ゴム足（天面用 x2）
- ・クイックセットアップガイド（本書）

#### What's in the box


- ・LiveWedge x 1
- ・AC adapter x 1
- ・Rubber Piece (for top x2)
- ・Quick Setup Guide

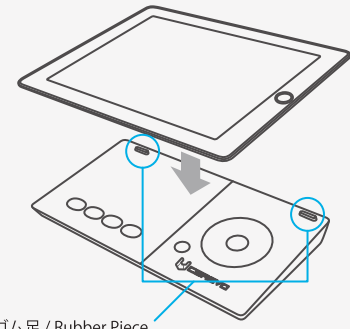

天面用ゴム足はタブレットを LiveWedge 本体に乗せる場合のすべり止めとして、必要に応じて取り付けてください。  
Please stik Rubber pieces as prevent slippage when you put your tablet on LiveWedge.

### English Version is on back side

#### ホーム画面の表示について

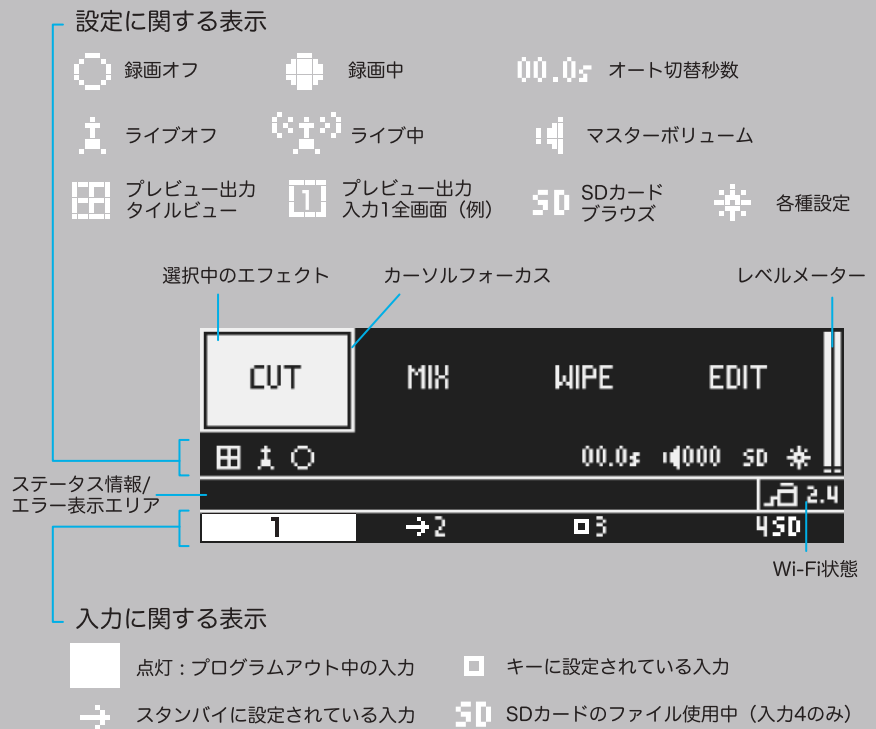

#### スイッチング操作について

- 切替ボタン1回押し  
CUT選択時は押した入力に瞬時に切り替わります。その他のエフェクト選択時は、押した入力がスタンバイ（プレビュー緑枠表示）になります。
- 切替ボタン2回押し(スタンバイ状態の切替ボタンを再度押す)  
設定されているエフェクト、RATE秒数でオート切替します。
- 切替ボタン1回押し後ホイール操作  
ホイール回転に応じて、設定されているエフェクトで切替します。（CUT選択中は使用不可）
- 切替ボタンと決定ボタン同時押し  
選択されているエフェクトに関わらず、カット切替が出来ます。ダイレクトカット。
- 本体/アプリで使用可能なエフェクト  
CUT : スタンバイ入力へ瞬時に切り替わります。  
MIX : スタンバイ入力へフェードで切り替わります。  
WIPE : 設定されたパターンで切り替わります。
- アプリでのみ使用可能なエフェクト  
DIP : 設定された入力へフェード後、スタンバイ入力へフェードで切り替わります。  
PinP : 現在のプログラムアウトにキー入力が小窓で挿入されます。PinP中は小窓をカットまたはミックスで切替できます。  
CHR : 現在のプログラムアウトにキーに設定した入力をクロマ合成します。CHR中は背景をカットまたはミックスで切替できます。  
FTB : フェードアウトします。

## 保証書

LiveWedge(以下、本機)についての保証は、本保証における条件に限定されるものとします。株式会社Cerevo(以下、弊社)は、以下に定める通り本機について通常の使用時において材質および製造上の瑕疵がないことを、最初のエンドユーザである購入者が販売店から購入した日より1年間(以下「保証期間」といいます)保証します。但し、本保証は、以下のいかなる場合においても適用がありません。

(a) 本保証書が無い場合 (b) 本保証書にご購入日、お名前、ご購入代理店印の記入がない場合、または字句が改ざんされている場合但し、ご購入日を証明できる領収書がある場合は除きます。(c) ご購入後の輸送、移動、落下による故障及び損傷 (d) 事故、乱用、誤使用、液体との接触、火事、地震または他の外的原因による損害 (e) 他の機器との接続に起因する故障・損傷 (f) 電池等の消耗品についての損害、不具合 (g) 特定の他社製品との相性問題 (h) 弊社が定め、許可し、意図した使用方法以外で製品を動作させたことにより生じる損害、動作不具合 (i) 弊社以外の者が行ったサービス(修理・改造等を含む)によって生じる損害、動作不具合 (j) 弊社が指定した動作環境以外での損害、動作不具合 (k) 本機を分解された場合

万一、ハードウェアに瑕疵があり、かつ有効な請求が保証期間内に弊社になされた場合、弊社は法律が認める限りにおいて以下のいずれかを行うことができます：

- (1) 新品の部品あるいは性能および信頼性において新品と同等の再生部品を使用して無償にて修理させていただきます
- (2) 新品の製品に交換するか、性能および信頼性において新品と同等の再生製品に交換させていただきます
- (3) 製品代金の返金をさせていただきます。

修理又は交換された本機は、製品保証の残存期間または交換/修理日より90日間のいずれか長い期間、お客様に対して保証されるものとします。製品または部品が交換された場合、新しい製品または部品がお客様の所有物となり、不具合製品または部品は弊社の所有物になるものとします。製品代金が返金される場合、返金対象製品は、弊社に返却されるものとします。

法によって最大限認められる範囲内において、ここに示した本保証およびその救済方法は、唯一の保証であり、口頭あるいは書面のいずれかを問わず、制定法上、明示あるいは黙示を問わず、その他の保証、救済、条件について代わるものです。適用される法律によって認められる場合、弊社は、特に一切の制定法上の、または黙示の保証をしないものとし、これには商品性、特定目的適合性、隠れたあるいは潜在的欠陥に対する黙示の保証をしないことを含むものですが、これに限るものではありません。

弊社は、製品の使用が中断されず、またはエラーなく動作することを保証しません。また製品の使用に関する指示に従わないことに起因する損害に対して責任を負いません。

**重要: 本機を開けないでください。開けると本保証の対象外となります。**

本保証で認められることを除き、法によって最大限認められる範囲内において、弊社は保証もしくは条件違反から生じる、いかなる法的理論に基づく直接、特別、間接、結果的損害に責任を負わないものとします。保証を受けるには、弊社サポート窓口までご連絡ください。

ご購入日 / 店名

## 取り扱いに関する注意事項・その他

本機は 0° ~ 40° C、湿度 10% ~ 90% で結露なき環境でお使いください。低温または高温によって機器が一時的に動作しなくなる場合があります。  
・ACアダプタは必ず本製品付属のものをお使いください。本製品付属以外のACアダプタを使うと、故障、発煙、発火の恐れがあります。  
・直射日光が当たる場所、水がかかる場所、火気の周辺、熱気がこもるところでの使用はおやめください。故障や変形、感電の恐れがあります。

## お問い合わせ先

お問い合わせの前に、オンラインマニュアル(<http://wedge.cerevo.com/doc>)及びFAQ(<http://wedge.cerevo.com/faq>)を確認ください。その上で、1. 氏名 2. 製品名を添えてメールにてご連絡ください。土日祝日は返信対応業務を行っておりません。また、電話での受付は行っておりませんので、ご了承ください。

サポート窓口 Eメール宛先 [support@cerevo.com](mailto:support@cerevo.com)